

INSTALLATION INSTRUCTIONS FOR THE CLUTCH COVER BAG(300159-1)

You will need the following tools: Drill 3/16 inch drill bit Pop rivet gun with 3/16 inch dye

IMPORTANT: Read all the instructions first before proceeding.

- 1. **PREPARING YOUR CLUTCH COVER**: Remove the belt clip(s) on the clutch cover for making required space to fix the bag.
- 2. **DETERMINING THE POSITION OF THE BAG**: Take your spare drive belt and wrap it around the bag. Hold it in place with the four Velcro stitched on the four corners of the bag. Then put the bag on top of the clutch cover and close the snowmobile hood. If you cannot close the hood, move the bag forward or backward on the clutch cover, and try to close the hood again, until you find the exact position where to install the bag. Keep the bag as far as possible from the engine block. If the space is not sufficient under the hood, on some machines, you might have to place the spare drive belt in the back of the seat, instead of placing it around the bag.
- 3. **MOUNTING THE BAG IN PLACE**: Now that you know exactly where the bag will be placed, take the plastic piece enclosed with the mounting hardware. Place that plastic piece inside the bag, where you want to fix the rivet. Then drill through the plastic piece, the bag and clutch cover. Remove the plastic piece and rivet the hole. Then do the same with the second suitable location in the bag to fix the second rivet.

IMPORTANT—When installing the bag , you might have covered up some warning stickers from the snowmobile maker .If this happens , remove the stickers from the machine and stick on the top of the clutch cover where it would be highly visible .Remember – **NEVER RUN YOUR SNOWMOBILE ENGINE IF THE CLUTCH COVER IS NOT PROPERLY CLOSED.**

If you intend to place an oil bottle in this bag , take necessary precautions to prevent leakage (for example – electrical tape wrapped around the bottle cap , placing the bottle in a plastic bag.)



GEARS WARRANTY INFORMATION

Gears products are warranted to the original purchaser to be free of manufacturing and material defects for 12 months. This warranty however does not extend to ancillary parts such as rain covers, bungee cords, buckles and rivets. Our liability extends to the material and workmanship only.

This warranty is void if product failure is due to misuse, abuse, neglect, accident, and improper installation. Also not covered are consequential damages, incidental damages or damage to person or property.

All warranties are covered only by an original proof of purchase. Your sale contract is with the dealership where the product was purchased and therefore it has to be returned there.

USAGE AND CARE

Use care while installing your luggage, do not force or stretch it. Make sure your luggage is secured properly .To clean any dirt off use a wet sponge or cloth with a mild detergent. Do not use harsh chemicals. Do not carry sharp, pointed or flammable objects in the luggage. Make sure the weight is evenly divided all through your luggage.

www.gearscanada.com