

Function Controls M Armrest Beight Adjustment Butto

Armer's Height Adjustment Butt Seat Beight Adjustment Lever Buckrest Tilt Tension Adjustmen Storage Slot for CD and User Wa Backrest Angle Adjustment Leve Seat Bepth Adjustment Pull Depth Adjustment Pull rest Height Adjustment rest Angle Adjustment Gradient Adjustment Le



Function Adjustments

A. Headrest Height and Angle Adjustment

Backrest Tilt Angle and Tilt Tension Adjustment C. Lumbar Support Height Adjustment

D. Arm Pad Angle Adjustment E. Arm Pad Width Adjustment F. Arm Pad Forward and Backward Adjustment

G. Armrest Height Adjustment H. Seat Height and Depth Adjustment I. Seat Gradient Adjustment

Al Headrest Height Adjustment



Hold the handle of headrest to adjust the height of it. There are 6 positions with 1.97 range.

A2 Headrest Angle Adjustment



Hold the headrest to adjust the angle of it. There is 120° range adjustment. ° range

Bl Backrest Tilt Angle Adjustment



Push the backrest angle adjustment rush the backrest angle adjustment lever completely forward and lean against back until a desired angle is achieved, and then return the lever to the original position to lock at an ideal angle. There are 4 positions with a 25° rhange.

B2 Backrest Quick or Slight Tilt Tension Adjustment



Pull the lever outwards, open the tilt tension adjustment handle, and turn it formard or backward into a desired tension for quick tilt tension adjustment or close the handle and turn it forward or backward for slight tilt tension adjustment, and then close the handle and pub the lever inwards to the original position to fix it. B4 Lumbar Support Height Adjustment

A. While sitting and lean



While sitting and leaning against the backrest, the angle of backrest support frame will change automatically to offer complete support to one's body. When tilting, the backrest will alter its angle accordingly, which ensures full touch and

support to the body.



A. Hold the lumbar support upwards or downwards to adjust the height of it. The adjustable distance is 3.54°. B. Suitable height of the lumbar support would bring more comfort.

C1 Armrest Height Adjustment



Press the two-sided armrest height adjustment buttons to raise or lower the armrests. There are 8 positions with 3.15" range.

C2 Arm Pad Swiveling Angle Adjustment



Swiveling angle adjustment: Three arm pad positions, 18° range for each position is achieved by turning the arm pads outwards or inwards.



Width adjustment: hold the arm pads outwards or inwards into a desired width of the arms. There is 1.57° range adjustment totally.



Forward and backward adjustment: Push the arm pads forward or backward to a desired depth. The range for it is about 1.38".



Push the height adjustment lever backwards and hold it while raising or lowering the seat to change the seat height. When the lever is released, the seat height is fixed.

D2 Seat Depth Adjustment



Pull the seat depth adjustment pull to adjust the seat depth (The approximate range is 1.97°). when the pull is released, the position will be fixed.

D3 Seat Gradient Adjustment



A. The gradient of seat can be adjusted by turning the gradient adjustment lever to change the angle of the seat. The adjustable range is 0.79°. Bifferent gradient would meet your different needs with full

your dif comfort.