

# INSTALLATION GUIDE

## WATTAGE SELECTABLE CANOPY

PLED-CNP-WS-MAX300W

**IMPORTANT:** When using electrical equipment, basic safety precautions should always be followed as below:

### READ AND FOLLOW BELOW SAFETY INSTRUCTIONS

1. To reduce risk of electric shock, turn off power before installation or servicing.
2. This luminaire must be installed in accordance with the NEC and local electrical code. If you are not familiar with these codes and requirements, consult a qualified electrician.
3. Verify the availability of necessary tools and incidental materials.

**UNPACKING:** Thoroughly inspect the fixture for freight damage. Freight damage should be reported to the delivery carrier.

**PACKAGE CONTENTS:** 1 x 300W Canopy Light, 1 x Safety Rope


**COMPATIBLE DIMMERS:** Only compatible with 0-10V LED dimmers.

**LEVITON:** DD710-BNDZ, DS710-10E

**LUTRON:** DVTV-WH, DVSTV-453P

## STEPS FOR INSTALLATION

1. Put the fixture on the mounting surface and mark the locations of the four screw holes. Remove the fixture and drill holes at the four mounting holes.
2. Using wire nuts (not included), connect the fixture wires to the supply wires. If using a dimmer, connect the purple (dim+) and pink (dim-) wire to each of the 0-10V dimmer wires separately. If a dimmer is not being used, both dimmer wires must NOT be left exposed. Use wire nuts to cover each dimmer wire independently.
3. **OPTIONAL:** If you choose to use the 12in (30cm) safety rope, screw one end of the safety rope to the fixture and screw the other to the mounting surface using appropriate mounting hardware (not included).
4. Fixture is best mounted by drilling through the designated holes to secure fixture to mounting surface using appropriate mounting hardware (not included). All unused holes must be plugged. Waterproof silicone will ensure a tight seal.
5. **CHOOSE YOUR WATTAGE:** Using a screwdriver, unscrew the circular screw next to the power sticker to reveal the wattage switch. Select your preferred wattage, then replace the circular screw. Note: We recommend using your screwdriver to adjust the wattage switch, located underneath the circular screw. **To avoid risk of damage, ensure power is turned off at the power source before changing or selecting desired wattage on the power switch.**

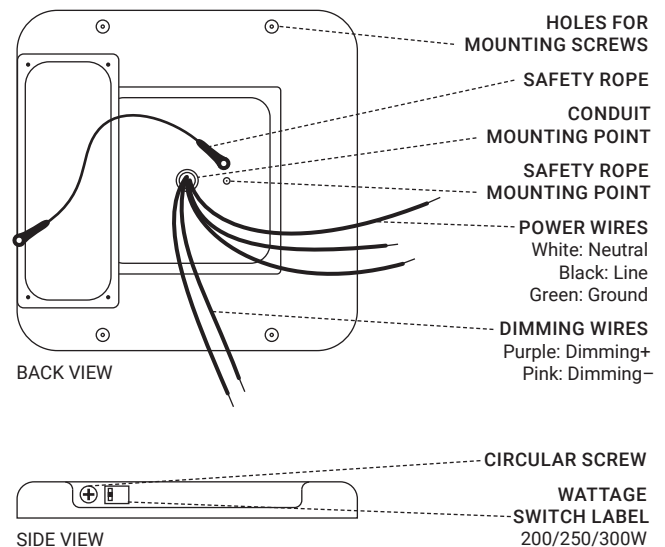

### WARNING

RISK OF FIRE OR ELECTRIC SHOCK.

DISCONNECT MAIN POWER AT FUSE OR CIRCUIT BREAKER BEFORE INSTALLING OR SERVICING THE LIGHT.

DO NOT USE ANY OTHER DRIVER EXCEPT PARMIDA LIGHTING DRIVER THAT IS INCLUDED WITH THE FIXTURE.