

Plug the connector directly into the homelink module.

Route the wire along the top edge of the headliner and then down the driver's side A-pillar.

Remove the fuse block access panel on the driver's side of the dash board.

Locate and remove the trunk fuse. Install the removed truck fuse into our fuse assembly so that it now has 2 fuses in it. Then install the fuse assembly back into the trunk fuse location.

Secure the ring terminal to a known good ground.