

Switched Harness Install:

You can use the provided switch or any aftermarket style switch of your choice. We have included a fuse assembly as we need to send an ignition voltage signal to the harness. The fuse connection does need to be made at the fuse block on the passenger side of the dashboard. Locate and remove the fuse from location # 23. Install the removed fuse into our fuse assembly so that it now has 2 fuses in it. You can then install the fuse assembly back into #23. Ground the ring terminal wire to a known good ground. Brass terminal on the switch is negative, outside silver is ignition and inside terminal is the output to the harness