


Windshield Multifunction Sensor Mount Bracket Cover Replacement (Without UHX)

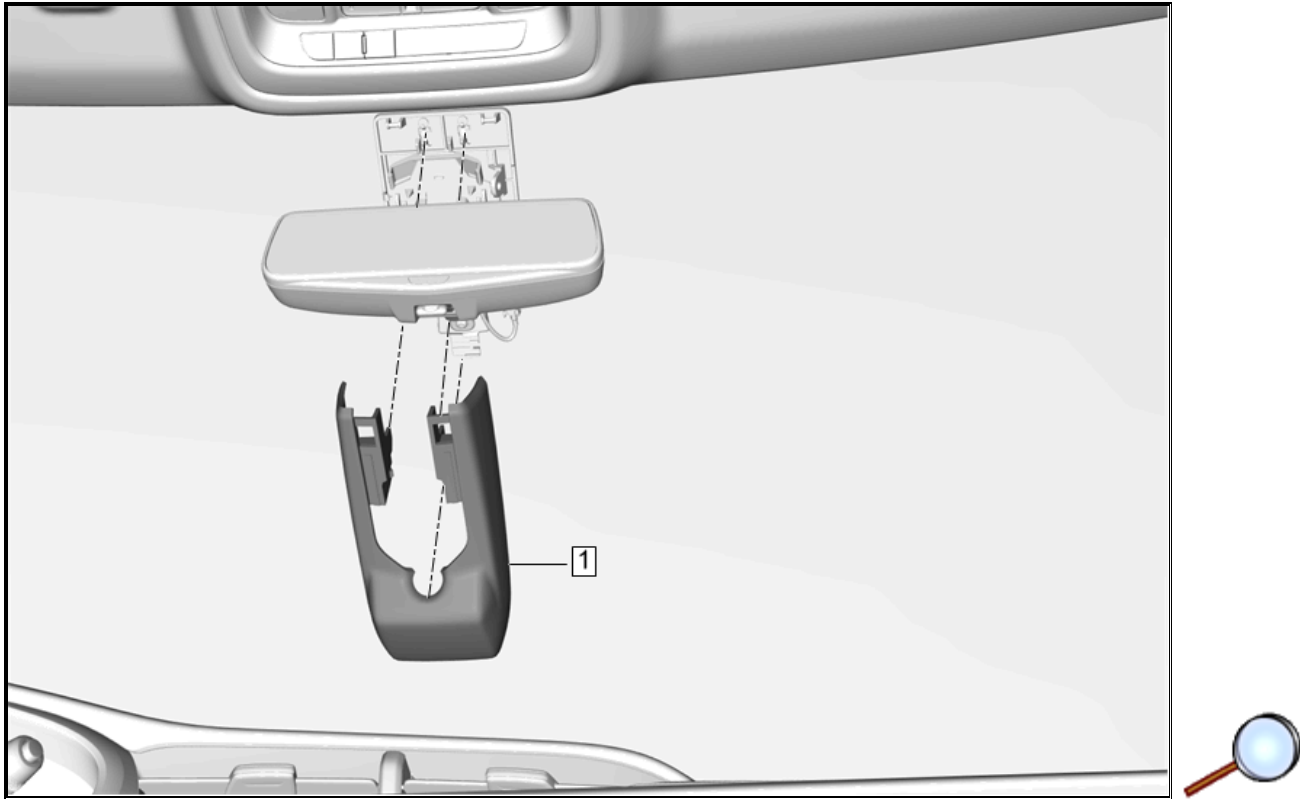

Windshield Multifunction Sensor Mount Bracket Cover Replacement

Callout	Component Name
<p>Warning: While operating, electrical control modules can produce heat and become hotter than their surroundings. To prevent burns allow sufficient time for the module to cool before removal.</p> <p>Preliminary Procedure Windshield Multifunction Sensor Mount Bracket Cover Insert Replacement</p>	
1	<p>Windshield Multifunction Sensor Mount Bracket Cover</p> <p>Procedure Pull downward to completely remove cover from windshield.</p> <p>Note: The windshield multifunction sensor mount bracket cover and cover insert has to be removed as a single unit from the windshield surface to prevent damage to mirror.</p>

