

Gen6 Taillamp removal

Tools needed: Flat blade screwdriver-8mm socket with appropriate size ratchet or 8mm open end wrench-side cutters or needle nose pliers

1- Open trunk and starting with the driver's side, remove the taillight access panel by removing the 3 retainer clips. Pry the center out and then remove the complete retainer





2- Remove 2 retainer clips from trunk liner with either a pair of side cutters or needle nose pliers. Remove carefully as to not destroy them.



3- Carefully push down on top of liner and work out from under the truck seal.



4-Once pulled back you can remove the 3 nuts holding the tail light assembly to the body. 2 are easy to see and the 3rd is a little ways back.



5: Once the nuts are removed you can remove the taillight by pulling back on the assembly. It does have guide pins so it may be a little snug. Be careful not to scratch your paint.

6: Repeat for other side and reverse direction's for install.