

Our harness will plug inline between each headlight connector and the original headlight harness. If you received a harness that has a ring terminal please connect this to battery positive. For those harnesses that have a fuse connection please follow the below steps.

1- Locate and remove the 15 amp fuse from the #50 circuit in the under hood fuse block. Install the removed fuse into our fuse assembly so that our fuse assembly now has 2 fuses in it. Install our fuse assembly into #50.



