

 
For safety, please use the smaller size earplug when doing outdoor sport and make sure you can hear outdoor sounds:

L size → M size M size → S size

For safety, please do not use your MP3 Player when driving or riding a motorbike. Please follow your local laws and regulations.

1

About i360 Waterproof Sport MP3 Player

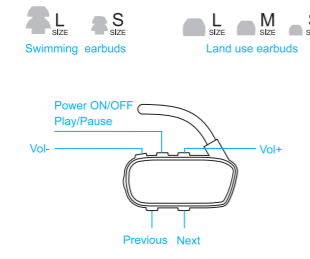


Swimming earbuds Land use earbuds

2

Wearing with goggles

Please put your swimming goggles against the connection rods at points near the ear.




Note: When swimming please use the swimming earbuds. Please choose the correct size earbuds according to your comfort.

3

Charging and Upload

- Please connect the MP3 player to a computer via the USB clip.
- Be sure to dry the water on the main body before connecting the USB clip. Clean the metallic contacts regularly to avoid poor contact with the USB clip when charging the battery or transferring data.

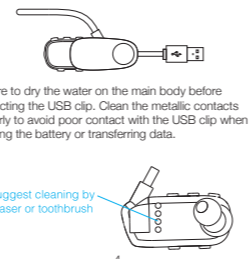

Suggest cleaning by eraser or toothbrush

4

How to pair the Bluetooth device

- Turn the device on by pressing the "play" button for 3 seconds. There will be a voice prompt "power on", waiting for connection". The light will flash blue and red.
- Turn the Bluetooth function on the device "on" and search and choose "i360 Black Edition". There will be a voice prompt "Bluetooth is connected".

How to listen to music when connected to Bluetooth?


- Short press "play" button to play or pause music
- Press "vol +" or "vol -" to adjust volume
- Short press for next/previous track

How to use phone call in Bluetooth mode?

To switch between Bluetooth mode and MP3 mode, double click the "play" button.

5


Listen to Music

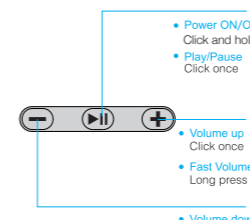

- Power ON/OFF**
Click and hold for 4 seconds
- Play/Pause**
Click once
- Volume up**
Click once
- Fast Volume up**
Long press
- Volume down**
Click once
- Fast Volume down**
Long press

6

Operating

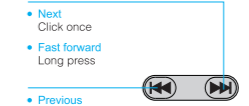

- Next**
Click once
- Fast forward**
Long press
- Previous**
Click once
- Fast backward**
Long press


Shuffle Play Mode ON:
When the player is on, press ►►, then press ►►.

Shuffle Play Mode OFF:
When in Shuffle Play Mode, press ►►, then press ◀◀, the player will be in normal play mode.

Note: MP3 player keys are multi-functional. The pressing modes contain Long Press and Press. Different operating modes stand for different functions.

7

Blowing off the Water Film



The volume may become quiet when swimming, this is due to a thin film of water which covers the waterproof net on the speaker.

Take off the waterproof earbuds, blow off the water film.

Squeeze the earbuds to let the water come out.

- Put the MP3 Player in a dry place for up to 10 hours to air dry. After this time the volume will be normal.

8

Precautions

- Do not use the MP3 player in an extreme environment, the player may not work in temperatures over 40°C or below -5°C.
- Do not damage the MP3 player with hard objects, as this will cause surface scratches, battery fail or firmware damage.
- Do not disconnect the MP3 player whilst formatting, uploading, downloading as this will cause "program error".
- Do not dismantle or rebuild the device as this will void the warranty
- Try and keep volume low to avoid hearing damage.
- i360 are not responsible for any personal losses or other indirect losses caused by improper use of the MP3 player.

9

Troubleshooting

Problem	Resolutions
Can't turn on	MP3 has no power, please recharge
Lights on, no sound	Check the volume level. Make sure it is WMA and MP3 file. Wrong or damaged MP3 files may cause some noise and failure in playing music. Format the MP3 by computer. Resent the MP3 by 10-20 seconds long press the play/pause button. Dry it natural for 1-2 days and recharge. After swimming, put the device at ventilated place.

10

Troubleshooting

Problem	Resolutions
Can't be read by the computer or keeps getting disconnected after a few minutes	Check if the USB wire is broken or the USB clip is connected and stable to the device. Check if the computer has automatically installed the USB driver. Try other USB ports from this or another computer, if using a desktop computer, use the USB port at the back. Check if the gold pins on the MP3 player are clean and not dirty. If covered in dirt, use a cotton bud or toothbrush with clean water to clean them so they are shiny.

11

Troubleshooting

Problem	Resolutions
Crashing: all buttons not work, can't turn on or turn off	Reset the MP3 player by pressing the "play/pause" button for 10-20 seconds. Discharge the MP3 and recharge again. Dry it in natural air for 1-2 days and recharge (after swimming, put the MP3 Player in a ventilated place).
Earphone sound, one side has smaller or no sound. Small sound under the water	Dry it in natural air for 1-2 days and recharge (after swimming, put the MP3 Player in a ventilated place).

12

MP3 Specification

- IP Rating: IPX8
- Dimensions: 140mm x 43mm x 110mm
- Weight: 27g
- USB interface: USB 2.0 (High Speed)
- Battery: Lithium battery
- Memory: 8GB
- Music Format: MP3, WMA
- File Format: FAT16, FAT32
- MP3 Bite rate: 8Kbps-320Kbps
- Earphone output power: 5mW + 5mW
- Frequency response: 20Hz-20KHz
- S/N: >70dB
- Distortion: <0.3%
- Operating environment: -5°C - 40°C (41F-104F)
- Operating time: 10 hours


13

Bluetooth Specification

- Support Bluetooth V 4.2 with APTX HFP V1.7 HSP V1.2 A2DP V1.6 AVRCP V1.3
- Multipoint support for HFP connection to 2 handsets for voice
- Multipoint support for A2DP connection to 2 A2DP sources for music playback
- Support voice guide
- Standby time: 150 hours
- Talking time: 8 hours
- Playing music time: 8 hours. Playing time depends on different volume and songs.
- Distance: up to 10 meters
- Certification: BQB, CE, FCC, ROHS, Reach

14

Whats Included

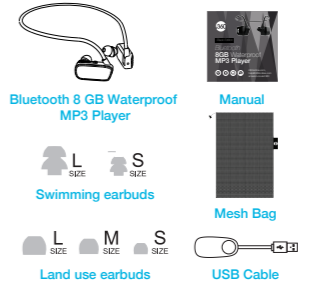

Bluetooth 8 GB Waterproof MP3 Player

Manual

Mesh Bag

USB Cable

Land use earbuds

15



i360
Black Edition

Bluetooth
8GB Waterproof
MP3 Player

i360online.com,
help@i360online.com
amazon.co.uk/i360

16