



mockingbird



Let's get rolling

Mockingbird Single Stroller
Instruction Manual

Watch everything you need to know

 
 
Getting started is so simple that we compiled everything
in a four minute video!

To watch, just visit:

hellomockingbird.com/video

or text:

VIDEO to **646-933-1290**

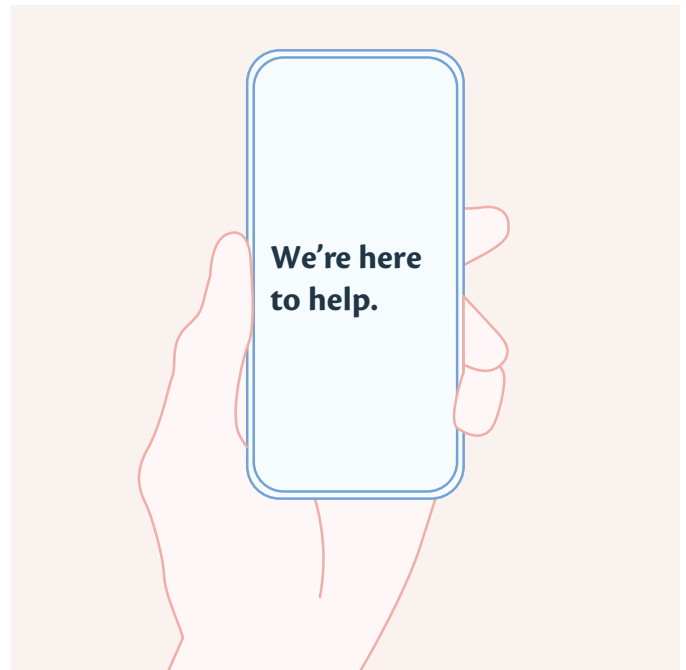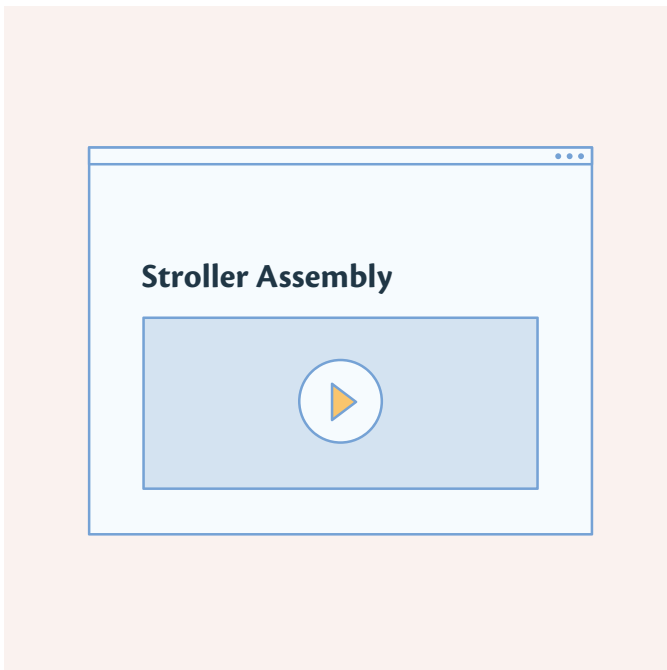

Warning

Please follow all of these instructions to ensure the safety of your children. Keep these instructions for future reference. Failure to follow these instructions could result in serious injury or death.

Avoid serious injury from falling or sliding out. Always ensure that the child is properly positioned by using the safety harness according to these instructions.


Choking Hazard

Adult assembly required because of small parts. Keep (assembly parts) out of reach of children under 3 years.


Caution

- Keep assembly parts out of reach of children under 3 years.
- Make sure the stroller is fully erect and latched in the open and locked position before allowing children near the stroller.
- Make sure all body parts are clear of the stroller when folding and unfolding.
- Never use the stroller on stairways or escalators
- Never use the stroller with roller skates or in-line skates
- Never leave children unattended
- The maximum weight that can be carried in the lower basket is 25 lbs (11.3 kg). Placing excessive weight in the unit or on the unit (e.g., purses, shopping bags, parcels, diaper bags, or accessory items) may change the balance of the stroller and cause hazardous/unstable conditions.
- Use of the stroller with children weighing more than 45 pounds or over 42 inches tall will cause excessive wear and stress on the stroller and may cause hazardous/unstable condition to exist.
- Never allow the stroller to be used as a toy


First, unpack the box and make sure you've got everything

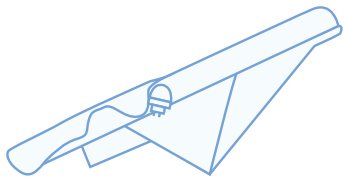

Stroller seat

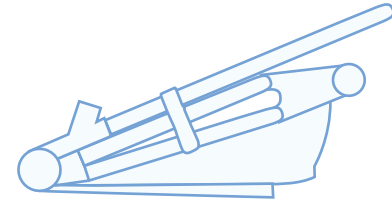


Stroller frame

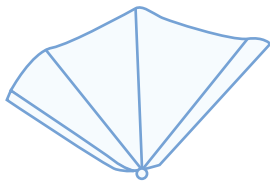


Canopy




Child bar

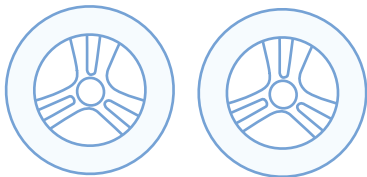


Rear wheels

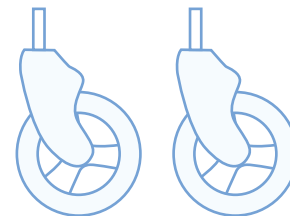

Lock & swivel front wheels

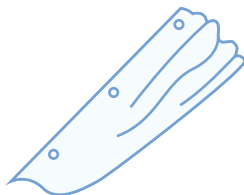

Sunshade

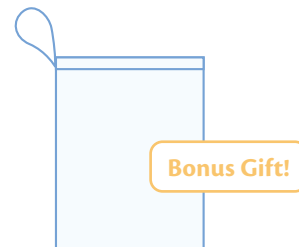


Wetbag

1

Open the frame


Lift up the latch

On the right side of the stroller frame, lift up on the latch to open the frame.

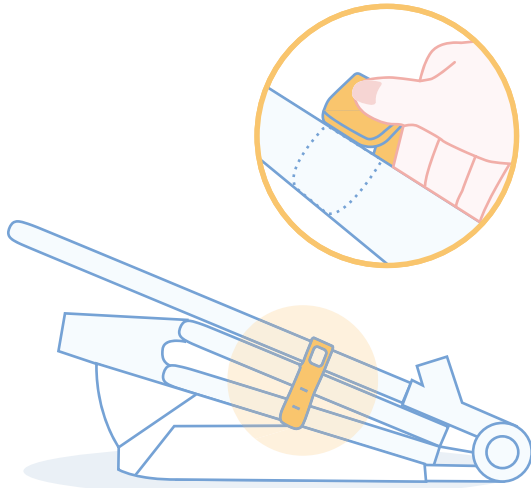

Open the frame

Lift up on the stroller handle with both hands until the stroller frame is in a fully opened and locked position. When the stroller is fully opened, you will hear a “CLICK”.

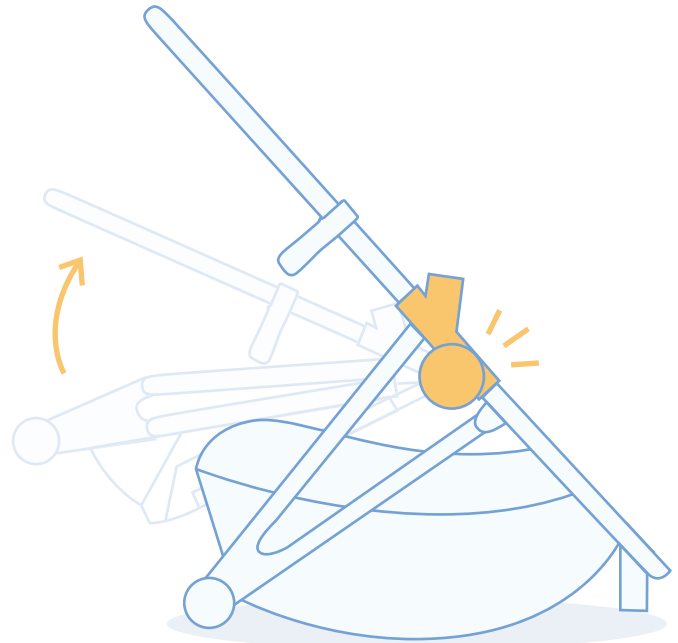

2

Attach the wheels

Attaching the front wheels

Push the front wheel post into the wheel housing until it “CLICKS” into a fully locked position. To release, press the metal button located on the back of the wheel housing and push inward.




Before attaching the front wheels, make sure the stroller is in a fully open position.

Attaching the rear wheels

Push the rear wheel post into the wheel housing.


To release, press the button located on the back of the wheel housing and pull the wheel outward.

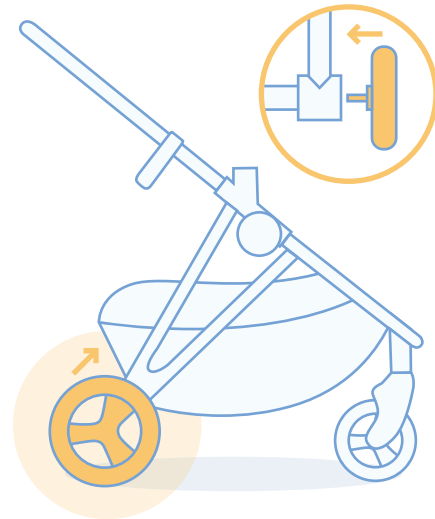

3


Attach the stroller seat

Place the stroller seat into the right and left joints until it “CLICKS” into a fully locked position. Press the buttons located on both sides of the stroller frame and lift stroller seat upward to fully remove.

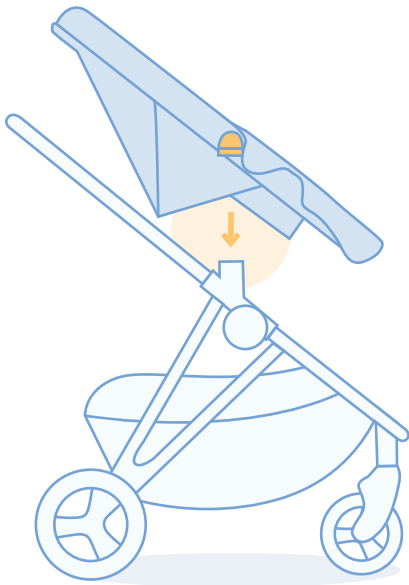

Front facing seat

Child faces away from parent

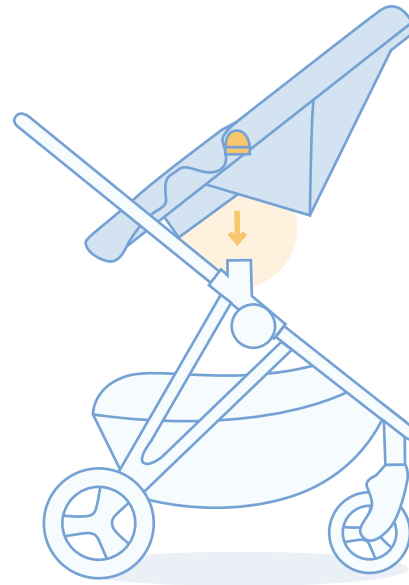

Rear facing seat


Child faces parent

4

Attach the canopy


Attaching the canopy

Place the back of the canopy onto the top of the seat. Then, slide both sides of the canopy locks into both canopy housings located on the seat until it “CLICKS” into a fully locked position.

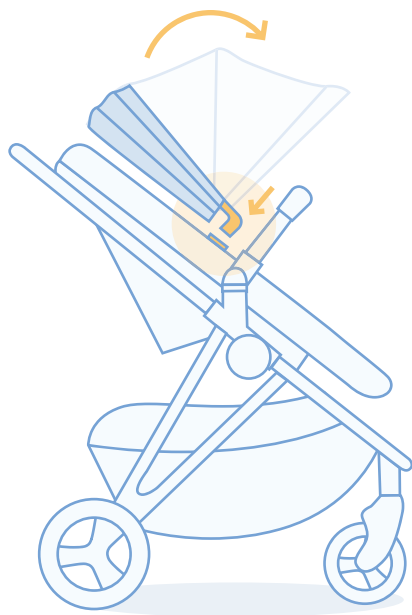

Securing the canopy


Match up the velcro strips on the inside of the canopy with the velcro strips on the top of the seat. Secure the elastic loops on the left and right sides of the canopy onto the hooks located on the seat frame.

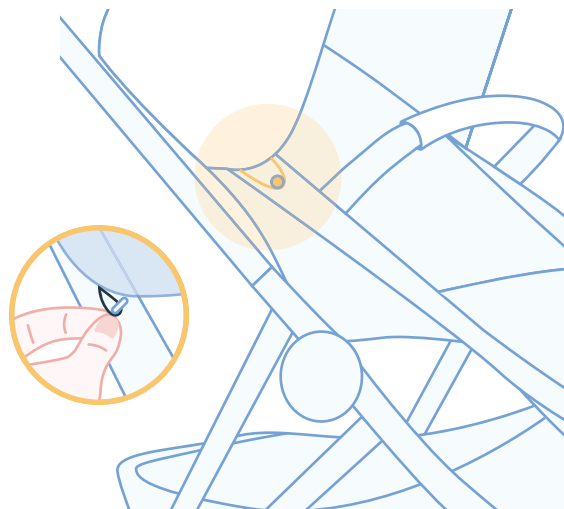

5

Attach the child bar

Insert the pins located on the ends of the child bar into the housing located on the left / right side of the seat frame. The child bar “CLICKS” on both sides once it is in a fully locked position. To remove, press the white buttons located just below either side of the child bar.

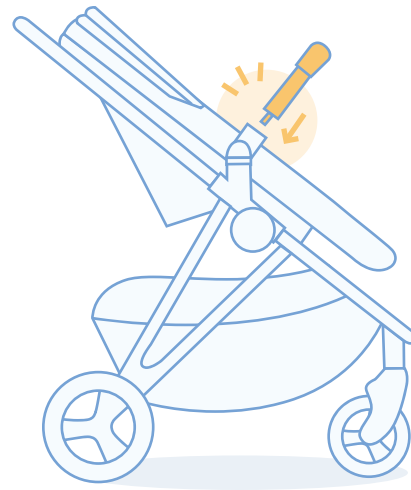

Done!

Great job! Look at you, mastering this whole parenting thing.

Now let's move on to learn how to safely use the stroller.



mockingbird




Your first stroll

Here's everything you need to know to test out your new ride.

Maneuvering

One-touch rear break

Apply downward pressure on bottom section of the brake lever located between the rear wheels. The stroller will not move when pushed and the brakes are in a locked position. To release, apply light downward pressure on the top section of the brake lever.

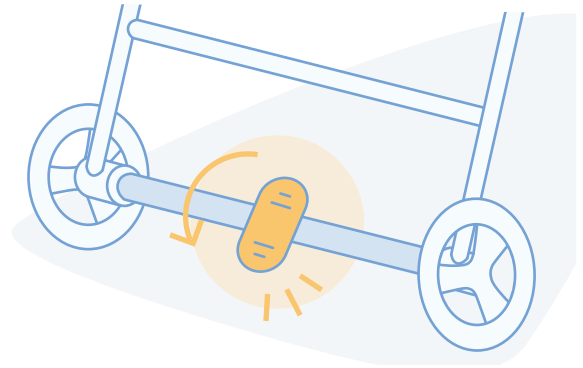

Important!

Be sure to lock the brakes before folding the stroller.



Pro Tip

Locking the front wheels

The swivel lock on the front wheels prevents the wheels from rotating left & right while walking. This can help make for a smoother ride on tougher surfaces, like cobblestones or snow.


To lock, press downward on the white lever located on the top of the front wheel housing. Rotate the wheel until it “CLICKS” into a fully locked position. To unlock, press upward on the lever located on the top of the front wheel housing until it “CLICKS” into a fully unlocked position.



Adjusting the handle

Press and hold the white buttons located on the left and right sides of the handlebar at the same time. While pressing, rotate the handlebar upward or downward into the desired position. The handle “CLICKS” on both sides once it is in a fully locked position.

Important!
Always expect a little wiggle on any adjustable pieces, like the footrest and the handle

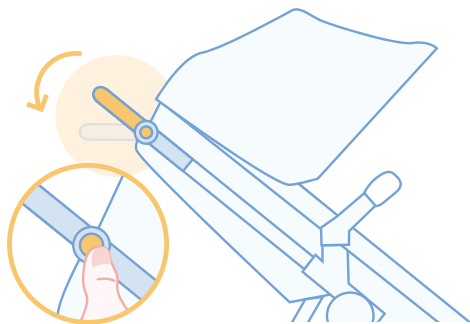


Pro Tip

Our adjustable handlebar has six positions that make it workable for almost any sized parent. Kindergartners to NBA players welcome.

Adjusting the footrest

Press and hold the white buttons located on the left and right sides of the footrest at the same time. While pressing, rotate the footrest upward or downward into the desired position.

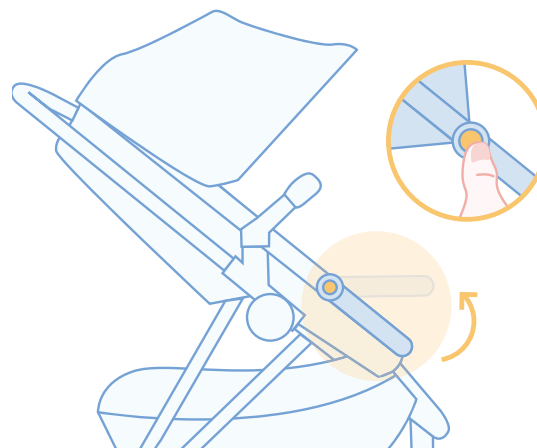

Pro Tip



We've designed the footrest so that it can easily be rotated upward with one hand, but will not move downward when your child's feet are resting on the footrest.

Get style points with the one-hand fold

Prepare to fold

Press the brake pedal down until it “CLICKS” into the locked position. Then close the canopy, position the stroller seat to an upright position, facing away from parent.

Slide the unlock tab with your thumb to the farthest left position and hold.

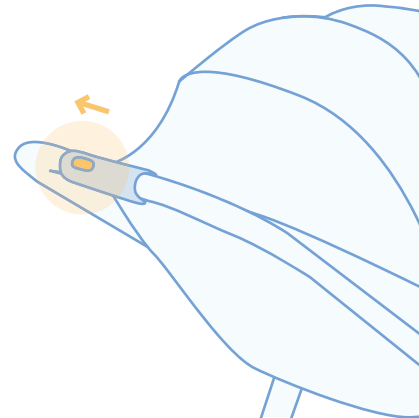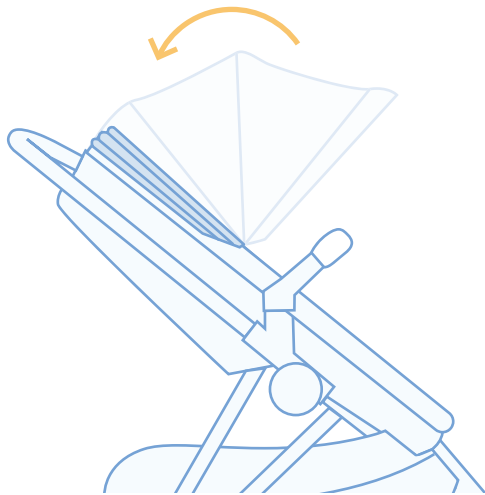


Important!

If you're strolling with your baby facing you, you need to reverse the seat before folding the stroller.


Folding the stroller



While holding the unlock tab, squeeze the front lever inward until you feel the stroller begin to fold, and push downward on the handle.

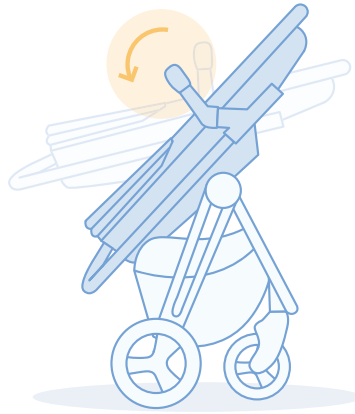

As the stroller folds down, let go of the handlebar and grab the child bar, pulling towards your body to complete the fold (don't worry about letting go for a sec. Since the brake pedal is engaged, the stroller won't roll away from you)"

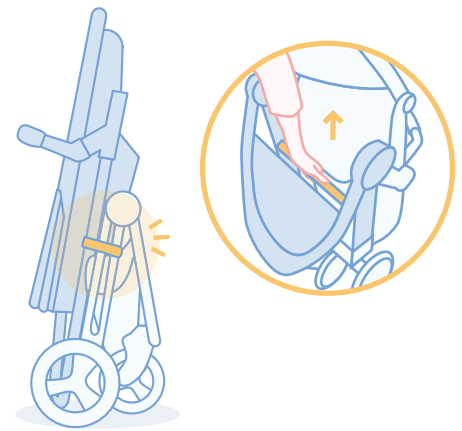

The stroller will fold until it is standing with the handlebar resting on the ground and the side latch “CLICKS”. For a more compact fold, adjust the footrest downward to a 90 degree angle after you fold. Pickup the folded stroller by the crossbar, and get on your way!”




Pro Tip

Remove the child bar to make the stroller fit even better in your car. If needed, the seat could be removed and stored first, and then store the frame separately.


Secure your little one

Adjust the shoulder straps

Unhook both shoulder straps from the center hub and remove the shoulder pads from the straps.

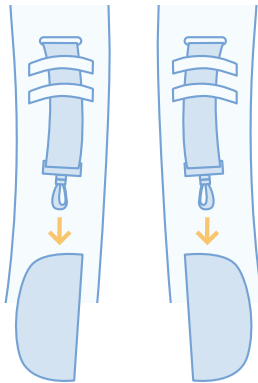

Slide the straps out, upward, and into one of the three shoulder strap positions depending on baby's size.

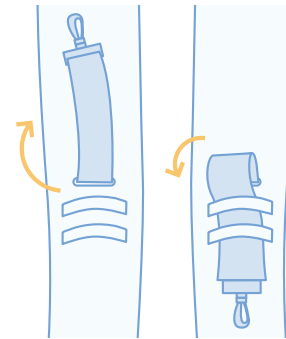

Important!

Before placing your child in the stroller, press the brake pedal down until it “CLICKS” into the locked position. Make sure the brake pedal is pressed down completely.



Pro Tip


Your stroller is preset with the shoulder straps in the lowest position. As your child grows, adjusting the straps upward will make it more comfortable for them.

If you are using an Infant Insert, Footmuff, or Seat Liner, you may need to adjust the straps to the loosest position right away.



Place your child in the stroller

Position the crotch belt between their legs. Pull shoulder straps over their arm and shoulder and fasten both strap ends to the restraint system. Fasten both waist belts to the buckle on each side of the crotch belt, and make sure you hear a “click” on both sides. Tighten each waist belt and shoulder strap so that the restraint system is snug.

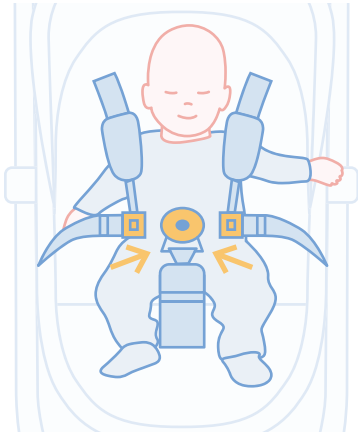

Tighten the straps

Feed the anchored end of a waist belt up through the buckle to form a loop. Pull the free end of the waist belt. Repeat this procedure to tighten the other waist belt. For the shoulder straps, feed the top end through the plastic stay to form a loop. Pull the bottom end down to tighten the strap. Repeat this procedure to tighten the other shoulder strap.



Pro Tip


Another way to adjust the harness is by adjusting the crotch belt. When using the seat liner or footmuff, it is always best to loosen the crotch belt to the maximum length, and remove the crotch pad if additional room is needed.

Growing with your baby

For Infants

Age 0 - 6 months

Before your baby develops the strength to properly support their own head & neck, it's best to use an infant accessory to help make the Mockingbird Stroller safer and more comfortable for them. The 3 infant accessory options are:

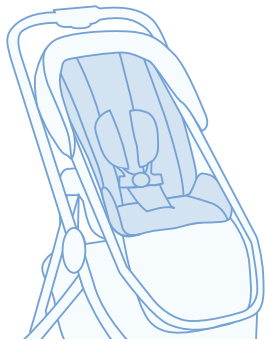


Add the Mockingbird Infant Seat Insert

We offer an infant insert that adapts the stroller for extra security and support. It creates a flat seat position with extra head and neck support that allows your newborn to safely enjoy the stroller seat.



Use the Mockingbird Carriage in place of the stroller seat.

We offer a Carriage that attaches directly to your Mockingbird Stroller, both forwards and backwards. And with our foam mattress pad and full coverage sunshade, your little one will fall right asleep.

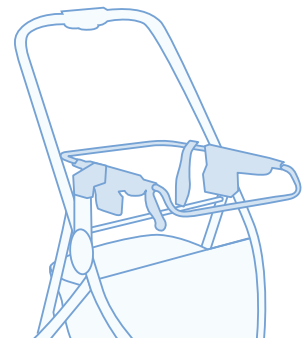


Attach your car seat with our Car Seat Adapter

With our Car Seat Adapter, you can go from car to stroller and back again without missing a beat (or disrupting naptime). Our Car Seat Adapter makes the Mockingbird stroller compatible with most commonly used car seats.

For Toddlers

Up to 42" or 50 pounds


Once your baby is older, you can make adjustments to maximize their comfort. The shoulder straps can be loosened, and you may want to lower the footrest for your little one. Also, you may use the seat facing away from parent more often, so your child can see the world!

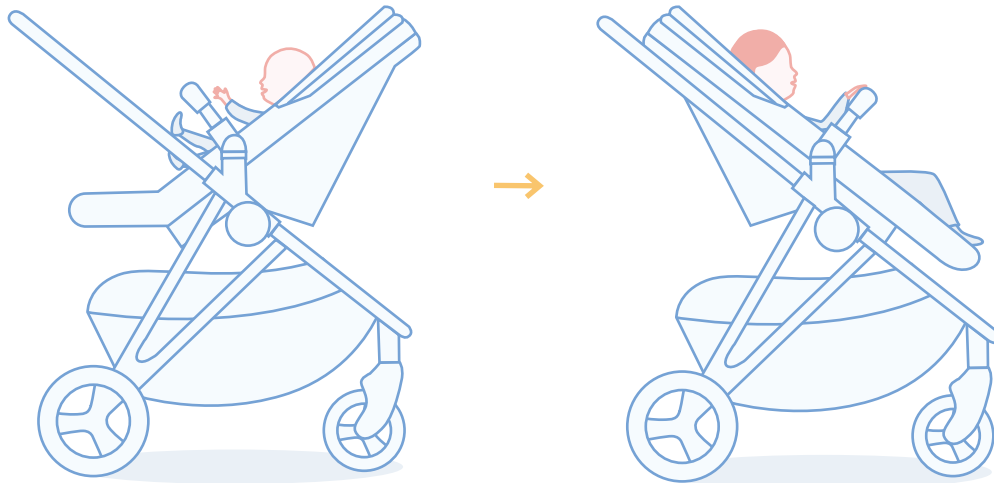

Nap time


Reclining the seat

Lift the recline latch located on the top center of the stroller seat upward and, while keeping it lifted, rotate the seat downward. To return to an upright position, lift the recline latch upward and rotate the seat upward.

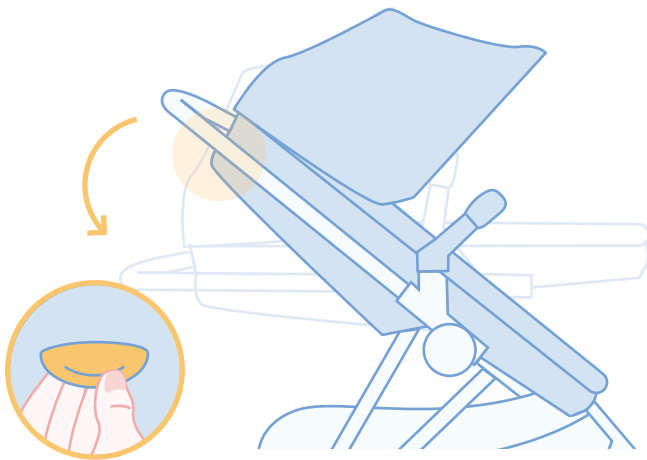

Use the peek-a-boo window

Pull upward on window flap until it is in a fully opened position.

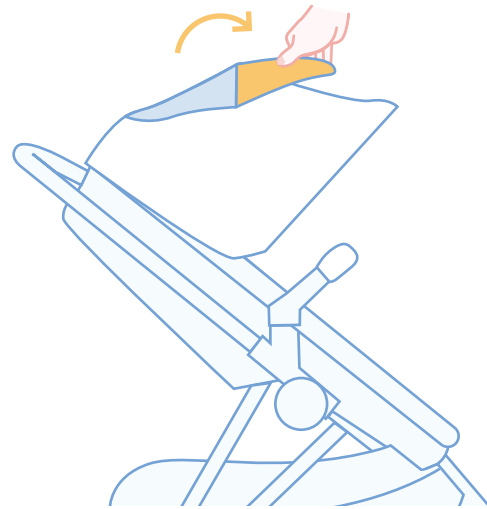


Pro Tip

If you want to leave the peekaboo window ajar, you can also pull it forward, and the magnets on the window and the front of the canopy will keep it open.

Beat the heat

Open the canopy vent section

Locate the zipper on the back of the canopy and unzip. Pull upward on vent flap until it is in a fully opened position.

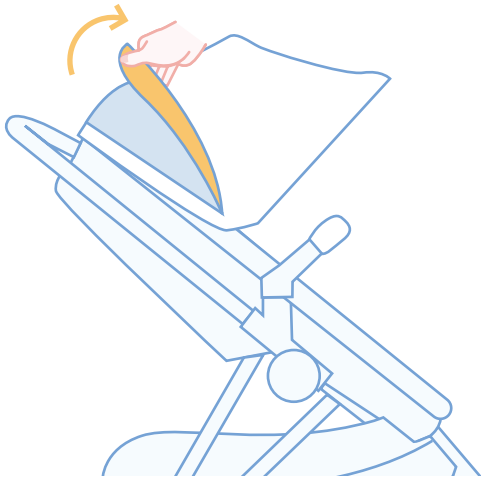

Attach the sunshade

Align the left and right sides of the sunshade on top of the front edge of the canopy, matching up the magnets along both pieces. To secure the sunshade, attach the elastic loops on the left and right sides to the hooks on the seat frame.




Pro Tip

Your little one will still be able to see outside when you use the sunshade to block direct sun.

When things get messy


Removable basket

When you need a deeper clean, the storage basket can be removed. Open the five snaps at the rear of the basket and the two snaps at the front of the basket. Unzip the zippers at the left and right sides of the front of the basket, and you'll be able to completely remove it.

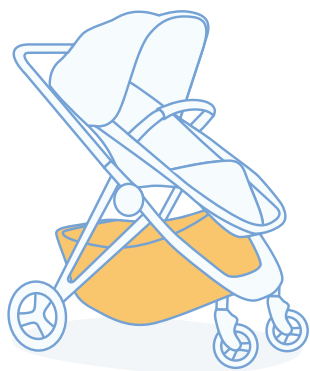

Cleaning the foot rest

The smart footrest is your secret weapon against toddler crumbs. Unzip the zipper along the exterior of the footrest, sweep the mess away, and zip the zipper back up.

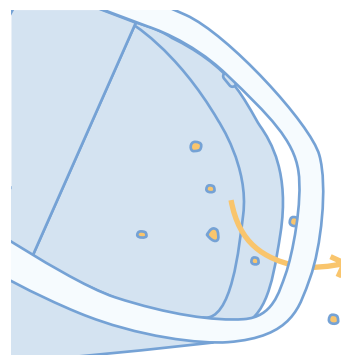

Pro Tip

Secret storage compartment


Along the left side of the interior of the storage basket, you'll find an extra pocket. It's perfect for storing your sunshade or other small items.



Pro Tip

Cell phone pocket

The backside of the stroller seat, just behind the child's headrest has a small pocket for cell phone storage, so you can stroll hands-free!

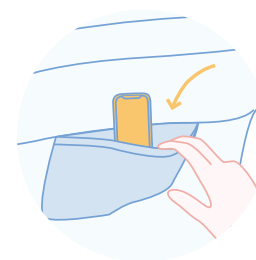

When things get (really) messy

Cleaning the fabric



Hand wash with a damp cloth



Air dry



Do not bleach

Cleaning the plastic



Use mild cleaning solution



Use warm water on a sponge or cloth

Cleaning the sunshade



Machine wash in warm water



Do not bleach




Tumble dry low or hang dry



Do not iron or dry clean

Accessories for all of life's situations

Find these items at hellomockingbird.com

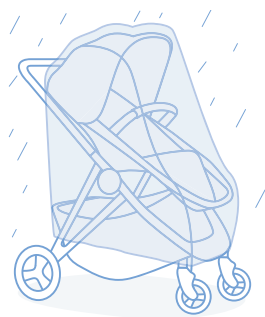


Rain

Rain Cover




Cold

 Footmuff

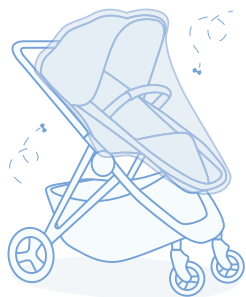

Travel

 Mosquito Net

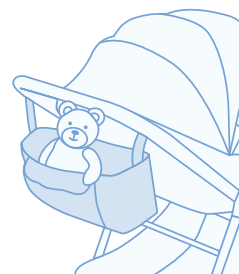

Organization

Parent Organizer

You're now ready to roll with confidence!

We're here to help.

Our product specialists are on hand to help you set up and use your stroller, understand its features, and determine which accessories are right for you.



Email us

support@hellomockingbird.com



Give us a ring

646.933.1290



Follow us

