



Dimensions : 4.39" x 2.36" x 1.03"

Power : Max draw is 40ma

When powering up your minivan, set the delay time somewhere in the middle. An extreme short setting can result in a startup crash. Also, before you use the Minivan, engage the effect and allow the pedal to warm up. You will hear this process, which takes a few seconds. Once the Minivan has warmed up all will be right with the universe, provided your definition of "the universe" is a functional echo pedal.

WebTechMovieStream Links

General : <https://www.youtube.com/watch?v=8xV7XDVkJMzg>

Knobs : <https://www.youtube.com/watch?v=FsDkCXpfOfs>

IN - Your 1/4 inch cable goes out here
OUT - Your 1/4 inch cable goes out here
THE BIG SWITCH - ON/OFF

DC JACK - 9v center negative only

DELAY - Defines the delay time. More traditional echoes will be in the first half of the pot's rotation. Extra long and nasty delays are available on the second half of the pot's rotation.

FEEDBACK - Defines the number of repeats on the echo

MIX - Defines the mix of echo to dry signal

INSERT - Allows you to use an expression pedal in the FEEDBACK loop. An expression pedal will allow you to control the number of repeats. Or you can insert other effects, which will process the audio each time it passes through the feedback loop. For example, a pitch shifter set to +1 octave will shift by 1, then that audio will be shifted up another octave and so on, until the machines are too confused to carry on. Use a stereo TRS cable to insert an effect.