



IN - 1/4" Input Jack. Plug your instrument in here

OUT - 1/4" Output Jack. The sound will exit the pedal here

DC JACK - Use an industry standard 9v center negative DC power

ENGAGE - This is how you turn the pedal on

TAP - This is your tap tempo switch. It is also a freeze switch. To avoid a freeze mucking up your timing, tap your tempo with a quick contact. To freeze your sequence, simply hold the tap switch down. When you release, the pattern will continue.

VOLUME - Quiet and loud control

LENGTH - The number of steps you'll hear 1-8

GLIDE - Allows the pitch to slide up or down, rather than switching to the next pitch

KNOBS 1-8 - Tune your steps and arpeggios here. Knob 1 tunes the interval of step one, knob 2 tunes the interval of step two, so on and so forth.

NOTES - Setting the pattern length to 1 will allow you to step through the sequence by tapping the TAP switch. This is a very handy way to tune up your pattern, but it's also a handy performance tool.

Dimensions : 7.38" x 4.70" x 1.30"

Power Draw : 32ma