SECURE I SECURE PLUS I SECURE PRO




LATCH EDITION



INSTALLATION MANUAL


INSTALLATION OVERVIEW & PARTS LIST

This lock can be installed for both right swing and left swing doors. The lock ships ready for a right swing door installation. If you wish to change the orientation of the lock for a Left Swing door, go to **Step 3** for instructions.

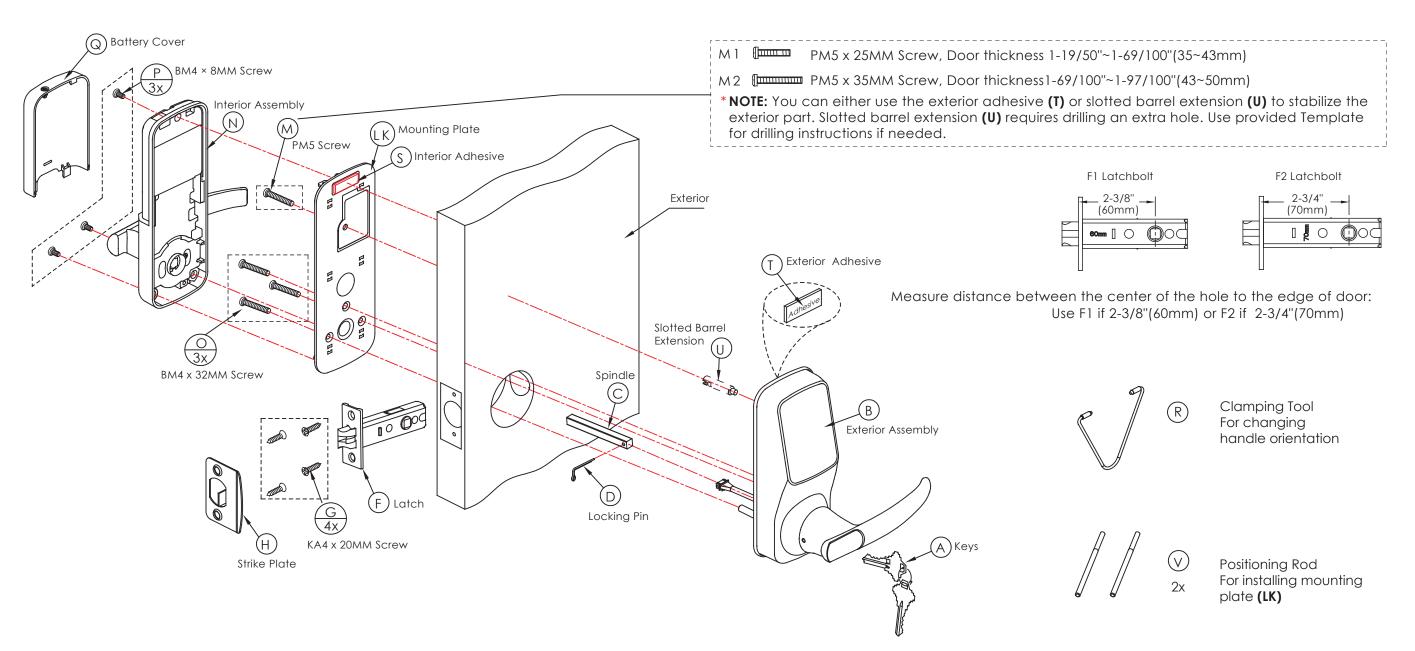


GETTING STARTED - YOU WILL NEED

All the parts you need to install the Lockly Secure Latch Edition is included in your package. You will require the following tools with some optional items for ease of installation.

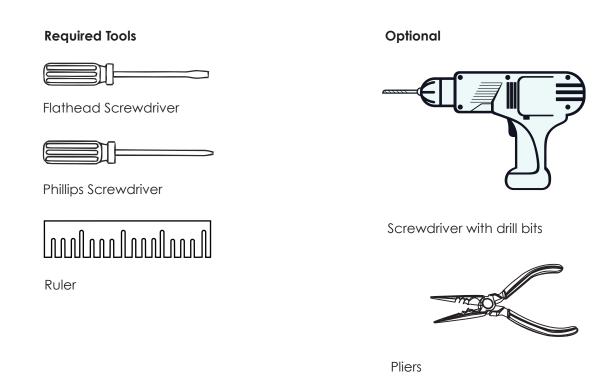

Drilling is not required to install the lock, and is optional. However if you are installing your lock on a brand new door, a drill is required if there are no holes prepared for lock installation.

STEP 1: PREPARING THE DOOR

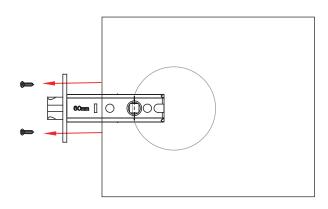

1.1


If you are installing the Lockly Secure smart lock on an existing door, please remove existing door hardware and latch or bolts before installing the new lock.

You can remove most existing door locks with a screwdriver.

If you are having problems removing your existing door lock or unsure if what you are doing can damage the existing door, please contact a locksmith or the current door hardware manufacturer for assistance.

1.2

After removing the exisiting lock, make sure your door is properly prepared. If you need to drill holes in your door, please use supplied templates to assist.

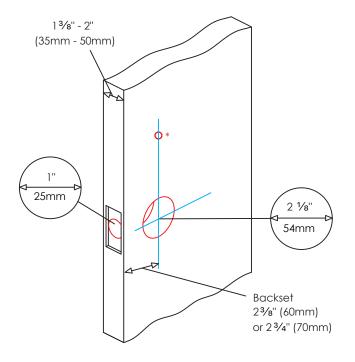

1.3

Measure and confirm your door is between $1\frac{3}{8}$ " - 2" (35mm - 50mm).

1.4

Measure and confirm the hole in the door is 2 $\frac{1}{8}$ " (54mm).

1.5

Measure and confirm that the backset is between $2^{3}/8$ " (60mm) to $2^{3}/4$ " (70mm).

1.6

Measure and confirm that hole in the door edge is 1" (25mm).


IMPORTANT NOTICE




* You are not required to drill an extra hole on your door. We have provided double sided Adhesive tape for you to help stabilize the lock during installation. Only drill a hole if you wish to have added stability. Please refer to the provided template for drilling if needed.

STEP 2: INSTALLING THE LOCKSET

2.1 Measure the distance between center of front door hole to the edge of your door and select the correct lockset. Select F1 if 2-3/8"(60mm) or F2 if 2-3/4"(70mm).

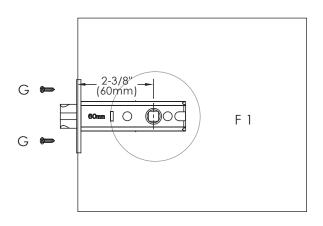


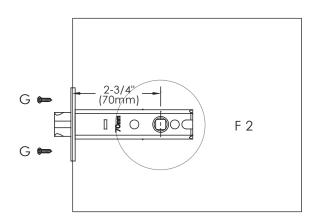

2.2 Install the lockset with the slanted side of the latch facing towards the closing direction.


OR

Example 1

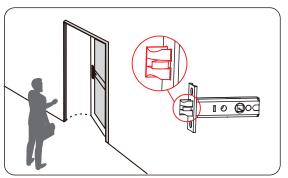

Slanted side Facing Door Frame when closing

Example 2

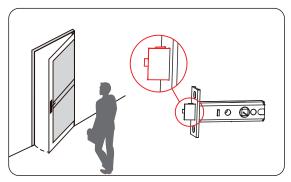

Slanted side Facing Door Frame when closing

2.3 Secure lockset with provided screws, labelled G (Step 2.1) as shown.


STEP 3: CHANGING HANDLE ORIENTATION FOR RIGHT OR LEFT SWING DOORS

How to determine if your door is a Right Swing or Left Swing door?

While facing the door, if the door hinges are on the right side of the door, you have a Right Swing Door. If the hinges are on the left side of the door, you have Left Swing Door.

The lock ships default for Right Swing Doors. You may skip STEP 3 if your door is a Right Swing Door. To change your door handle orientation for a left swing door, please continue reading.

Changing the Exterior Handle Orientation

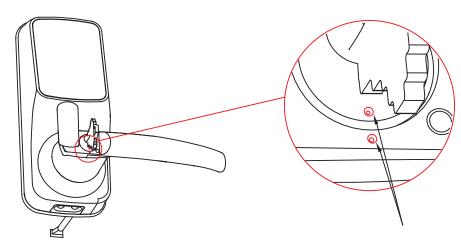


Insert the key and rotate to align the two white dots as shown in the picture.

3.1


IMPORTANT:

The following steps are only possible when these two white dots are aligned!

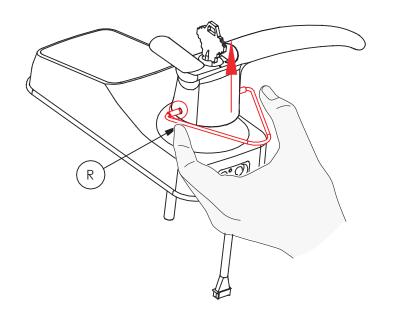

3.2


Use the provided Clamping tool (R) to push in the two metal pins at the base of the lock handle, located at the 3 o'clock and 9 o'clock positions, and remove the handle once the pins are compressed.

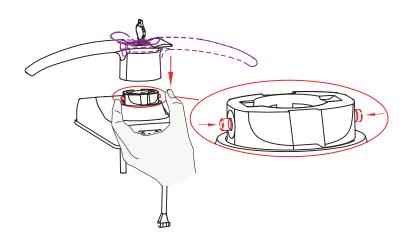

3.3


Rotate the handle 180 degrees to the other side of the lock.

Using your fingers, press the two pins located on the left and right side of the the lock to insert the handle back onto the lock.

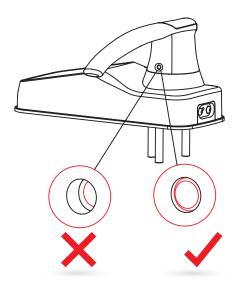


3.5

Check that yor handle works smoothly by giving it a turn up and down.

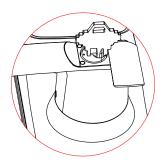

3.4


Confirm that your installation was complete by checking if the pins are flush against the handle, and has popped out. Adjust the handle accordingly to make sure the pins are fully decompressed and sits flush against the surface.

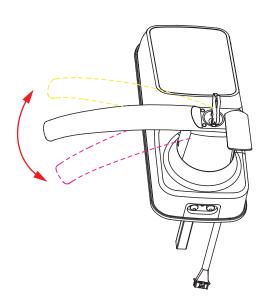

3.6


Twist key back to horizontal position. The key can be taken out once it goes back to the horizontal position.

Changing the Interior Handle Orientation

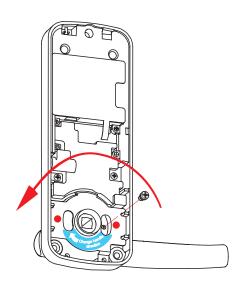

3.7

Remove the screw by turning counter clockwise and rotate the handle 180° in the direction of the arrow as shown. Make sure the screw hole is aligned with the marker as illustrated.

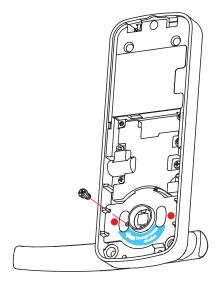


3.8


Securely screw clockwise as shown to complete your handle orientation change.

STEP 4: PREPARING LOCK FOR INSTALLATION


If you drilled a hole in Step 1, use Slotted Barrel Extension (U) and securely tighten with a flat head screwdriver by turning it clockwise onto the lock. If you did not drill a hole in step 1, you can leave this pole removed.

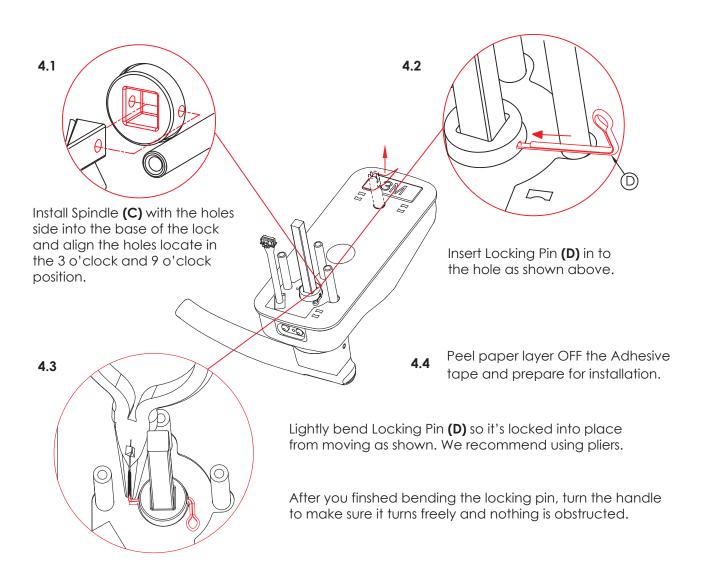

STEP 5: INSTALLING THE LOCK (EXTERIOR)

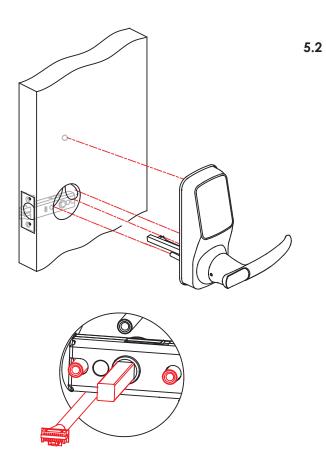

Install the exterior lock as shown to the left by aligning the lock straight and passing the cable and attached rods through the lockset.

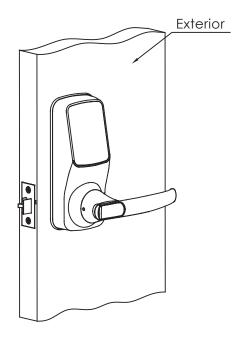


Pass the Spindle **(C)** through the center of the lockset, and the round rods through the sides in their respective holes. The cable should run undeneath the lockset.

Align the lock straight and press
hard (if you use the Adhesive tape
in step 4.4) to secure the top of the
lock.

5.3

STEP 6: INSTALLING THE LOCK (INTERIOR)

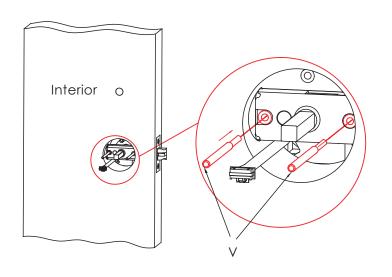


6.1


Insert Positioning Rods (V) into the the holes to the left and right of the Spindle (C). The holes are located at the 3 o'clock and 9 o'clock positions.

6.2

Interior Mounting Plate (LK) will go against the interior side of your door. Remove the paper layer off of the Adhesive Tape and align the positioning rods on the bottom of the plate to the corresponding left and right holes.

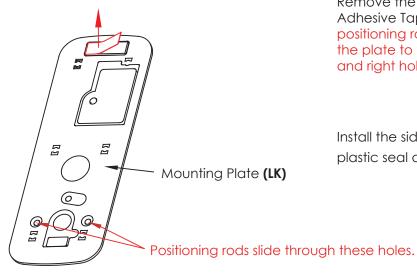


Install the side with the black plastic seal against the door.

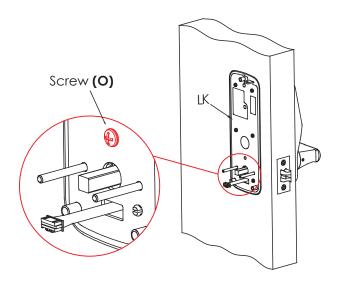

6.3

Pull the cable from the lock exterior through the rectangular hole underneath the positioning rods and spindle.

Secure the hole above the spindle with screws (O).

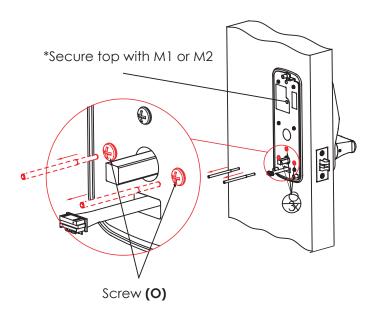


6.4

Remove the position rods **(V)** and replace them with screws **(O)** Tighten clockwise until the mounting plate is secure.

* If you have drilled a hole on the top in Step 1, please secure the hole with screw M1 or M2 depending on your door thickness. Skip this if no hole was drilled in Step 1.

M1 PM5X25mm
M2 PM5X35mm

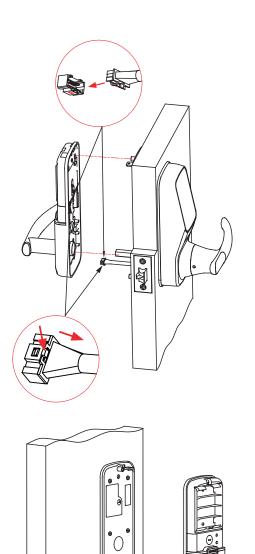



Plug the cable that is coming through the door into the lock interior. Make sure you match the direction of the plug correctly and matching the **red side of the plug with the red side on the lock**. Secure the connection by ensuring the snap is inserted tightly.


In case you need to reinstall the lock and disconnect the cable, make sure to press the snap to release the plug before carefully pulling it out. Do not force to pull the plug as this may result to lose connection and damage the lock.


6.6

Align the square rod to the lock interior and attach the Interior lock to the Interior mounting plate.

While you are doing so, gently push some of the excess cable through the rectangular hole into the door.


Place the remaining cable against the interior side of the lock interior so the lock interior sits securely onto the mounting plate.

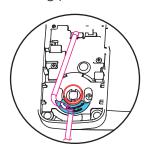

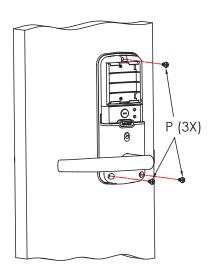

6.7

Once the lock interior is flush against the mounting plate, secure the lock to the plate by screwing clockwise using provided screws **(P)**.

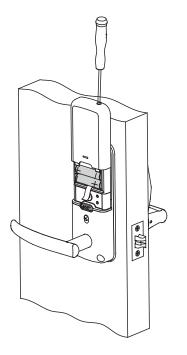


6.8

Insert 4 AA batteries into the lock by aligning the postive (+) and negative (-) orientation markings on the batteries to the battery chamber.

Secure the battery cover by sliding the cover over the lock and turning the screw clockwise on top until tight.

STEP 7: INSTALLING THE DOOR STRIKE

Close your door to see if your lock closes securely with your existing door strike. If the lock closes securely, you may keep the existing door strike without removing the old hardware. However, it's recommended that you use our door strike.

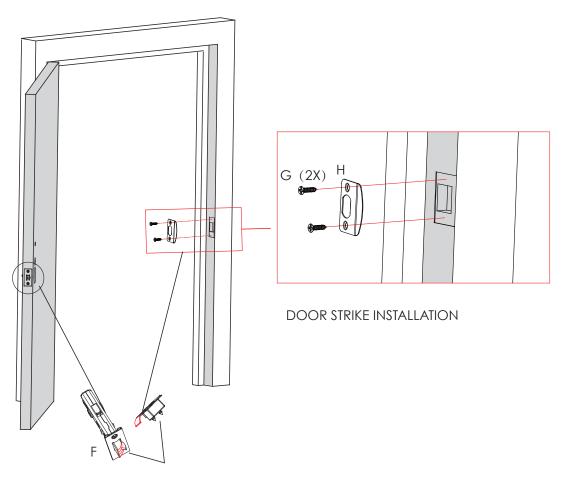

Make sure the slanted side of Latchbolt **(F1/F2)** is closing against the slanted part of Strike Plate **(H)** before fixing it on to door frame.

STEP 8: FINISHING INSTALLATION (DOOR LATCH)

You have completed the Lockly Secure physical lock installation. You can add Live Monitoring and Voice Assistant Control with the Google Assistant or Amazon Alexa via installing the Secure Link Wi-Fi Hub and Door Sensor (included with Lockly Secure Pro and also sold separately). Please proceed to next page for Secure Link Installation.

For Secure and Secure Plus, download the Lockly app from the iOS or Google Play app Store. Follow on-screen instructions to complete your setup and installation.








Scan or visit Lockly.com/app

STEP 9: INSTALLING THE SECURE LINK WI-FI HUB

The Lockly Secure Link Wi-Fi Hub comes in two parts. Each part of the Secure Link is crucial to enabling voice assistant features, live monitoring and and control of your Lockly device.

The Wireless Door Sensor is optional but highly recommended as it provides the means to verify that your door is securely closed and not ajar.

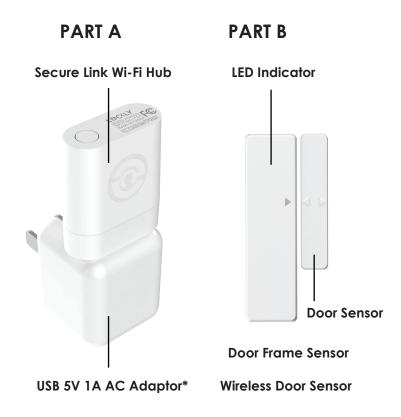


* You may plug the USB Secure Link Wi-Fi Hub into any UL Certified 5V 1A USB outlet, however we recommend using ours for best performance. Power adaptor supplied in this box is based on standard power plug and socket used by country.

STEP 10: SETTING UP THE SECURE LINK WI-FI HUB

You should install the Secure Link Wi-Fi Hub after you have successfully finished installation and set up of your Lockly Smart Lock. Refer to your appropriate Lockly Smart Lock Installation Guide and User Manual that came with the lock for reference.

The Secure Link Wi-Fi Hub (Part A) can be plugged into any standard 5V 1A USB port or use the UL certified USB AC adapter included in this box (recommended).

For best connectivity, the Secure Link Wi-Fi Hub must be installed within 10 feet of your Lockly Smart Lock. You may experience delayed or intermittent connectivity if the Secure Link Wi-Fi Hub is installed further than 10 feet away from the Lockly Smart Lock.

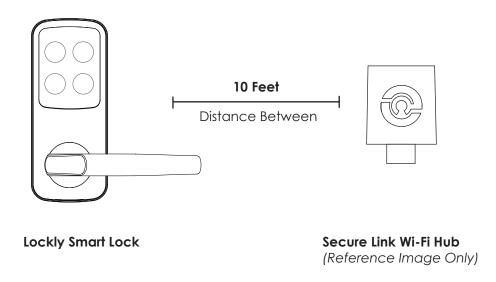

Make sure the Secure Link is installed in a location with a strong 2.4Ghz wireless signal. All modern Wi-Fi devices support 2.4 GHz connections while some equipment supports both 2.4 GHz and 5 GHz. Please check with your network administrator or internet provider if you're unsure what kind of network you have.

Plug the Secure Link Wi-Fi Hub into the 5V 1A USB AC adapter and plug the AC adapter to your wall socket.



USA Outlet Shown

A red RED indicator light will flash slowly to indicate that the Wi-Fi Hub is ready to connect.



LED Indicator is located next to the Setup Button

Once you have confirmed that your Secure Link Wi-Fi Hub is ready to connect to your lock, open the Lockly app to get started.



In case you have not downloaded our app, you can scan the QR code to the left or visit https://lockly.com/app






Make sure you have already created an account and setup your Lockly device to the Lockly app to continue.

Before you continue the Secure Link Wi-Fi Hub set up on your app, proceed to the next page to learn more about using the Secure Link Wi-Fi Hub and best practices for connectivity.

STEP 11: USING THE SECURE LINK WI-FI HUB

Before you set up your Wi-Fi Hub, make sure you are standing in between your Lockly Smart Lock and Secure Link Wi-Fi Hub. For best connection, the distance between the Wi-Fi Hub and your smart lock should be 10 feet or less.

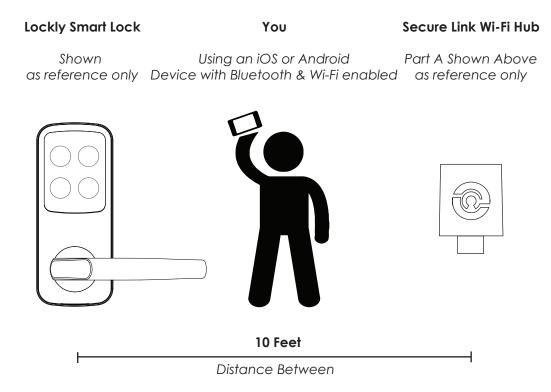

The Secure Link requires a strong wireless signal for optimal performance. Make sure the Secure Link will be installed in a location with a strong 2.4 Ghz wireless signal.

Proceed to the next page to read how to finish set up of your Wi-Fi Hub.


Secure Link Installation Checklist.

V	I'm excited for my new Lockly smart lock, now compatible with Alexa and the Google Assistant.
	You have a Lockly Smart Lock already, and now adding the Wi-Fi Hub
	The Secure Link Wi-Fi Hub is installed within 10 feet of your Lockly Smart Lock
	You have the Lockly App installed on your iOS or Android device.
	Your smartphone Bluetooth connection is ON and connected to your Lockly device.
	You are standing between your smart lock and the Secure Link Wi-Fi Hub.
	Your Secure Link Wi-Fi Hub is located in a location with a strong Wi-Fi signal.
	You are currently connected to a 2.4 GHz Wi-Fi Network (802.11 B/G/N) on your iOS or Android device.

Be sure you check off the above 6 boxes before proceeding. If any of the boxes are not checked, you may experience intermittent or delayed response time in notifications.

STEP 12: CONFIGURING THE SECURE LINK WI-FI HUB


First, make sure the smartphone you are using to add the Wi-Fi Hub is connected to your 2.4 GHz Wi-Fi Network. Next, open your Lockly App and select the main menu from the upper left corner. (Image shown with iOS demo). Once the menu opens go ahead select "Set up a New Device"

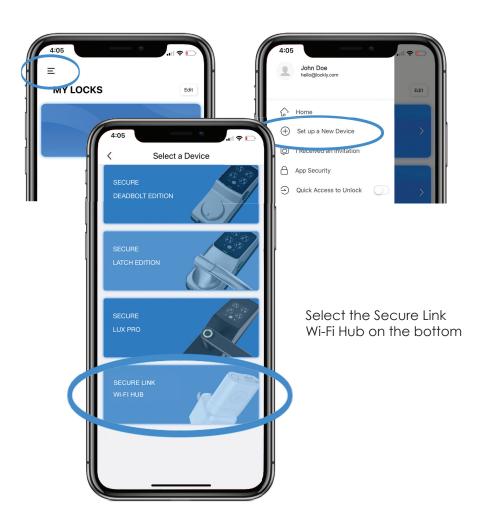


If you have never connected the Secure Link Wi-Fi Hub to your smart lock, the Secure Link should have a slow flashing RED LED Indicator. Press and hold the Setup Button located on the top of the Wi-Fi Hub for 3 seconds until you see the GREEN LED Indicator start to rapidly flash.



If you don't see anything appear with a Bluetooth icon and a name starting with PGH200... simply click the Refresh button on the upper right to rescan. Make sure your Wi-Fi Hub is showing a flashing GREEN LED indicator and the Wi-Fi Hub is within the optimal distance of 10 feet from your lock. Select the desired Wi-Fi Hub to continue.

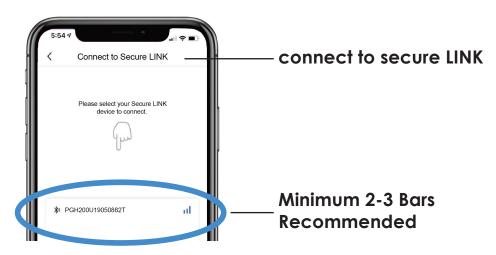

If you are already connected to a 2.4 Ghz compatible Wi-Fi network, it should display the network name. (See example below)

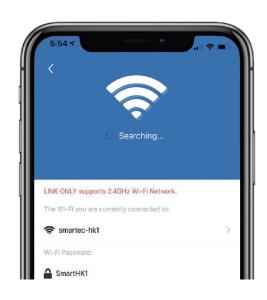

Enter your Wi-Fi password in the next line next to the icon, then click "Next Step" to continue.

Select if your Wi-Fi Hub LED Indicator light is ON and SOLID GREEN.

Select if your Wi-Fi Hub LED is flashing GREEN.

NOTE: If the LED is flashing RED, please check if your WiFi network is properly working. Please check with your network administrator or internet provider if you're unsure.



*Actual screen may differ depending on device and app version Please follow on -screen instructions.

Congratulations! Your Secure Link Wi-Fi Hub is now set up.

Below are some quick information for troubleshooting.



No Indicator Light

Your Wi-Fi Hub has no power.
Check your the power supply.



Rapid GREEN Light Flashing

Your Wi-Fi Hub is in setup mode. Setup mode can be entered by pressing the setup button for 2 seconds.

Setup mode will last approx 2 minutes.



Slow RED Light Flashing

Your Wi-Fi Hub has power. It's not connected to any wireless network.



Solid GREEN Light


Your Wi-Fi Hub is on and connected to an active 2.4 Ghz wireless network.

STEP 13: ADDING THE DOOR SENSOR

Adding the door sensor (Part B) is optional, however we strongly recommend installing the Door Sensor as it provides the ability to verify that your door is securely closed and not ajar and also send push notifications to your phone on the status of your door when someone opens and closes the door.


Depending on your door orientation, your Door Sensor will be mounted different ways. The Door Sensor comes in two parts.

Door Sensor is required if you are intending to use Amazon Alexa or the Google Home Assistant.

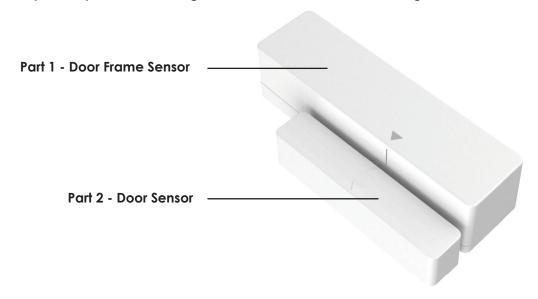

Make sure you install the Door Sensor indoors on a clean and dry surface. Gently wipe the surface of your door and door frame where you wish to install the Door Sensor and make sure it's dry before installing.

Keep the Door Sensor away from direct sunlight, high heat locations and large metal objects that may interfere with wireless signals.

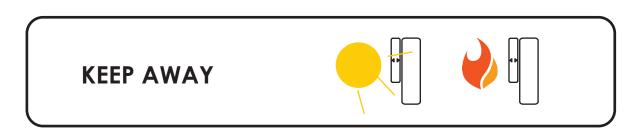


The optimal location to install the Door Sensor is on the upper corners of your door, away from the reach of children and pets.


WHEN FACING YOUR DOOR FROM THE INSIDE, DOOR HINGES ARE ON THE RIGHT SIDE




WHEN FACING YOUR DOOR
FROM THE INSIDE, DOOR HINGES
ARE ON THE LEFT SIDE

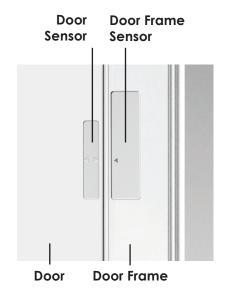

When you are installing the Door Sensor, make sure the arrows on the Door Sensor is placed next to the arrow from the Door Frame Sensor.

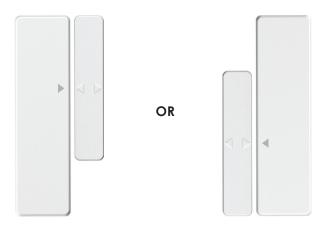

When installed on your door, the distance between the Door Sensor and the Door Frame Sensor must be less than 3/4" in order for the sensor to work.

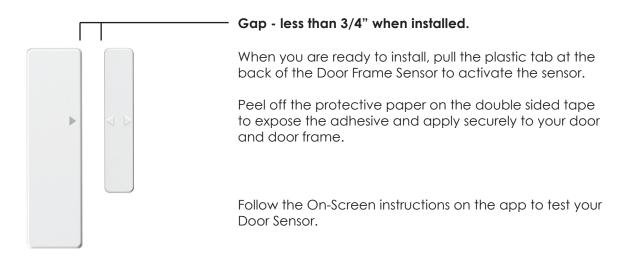

Congratulations! The Door Sensor is now set up.

The Secure Link Wi-Fi Hub works with other Smart Home devices. Check on the status or remote lock and unlock your door by your voice using Amazon Alexa or the Google Home Assistant.





To setup your lock to work with either of those platforms, download the Amazon Alexa or the Google Home Assistant app and add a new skill with Amazon Alexa or an Action with the Google Home Assistant.

Add the "Lockly" Skill (Alexa) and Action (Google) then follow on screen instructions to finish set up.

For a full list of commands, help videos or to troubleshoot your Secure Link Wi-Fi Hub visit us at https://lockly.com/help





FCC Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

The Secure Link Wi-Fi Hub complies with FCC radiation exposure limits set forth for an uncontrolled environment. It should be installed and operated with minimum distance 20cm between the radiator & your body.

IC WARNING

This device contains licence-exempt transmitter(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- 1. L'appareil ne doit pas produire de brouillage;
- 2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



WARNING: This product contains DEHP and other chemicals known to the State of California to cause cancer and birth defects, or other reproductive harm. For more information go to www.P65Warnings.ca.gov





We're here to help! help@lockly.com https://lockly.com/help

L@C(LY SECURE

For an online version of this installation guide and videos, visit:

http://lockly.com/help