

DIGITAL PLAYER
User Manual

FOREWORD

Respected user:
You are welcome to use the multi-function digital player from MAONO. The digital player will get into your life with excellent quality and performance, once you have it, you will truly feel it always bring you a relaxed and happy life. Before using, please read the instructions carefully, ensure the correct operation, so that you will know more for the player's superior performance.

Note
Some of the features and functions of the products and their accessories described in this manual are for informational purposes only. Shenzhen New Good Times Electronic Co., Ltd. reserves the right to modify any information in this manual at any time without any prior notice and without any liability.


No warranty statement
The contents of this manual, unless applicable by law, Shenzhen New Good Times Electronics Co., Ltd. does not provide any express or implied warranties with respect to all contents of this manual. To the extent permitted by law, Shenzhen New Good Times Electronics Co., Ltd. shall not, in any case, compensate for any special, incidental, consequential, consequential damages arising from the use of the relevant contents of the manual. The goodwill or the expected loss is compensated.

Import and export control
To export, re-import, or re-export the products described in this product manual, you should comply with applicable import and export control laws and regulations.

SAFETY WARNING

- Do not suffer from water droplets or water splashes. Do not place objects such as vases.
- Improper battery replacement is dangerous and can only be replaced with the same type or equivalent type of battery.
- Batteries must not be exposed to warnings such as sunshine, roasting or similar overheating.
- External power adapter charging use, the charge should be promptly unplugged the power cord to disconnect the power. Do not use this product in charge mode. (To use this product to be used after unplugging the power).
- Do not use the wireless device or use the equipment will cause the interference of electronic equipment and security risks, please turn off the product.
- In the flammable and explosive area, please close the product, so as not to cause an explosion or fire. The "turn off two-way radio" logo area should immediately turn off the device.
- When you fly, please follow the relevant regulations and regulations of the airline, please close the product before the aircraft take off, so as to avoid the security risks.
- The power adapter of this product as a disconnect device, disconnect the device should be maintained to facilitate the operation.

Introduction to the control panel

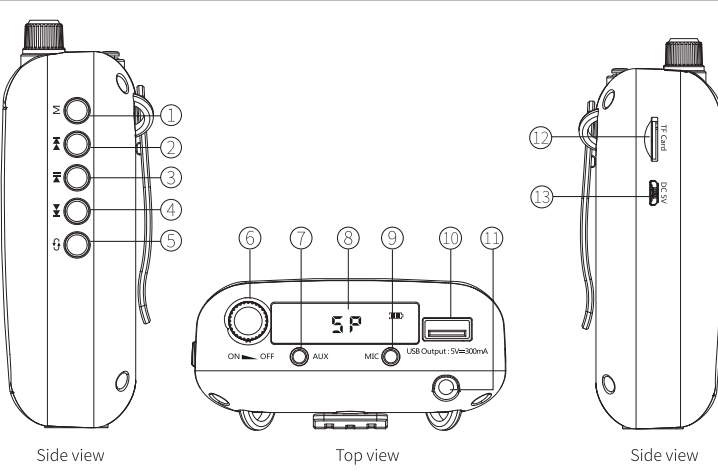

1

2

3

4

Illustration Description

- Mode key
- Previous / fast backward key
- Playback / pause key
- Next / Fast forward key
- AB repeat / cycle key
- Switch / Volume knob
- AUX audio input hole
- Digital display
- Microphone jack
- U-disk Port
- Antenna
- TF card
- DC 5V charging port

Product Features

- Simple streamlined UV piano paint shell.
- Built-in 1500mAh lithium battery, standby time is long.
- High-quality external magnetic speakers, the volume is large, clear sound without noise.
- Support AB repeat function.
- 3.5mm universal audio input interface, you can use the audio cable to connect the Tablet PC, mobile phone and computer notebook for small speakers to use.
- Support U disk / TF card reader, MP3 music player.

Standard configuration

1x amplifier 1x headset wired microphone 1x charging cable 1x belt 1x manual 1x certificate

Instructions

- Mode key: When with a device access, short press for the TF card / U disk / FM / audio input / PA input mode conversion, long press invalid, when no device access, short press for FM / PA mode conversion, Long press invalid.
- Previous / fast backward key: When with TF card / U disk playback, short press to select the last song, long press rewind; When under FM radio mode, short press for a frequency point down, long press to switch to a radio; when with audio input, Short press is invalid, long press volume down.
- Playback / pause key: When playing with TF card / U disk / audio input, short press for playback / pause, long press is invalid; under FM radio mode, short press to play / pause, long press automatically search the radio, when search is completed, it will automatically save the stations and Jump to the first station playing.
- Next / Fast forward key: TF card / U disk playback, short press to select the next song, long press for fast forward; under FM radio mode, short press for a frequency point increment, long press to switch to the next radio channel; when with audio input, short press is invalid, long press for volume up.
- AB repeat / cycle key: When playing MP3, press the point for the beginning of a point, and then click for the end of the end of B and at the same time indefinite repeat AB between the two points, and then short

press to cancel the repeat function; long press single cycle / All cycles.

- Switch / Volume knob: Turns clockwise to power on / off turning counterclockwise when turned on to reduce volume / power off.
- AUX audio input hole: the use of 3.5mm universal audio cable, can be connected with computers, mobile phones, music players for small speakers to use.
- Digital display: display playback status, playback time, FM frequency and other information; charge the battery symbol half of the grid and full grid alternately flashing each other, full of battery symbols full of bright lights.
- Microphone jack: Insert the professional 45dB wired microphone with 3.5mm plug, then begin for voice amplification.
- U-disk Port: Plug with an U-disk with MP3 format music files after turn on the amplifier, then it can automatically play the U-disk music.
- Antenna: When listening to FM radio programs, be sure to pull the antenna out completely.
- TF card: Plug with a TF card with MP3 format music files after turn on the amplifier, then it can automatically play the TF card music.
- DC 5V charging port: Connect to the charging interface by using a standard DC 5V charger for charging.

Technical Parameters

Support music format	MP3, WAV	Frequency response	180Hz-19000Hz
Rated output power	5W	Input	5V=500mA Max
Loudspeaker impedance	3Ω	Battery specifications	3.7V/1500mAh

Precautions

- The microphone is directional, make sure the microphone head to the front of the mouth 1-2cm, aligned sound collection hole to get the best pickup effect.
- To ensure the life of lithium batteries, do not use this product during charging; if do not use it a long time, it should be charged once every month.
- All parts of this product are designed according to the needs of the amplifier, if you need to replace the accessories, please use the original parts from us to achieve the best working condition.
- Non-professional technical personnel please do not arbitrarily disassemble modified, maintenance, if any questions or service needs, please contact us or the local seller.
- Please adjust the volume according to the actual use of the environment, long time in high volume will damage your hearing health.
- Do not use this product in hot, humid environments.
- Do not throw away, to avoid damage caused by falling down.
- Do not disassemble, repair and modify this product by yourself.
- If necessary, use the input voltage DC5V USB power supply or optional universal lithium battery.
- Please follow the instructions for the use of lithium batteries, do not arbitrarily discarded or placed in the fire, so as not to cause danger!
- Temporarily do not use this product, please turn the product power switch to the off state to turn off the power, to avoid the battery power loss.

5

6

7

8

Common questions and answers

Q: How to do for my amplifier has no sound?
A: If your amplifier did not has sound, please do not worry, and check as below:
(1) whether the microphone is inserted in the wrong position.
(2) whether the host power switch is turned on.
(3) Whether the microphone volume knob is already open.
(4) whether the battery power is sufficient.
If the above operation can not solve the problem, please contact the us or the local seller.
Q: Why does the amplifier has a whistle?
A: There are four reasons for howling are overload, distance, angle, frequency, howling is generally caused by the overload of the input signal.
As the howling itself is not control, generally can be used to solve the following methods.
(1) appropriate to adjust the loudspeaker/loudspeaker volume, try not to open to the maximum volume.
(2) control the distance between the microphone and the loudspeaker, do not leave too close.
(3) adjust the microphone and loudspeaker angle, to avoid the microphone is facing the loudspeaker loudspeaker.
Q: How long is the life of the lithium battery, can I replace it?
A: Lithium battery life is generally 2-4 years, is replaceable, please contact us for the battery specification.
Q: How to do if FM radio can not search?
A: Please confirm whether the use of the environment FM signal coverage, whether it has automatically searched the local radio.

Product warranty instructions

In order to allow you to better enjoy the services of our company, please read the following details: New good times Electronic Co., Ltd. digital player product warranty service from all over the country's New Good Times Electronic Co., Ltd. authorized technical service center is responsible for providing. This product from the date of sale of the warranty period and the "three packs" valid period, in the "three packs" of the validity period, the normal use of the product failure, according to the "Three Guarantees" provisions to be repaired, replacement, return. In the warranty period, in accordance with the contents of this warranty, in the new era Electronics Co., Ltd. authorized technical service center to enjoy free maintenance services (random accessories are not covered within the warranty), product host warranty period of one year. Products that are one of the following are not covered by free warranty.
1. Beyond the warranty period.
2. The user self-disassemble, the machine structure was damaged.
3. The user self-repair or improper use (such as moisture, impact, water, the voltage is too low, etc.) caused by damage.
4. By the company's authorized repair center demolition, maintenance, modification after the failure.
5. No warranty card and purchase vouchers; warranty card is privately altered or not filled, or with the repair machine does not match.
6. Irresistible force caused by damage (such as lightning, floods, earthquakes, etc.).
7. Random accessories are not warranty.
When you need a warranty, please send the machine to the service center of the new era Electronics Co., Ltd. with the warranty card (original) and the purchase certificate (copy). The transportation fee is borne by the user.

Product warranty card

Please keep this warranty card and present it as maintenance certificate. This warranty card will not be renewed if it is lost. * This warranty card is valid only in China mainland *

User profile

Product number		Signature
Place of purchase		
Date of purchase		
Username		Contact number
User address / Zip code		


Maintenance records

Maintenance date	Cause of issue	Approach	Repair man

Dear customers:
Thank you for purchasing the company's digital player products, such as the operation is still in doubt, you can call the national unified service hotline: 4008-018-908. This manual contains the after-sales warranty card, please keep it safe.

MAONO

Manufacturer: Shenzhen New Good Times Electronic Co., Ltd.
Address: 3rd Floor, Building 3, Jihua Technology Industrial Park, westside of Guangshen Expressway, Xixiang Street, Bao'an District, Shenzhen National unified service hotline: 4008-018-908
Implementation of the standard: GB8898-2011; GB13837-2012; GB17625.1-2012



This product shows the picture and the text has been checked in detail, such as the occurrence of printing errors, the company does not bear the consequences of production, product images and detailed functional parameters, please prevail in kind.
The Company reserves the right to make changes to the products. If the changes are made without notice, the final interpretation shall be given to the New Good Times Electronic Co., Ltd. within the limits permitted by law.

9

10

11

12

技术要求

- 1、材质：128g铜版纸
- 2、方式：折叠
- 3、尺寸：110mm*75mm
- 4、表面处理：正反面印刷
- 5、颜色：单色印刷
- 6、印刷效果不能有异色、杂色、印刷模糊、漏字、重影、污迹、破损、断字
- 7、印刷位置不能歪斜、偏位等不良现象

	第一视角	新好时代电子有限公司					
未注公差表		机型	N311&N611			图号	
角度	±0.2°	制图	李慧慧	2017/04/21	名称	定制单英文说明书	
尺寸	公差	设计			料号		
0~10	±0.05	审核			材质		数量
10~50	±0.1	核准			比例	1:1	单位
50~200	±0.2					A4	
200以上	±0.3						mm

标记	处数	修改内容描述	修改日期	修改人	核准
△					
▲					