
INSTALLATION MANUAL

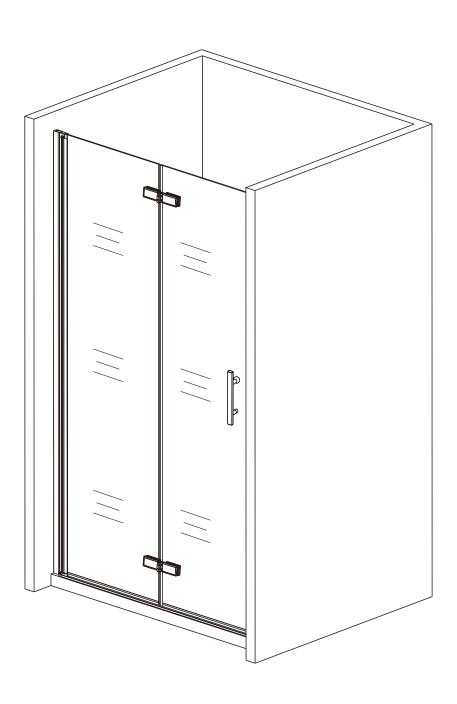

TOOLS REQUIRED



 


PENCIL

(Pendi)

(∅6, ∅3, 2) DRILL BIT

SILICONE & GUN



FLAT AND CROSS HEAD SCREWDRIVERS

 




TAPE MEASURE


SPIRIT LEVEL







RUBBER HAMMER


PACKING LIST

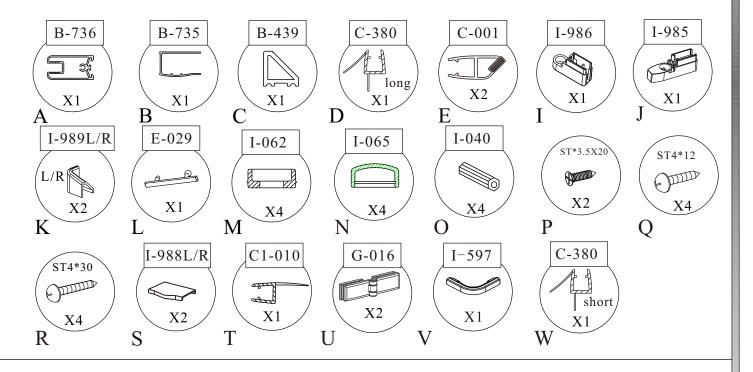


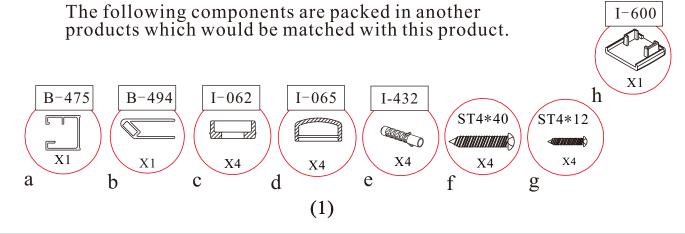


PRODUCT SCHEMATIC DIAGRAM

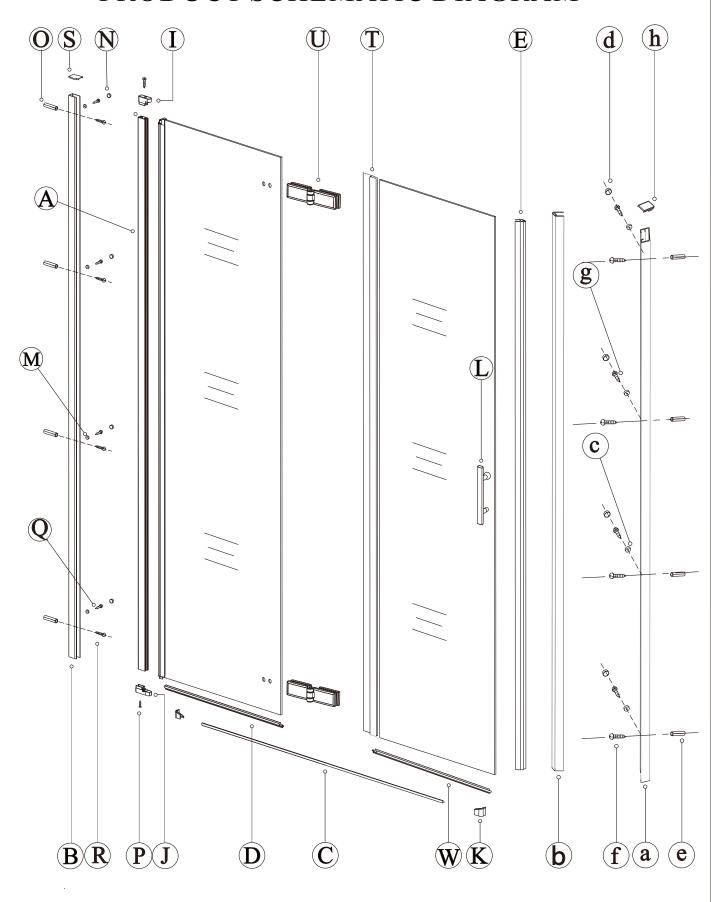


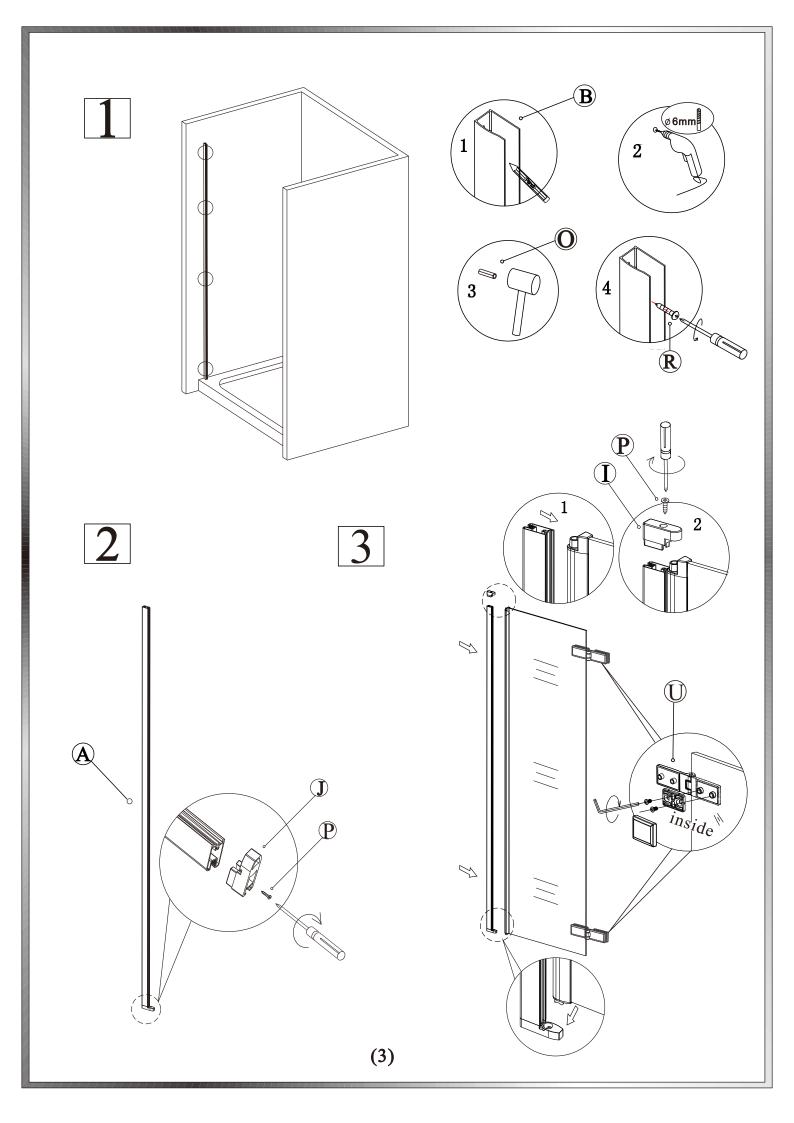

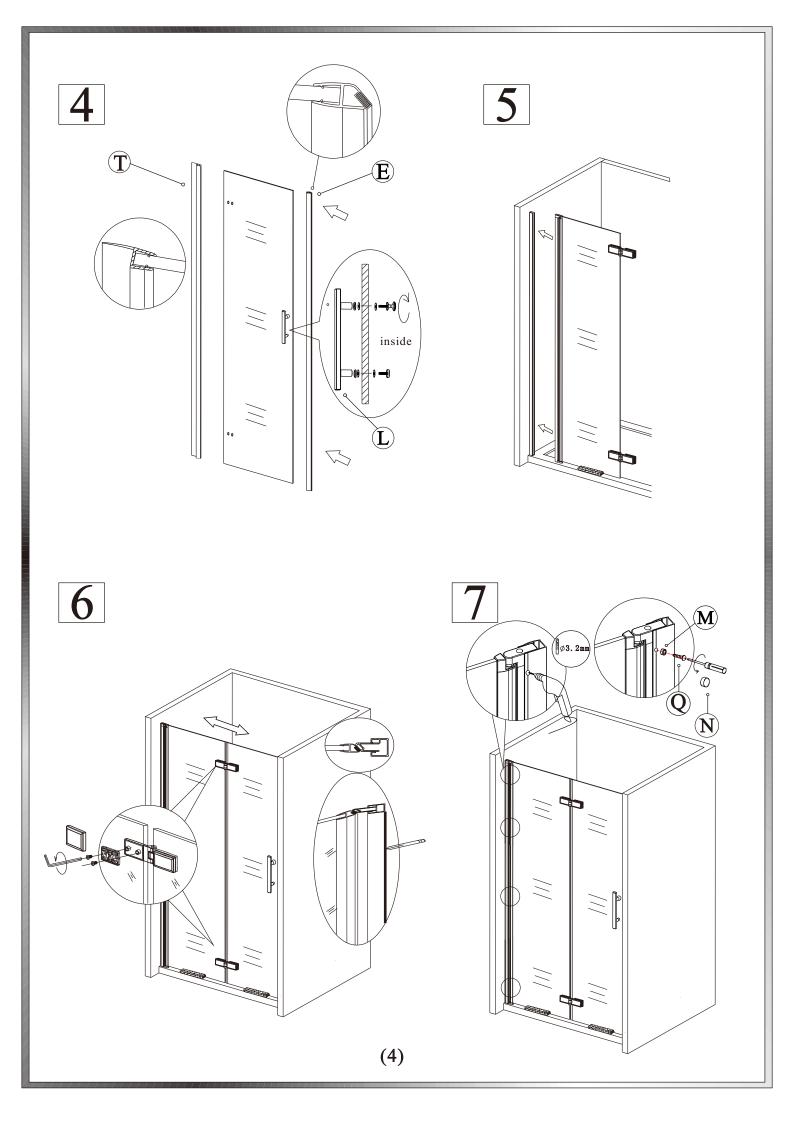


a b \bigcirc \bigcirc b a ø3mm <u>d</u>

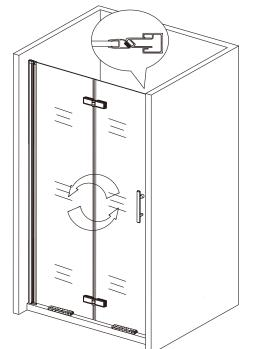


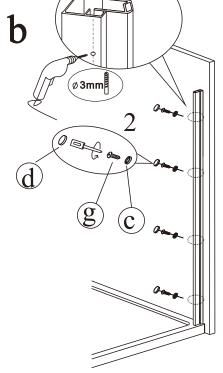




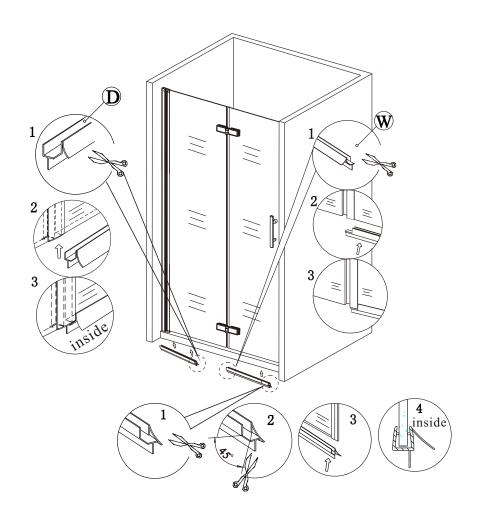




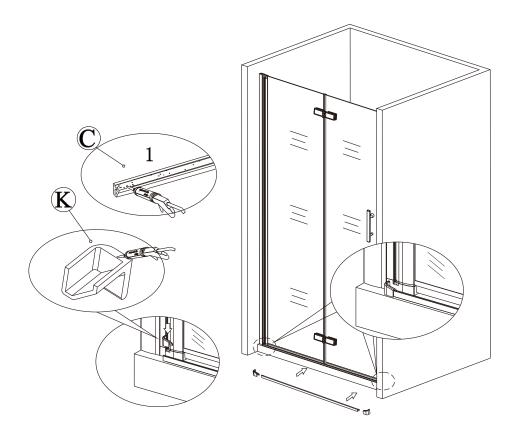

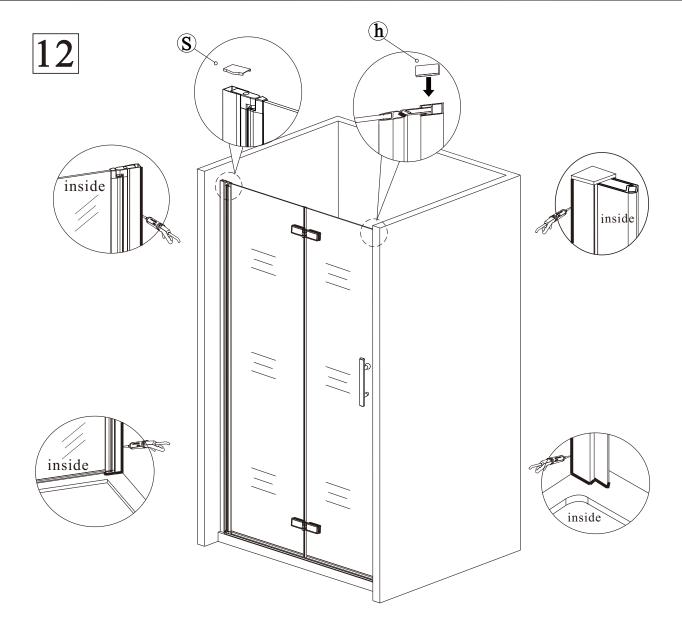


Once the wall profile is attached to the wall, run some silicone down the middle of the wall profile on the inside. Where the glass rests on the tray this also needs to be siliconed.


A. DOUBLE OUTWARD DOORS (7)

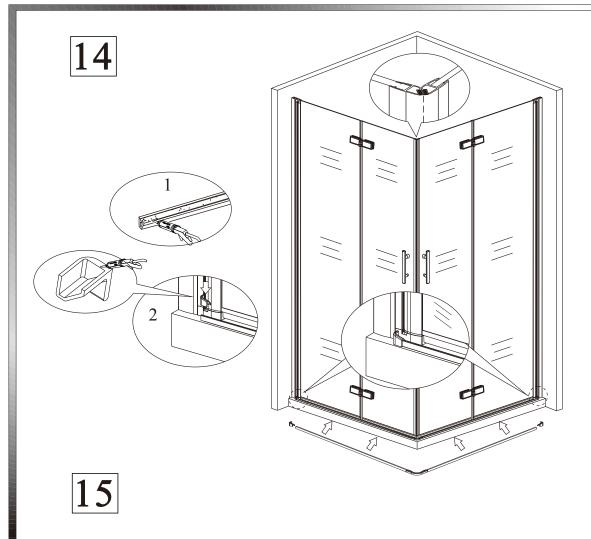

Once the wall profile is attached to the wall, run some silicone down the middle of the wall profile on the inside. Where the glass rests on the tray this also needs to be siliconed.

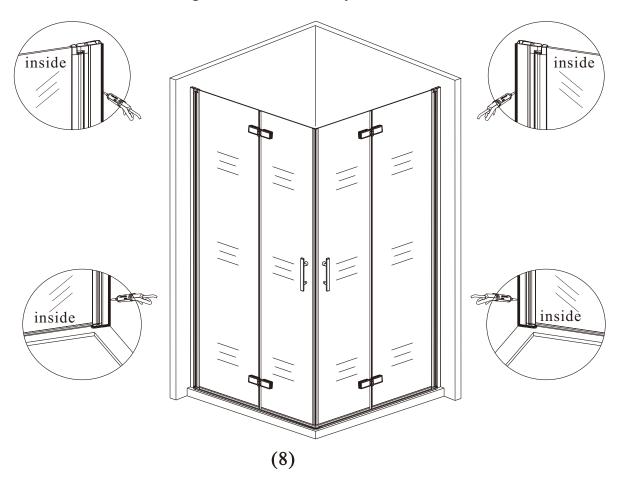

B. MATCH WITH SIDE PANEL

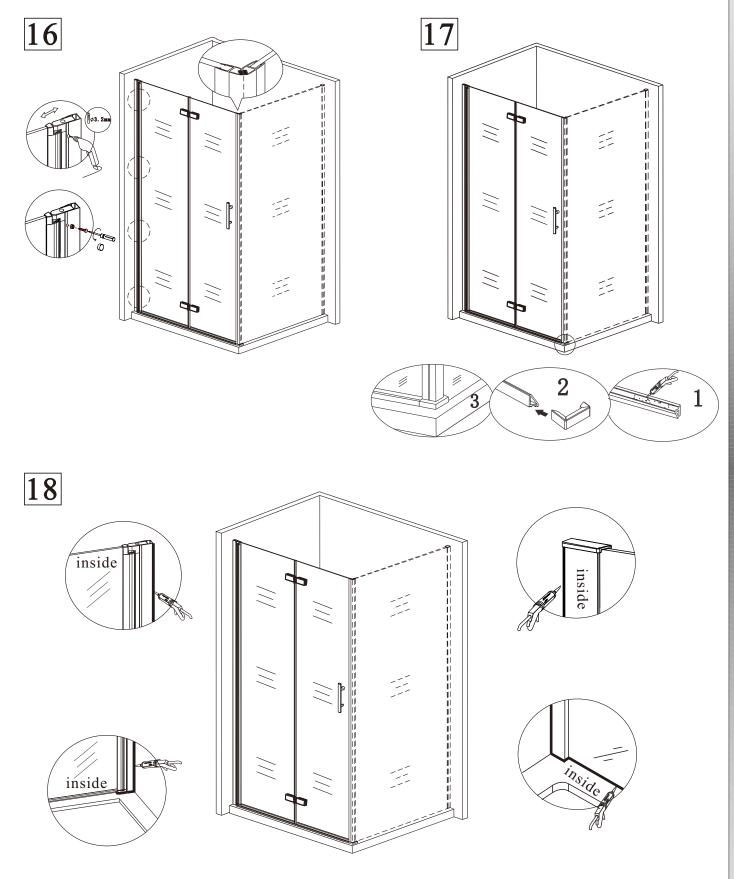

Once the wall profile is attached to the wall, run some silicone down the middle of the wall profile on the inside. Where the glass rests on the tray this also needs to be siliconed.

Cleaning & Maintenance

Clean the sundries regularly to prevent the drain from being jammed. Usually, clean the shower enclosure by mop with mild detergent.

Don't clean the shower enclosure with irritant detergent, such as alcohol, gasoline or other chemical cleaner.

Should there be any dirty stains on the shower enclosure, you may clean it by calico with toothpaste, but you need to clean it with water afterwards.

After the installation is completed, if you find there is much noise when the glass door moves, you may add small quantity of lubricant onto the roller wheel, slipping hook and the track.

(10)