



YEMA URBAN FLYGRAF WATCHES



POSITION A PUSHED-IN POSITION

Your Yema watch is equipped with a push/pull crown. A push/pull crown ensures waterproofness by sealing the crown to the case of the watch.

POSITION A MANUAL WINDING

Your Yema watch is equipped with a self-winding mechanical movement, this means it is wound automatically by wrist movements alone. To ensure optimum winding, wear your watch daily.

Before you first use the watch or if not worn for a long period of time, you will need to wind it manually by turning it clockwise.



POSITION B TIME SETTING

In order to adjust the time, pull out the crown to the last notch. Then turn it in either direction until the hands indicate the correct time. The seconds hand is stopped during this operation allowing the time to be set accurately.

BEZEL FUNCTION

Slide-rule bezel

A slide-rule bezel typically features markings that allow for a multitude of calculations. It is thus possible to measure your average speed, average fuel consumption, or even convert nautical miles to miles, and miles to kilometers. The calculations are done by aligning the outer bezel scale to the corresponding inner bezel scale to get the desired result.

For example, if we want to convert 100 miles to kilometers, we first need to know that 1 kilometer is roughly 0.621 of a mile. Set the outer bezel scale mark of 6.21 on the inner bezel scale marked '1'. The '1' marker on the outer bezel scale will be on M (16) on the inner bezel scale, which represents 160 KM. So, 100 miles equals 160 kilometres.



MAINTENANCE
OF YOUR YEMA WATCH

A YEMA watch requires little maintenance. However, some precautions must be taken to ensure the durability of your YEMA:

- Ensure that the crown is perfectly screwed down/pushed after winding up the movement and/or setting the time and the date. Once the crown is fully screwed down/pushed against the case, your YEMA watch is guaranteed waterproof.
- Avoid activities that may expose your watch movement to shocks.
- Never use chemicals to clean your YEMA watch. Use a microfiber cloth and wash the metal, rubber, fabric bracelets and waterproof cases from time to time with a soft brush and soapy water. We recommend that you do not use abrasive or corrosive products (solvents, detergents, perfume, etc.).
- Always rinse your watch with fresh water after it's been exposed to salt water.

IN-HOUSE CALIBER : YEMA2000 POWER RESERVE : 42 H

MODELS :

YEMA URBAN FLYGRAF | YFLY23-AMS

YEMA.COM

YEMA WATCHES reserves the right to modify the models illustrated in this publication at any time.