




YEMA URBAN RALLYGRAF WATCHES

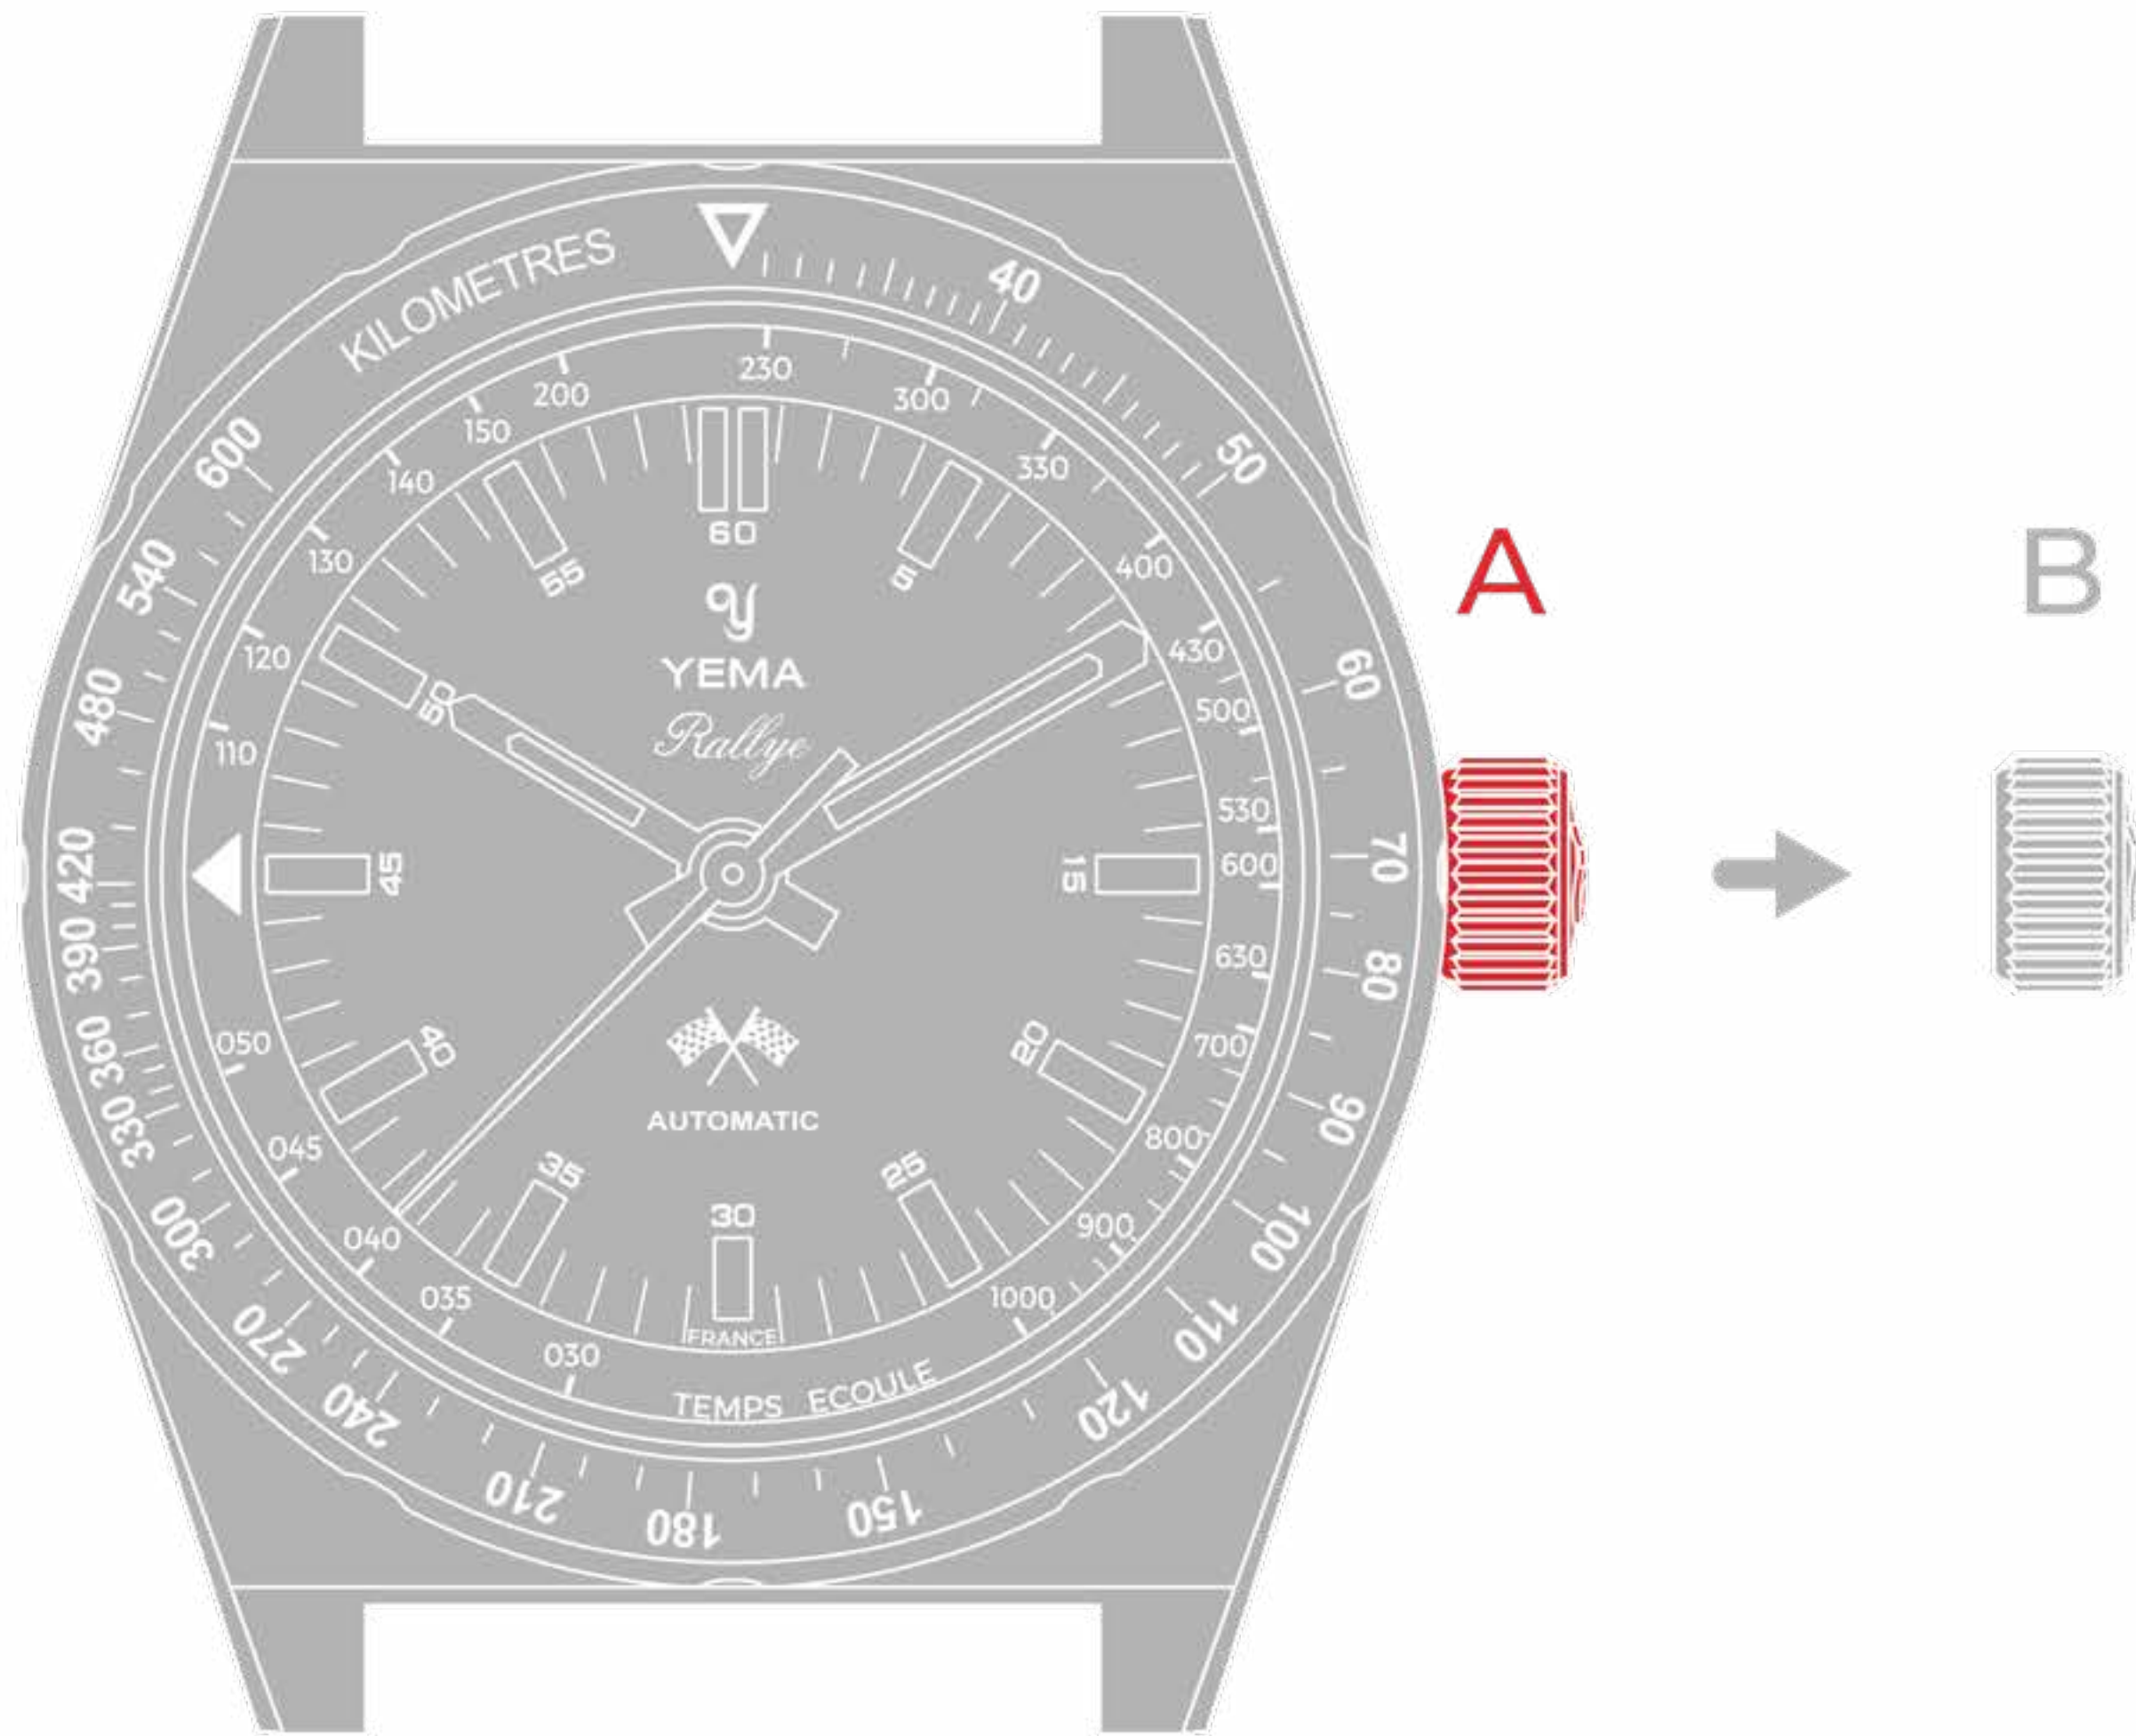

## **POSITION A PUSHED-IN POSITION**

Your Yema watch is equipped with a push/pull crown. A push/pull crown ensures waterproofness by sealing the crown to the case of the watch.

## **POSITION A** MANUAL WINDING

Your Yema watch is equipped with a self-winding mechanical movement, this means it is wound automatically by wrist movements alone. To ensure optimum winding, wear your watch daily.

Before you first use the watch or if not worn for a long period of time, you will need to wind it manually by turning it clockwise.



## **POSITION B TIME SETTING**

In order to adjust the time, pull out the crown to the last notch. Then turn it in either direction until the hands indicate the correct time. The seconds hand is stopped during this operation allowing the time to be set accurately.

## BEZEL FUNCTION

### Average Speed Calculator

The bezel helps calculate the average speed (km/h) over a covered distance (in km). The calculation of the average speed is quickly known by aligning the external rotating bezel indicating your covered distance with the internal bezel indicating the elapsed time needed to cover the said distance. After doing this, use the arrow located on the internal bezel at 9 o'clock to know your average speed.

For example, if you place your external bezel at 40 km over 30 min, the arrow will indicate 80km/h on your external bezel.



**MAINTENANCE**  
OF YOUR YEMA WATCH



**A YEMA watch requires little maintenance. However, some precautions must be taken to ensure the durability of your YEMA:**

- Ensure that the crown is perfectly screwed down/pushed after winding up the movement and/or setting the time and the date. Once the crown is fully screwed down/pushed against the case, your YEMA watch is guaranteed waterproof.
- Avoid activities that may expose your watch movement to shocks.
- Never use chemicals to clean your YEMA watch. Use a microfiber cloth and wash the metal, rubber, fabric bracelets and waterproof cases from time to time with a soft brush and soapy water. We recommend that you do not use abrasive or corrosive products (solvents, detergents, perfume, etc.).
- Always rinse your watch with fresh water after it's been exposed to salt water.

**IN-HOUSE CALIBER : YEMA2000    POWER RESERVE : 42 H**

**MODELS :**

**YEMA URBAN RALLYGRAF | YRAL23-AMS**

**YEMA.COM**

YEMA WATCHES reserves the right to modify the models illustrated in this publication at any time.