


YEMA URBAN YACHTINGRAF WATCHES

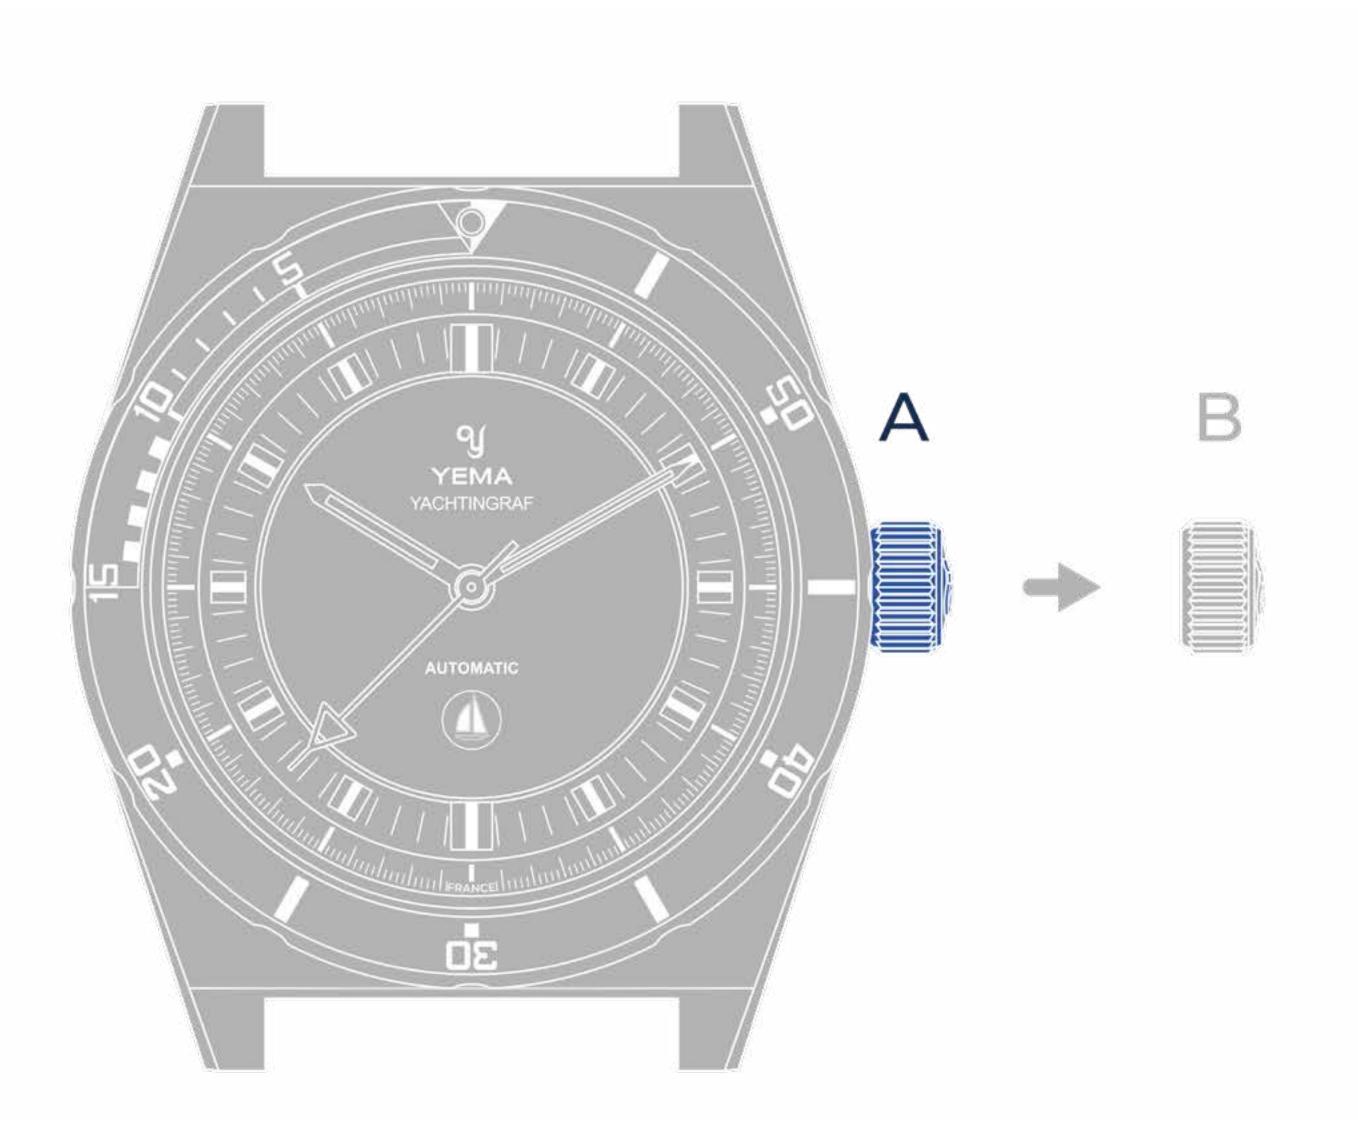


POSITION A PUSHED-IN POSITION

Your Yema watch is equipped with a push/pull crown. A push/pull crown ensures waterproofness by sealing the crown to the case of the watch.

POSITION A MANUAL WINDING

Your Yema watch is equipped with a self-winding mechanical movement, this means it is wound automatically by wrist movements alone. To ensure optimum winding, wear your watch daily.

Before you first use the watch or if not worn for a long period of time, you will need to wind it manually by turning it clockwise.

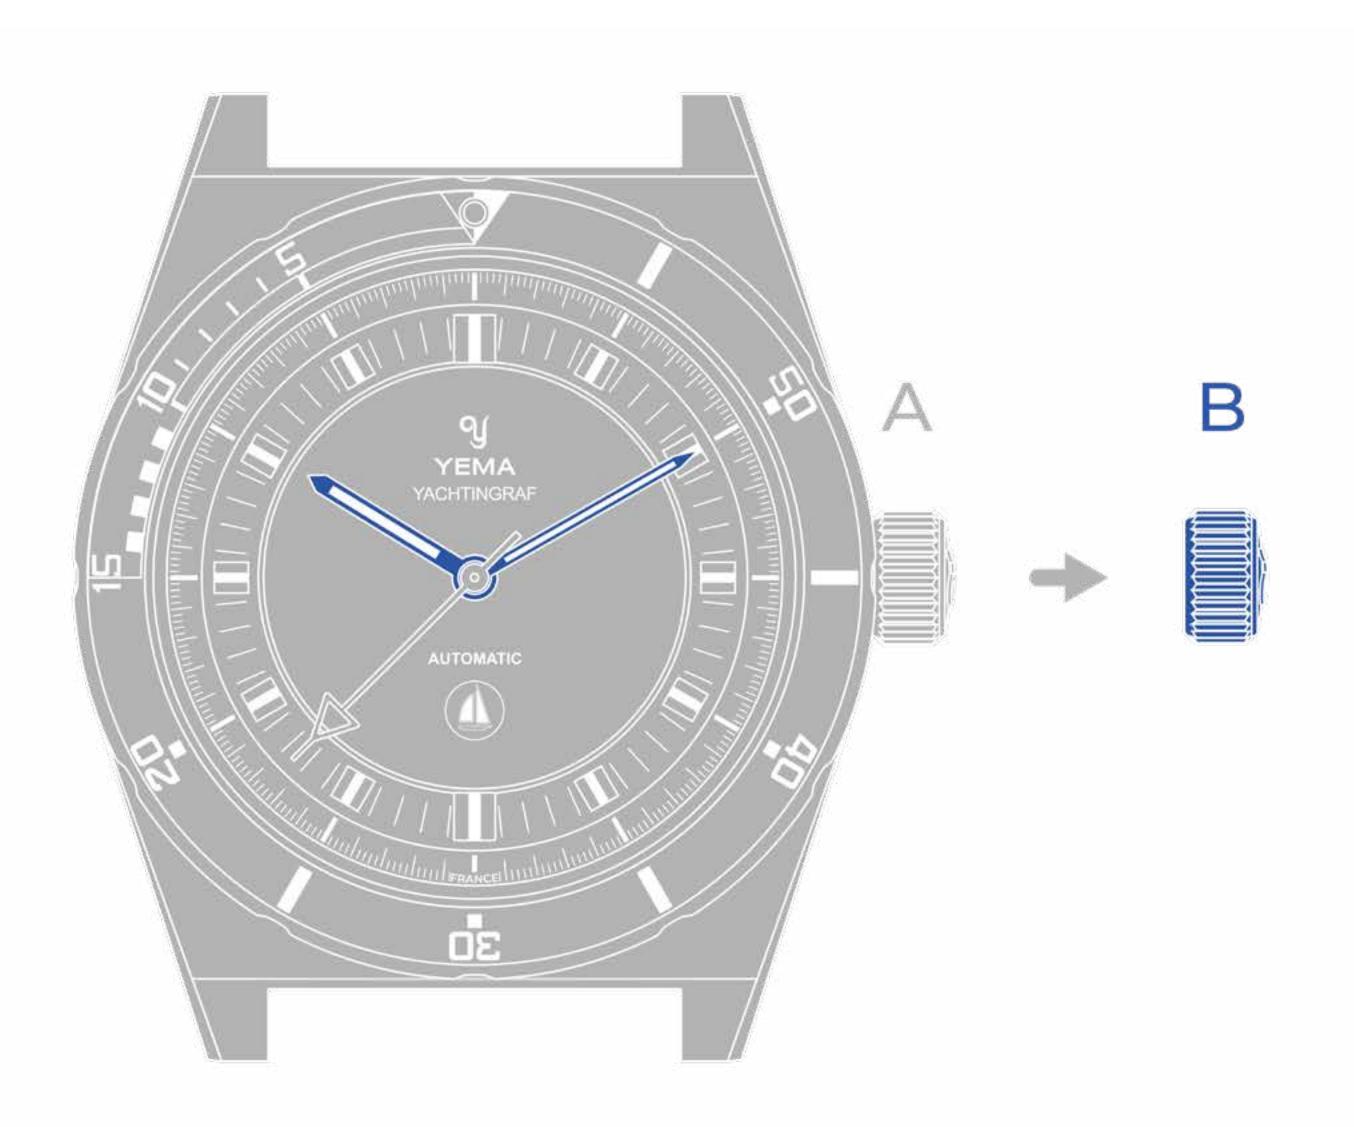

POSITION B TIME SETTING

In order to adjust the time, pull out the crown to the last notch. Then turn it in either direction until the hands indicate the correct time. The seconds hand is stopped during this operation allowing the time to be set accurately.

BEZEL FUNCTION

Countdown Bezel

A countdown bezel typically features a graduated 60-minute scale that reads counterclockwise or that "counts down" from 60 to zero. This allows the wearer to measure the time remaining in an event, such as a race. Countdown bezels are usually bidirectional.

To use a countdown bezel, simply turn the bezel so that the time remaining until the start of the event aligns with the minute hand. Then, once the minute hand reaches zero, the countdown is complete.

For example, if the remaining time before a race starts is 15 minutes, align the '15' marker on the bezel with the minute hand. Once the minute hand reaches the '0' (triangle) marker, it will signal the start of the race and the end of the countdown.



MAINTENANCE OF YOUR YEMA WATCH

A YEMA watch requires little maintenance. However, some precautions must be taken to ensure the durability of your YEMA:

- Ensure that the crown is perfectly screwed down/pushed after winding up the movement and/or setting the time and the date. Once the crown is fully screwed down/pushed against the case, your YEMA watch is guaranteed waterproof.
- · Avoid activities that may expose your watch movement to shocks.
- · Never use chemicals to clean your YEMA watch. Use a microfiber cloth and wash the metal, rubber, fabric bracelets and waterproof cases from time to time with a soft brush and soapy water. We recommend that you do not use abrasive or corrosive products (solvents, detergents, perfume, etc.).
- · Always rinse your watch with fresh water after it's been exposed to salt water.

IN-HOUSE CALIBER: YEMA2000 POWER RESERVE: 42 H

MODELS:

YEMA URBAN YACHTINGRAF | YYAC23-AMS

YEMA.COM

YEMA WATCHES reserves the right to modify the models illustrated in this publication at any time.