

Adapt-IQ 10.1" User's Manual

Model: MCT-10QDS, MCT-10QDS-POE, MCT-10HPQ, MCT-10HPQ-POE



Please keep this manual for future reference.

TABLE OF CONTENTS

	PAGE
DECLARATION.....	1
PRODUCT INSTRUCTIONS.....	1
POWERING ON THE PRODUCT.....	2
WITHOUT MOUNTING BRACKET.....	2
WITH MOUNTING BRACKET.....	3
INSERTING THE SD CARD.....	3
INSERTING USB DEVICES.....	3
HDMI OUTPUT.....	3
HOME SCREEN.....	4
SYSTEM BAR.....	8
APPLICATIONS.....	11
LANGUAGE.....	12
DATE & TIME.....	13
VOLUME.....	14
BRIGHTNESS.....	14
SCHEDULED POWER ON/OFF.....	15
WI-FI.....	19
ETHERNET.....	20
BLUETOOTH.....	21
VIRTUAL KEYBOARD.....	23
SWITCH INPUT METHODS.....	24
TAKE PHOTOS & SHOTS.....	26
SURF ONLINE.....	29
BROWSE FILES.....	30
PLAY MEDIA.....	31
INSTALL & UNINSTALL APPS.....	31
INSTALL APPS.....	31
UNINSTALL APPS.....	35
RESET TO FACTORY DEFAULT.....	36

Declaration

- ✓ Please read the instructions carefully before using the device.
- ✓ Do not put the product in high temperature, humid or dusty environment.
- ✓ Do not drop this product.
- ✓ Do not power off the device when it's formatting or upgrading, otherwise it will cause an operation system error.
- ✓ This product is not waterproof.
- ✓ Use only approved add-on devices.

Product Instructions



1. Camera (optional): 5M pixels camera

2. LED Indicator:

Green	Power supply is on.
-------	---------------------

Light Off	Power supply is off.
------------------	----------------------

3. **SD Card Slot / Cover:** support external SD card
4. **Exit Button:** return to the previous page
5. **Function Keys (Up / Down):** select the up/down item
6. **Function Keys (Vol+ / Vol-):** adjust the system volume
7. **Speakers:** audio output
8. **VESA Mounting Holes:** for installing the desktop base or wall mount bracket
9. **DC In Jack:** powered by 12V/2A DC input
10. **Add-on module slot:** to add optional modules
11. **10/100Mbps RJ45 Ethernet Port:** Ethernet connection
12. **USB Port:** supports USB 2.0 Host type A
13. **Micro-USB Port:** supports Micro-USB 2.0
14. **Power Switch:** ON/OFF
15. **Headphone audio port**
16. **HDMI Port:** HDMI Type C output



17. **DC In Jack:** powered by 12V/2A DC input
18. **Security Plate Insert**
19. **Battery Stand:** battery stand with battery cell (optional)

Powering on the Product

Without Mounting Bracket

Step 1 Plug in the power adapter.

Step 2 Switch the power switch (**#14** in **Product Instruction**) next to DC in jack to **ON**.

Mounting Bracket

Step 1 Install the mounting bracket to the back of the tablet and gently tighten the installation screws into the VESA screw holes.

Step 2 Plug the power adapter into the DC in jack (**#16** in **Product Instruction**) at the bottom of the mounting bracket, and then turn on the power switch (**#14**) at the bottom of the product.

Note: The mounting bracket contains a battery pack. The power adapter can be unplugged once charging has been completed. Please fully charge the battery before first use.

Inserting SD Card

This product supports external SD card. Please insert your SD card into the SD Card Slot (**#3** in **Product Instruction**)

Inserting USB Devices

This product supports USB and Micro-USB drives.

USB

Plug your USB device into the USB port (**#12** in **Product Instruction**) then you can manage files via the File Browser. (See **Browse Files**).

Micro-USB

 
Connect your USB device to the Micro-USB port (**#13** in **Product Instruction**) via a Micro-USB-to-USB cable.

Click the “**Turn on USB storage**” button in the “**USB mass storage**” window that pops up automatically making the device memory visible on your computer.

HDMI Output

This product supports HDMI output. Please plug one side of the HDMI cable into the HDMI port (**#16** in **Product Instruction**) and plug the other side of


the HDMI cable into the HDMI port of the monitor.
HDMI output display can be turn on/off in system settings.

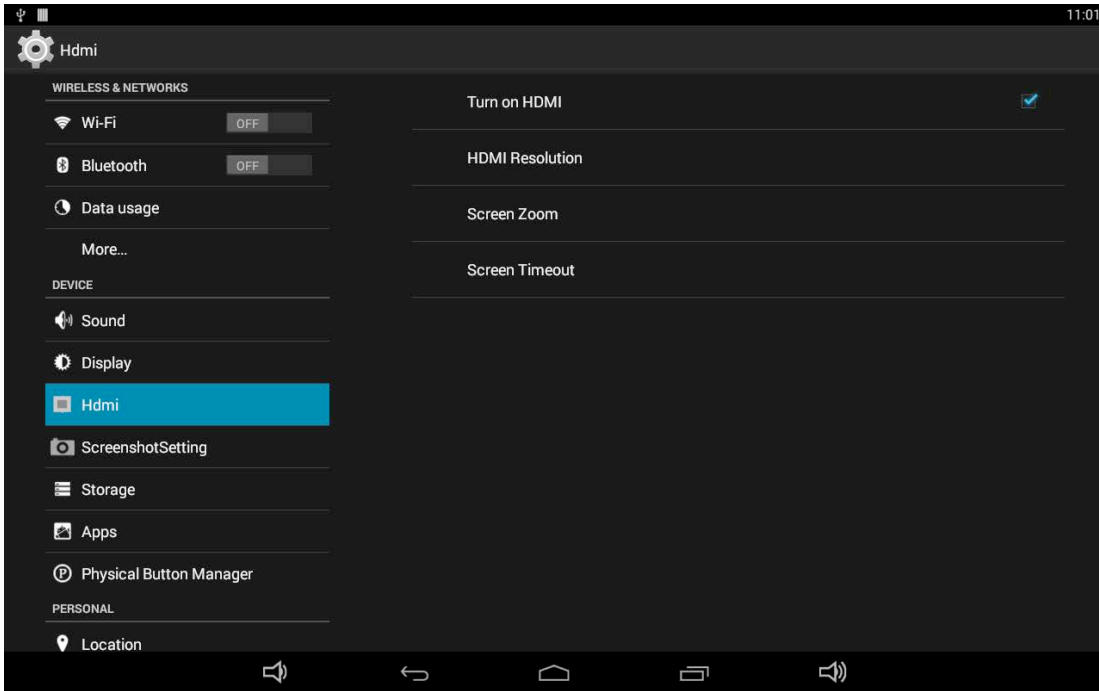

Default HDMI resolution is 1080P, you can set it to 720P or lower.


Home Screen

 In the home screen, you can press and hold the blank space to change the wallpaper or drag widgets to desktop.

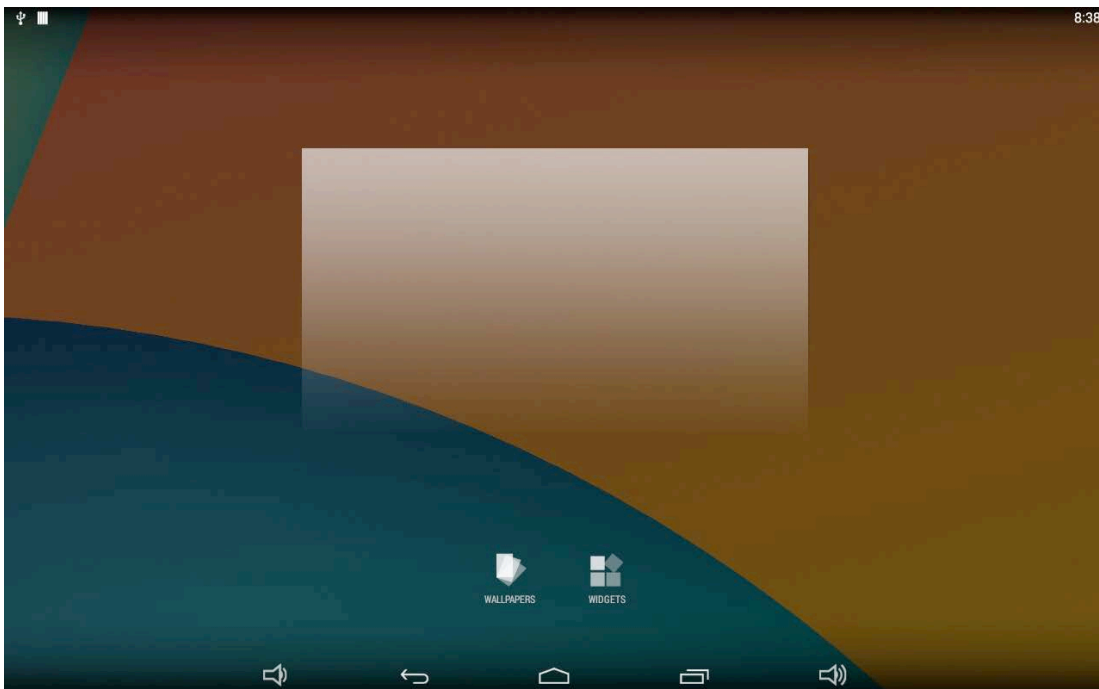


Change Wallpaper:

 1. Click “WALLPAPER”.

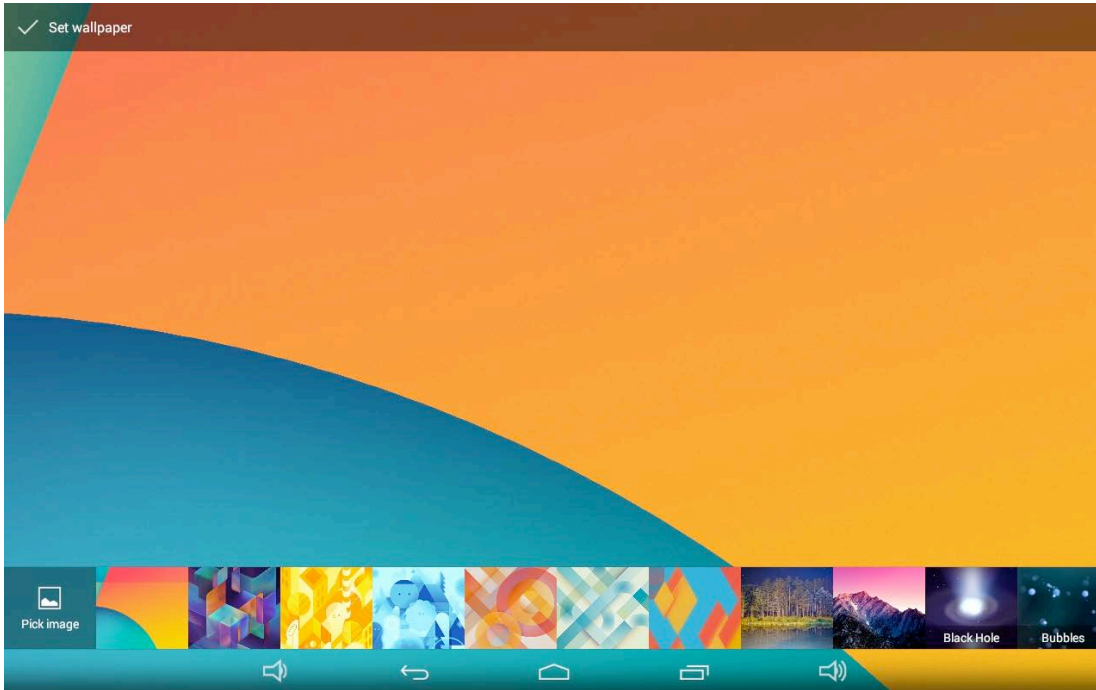

 
2. Select a picture from system presets or your own pictures.

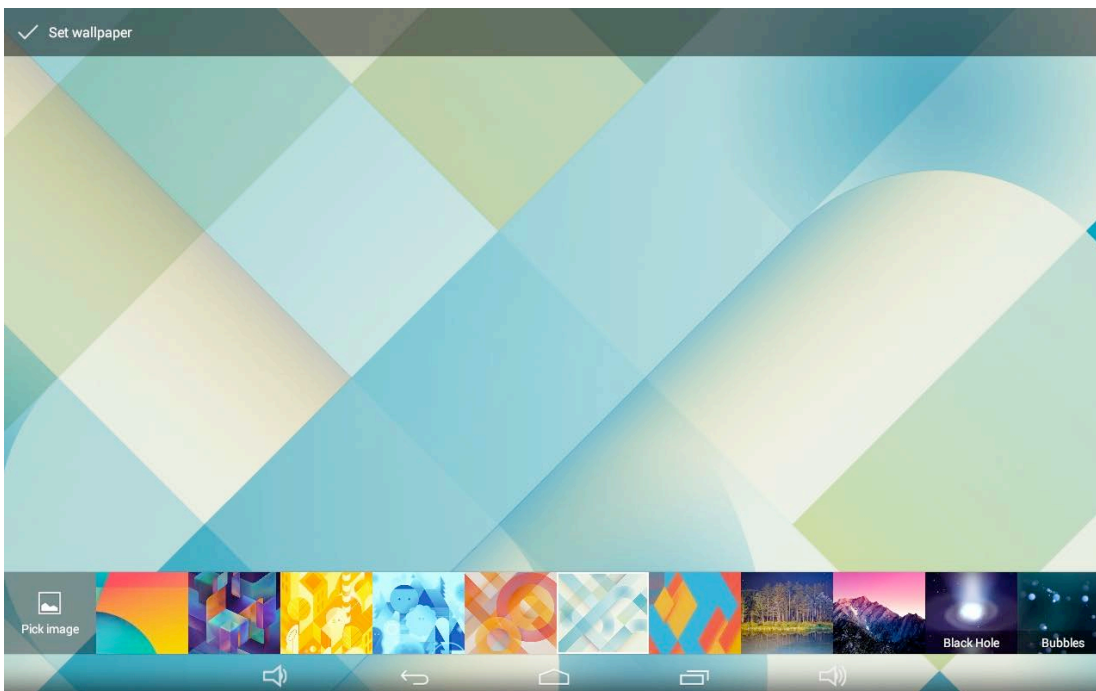


3. Click “Set wallpaper” on the upper-left corner of the screen to apply the wallpaper.

Add Widgets:

 1. Click "WIDGETS".

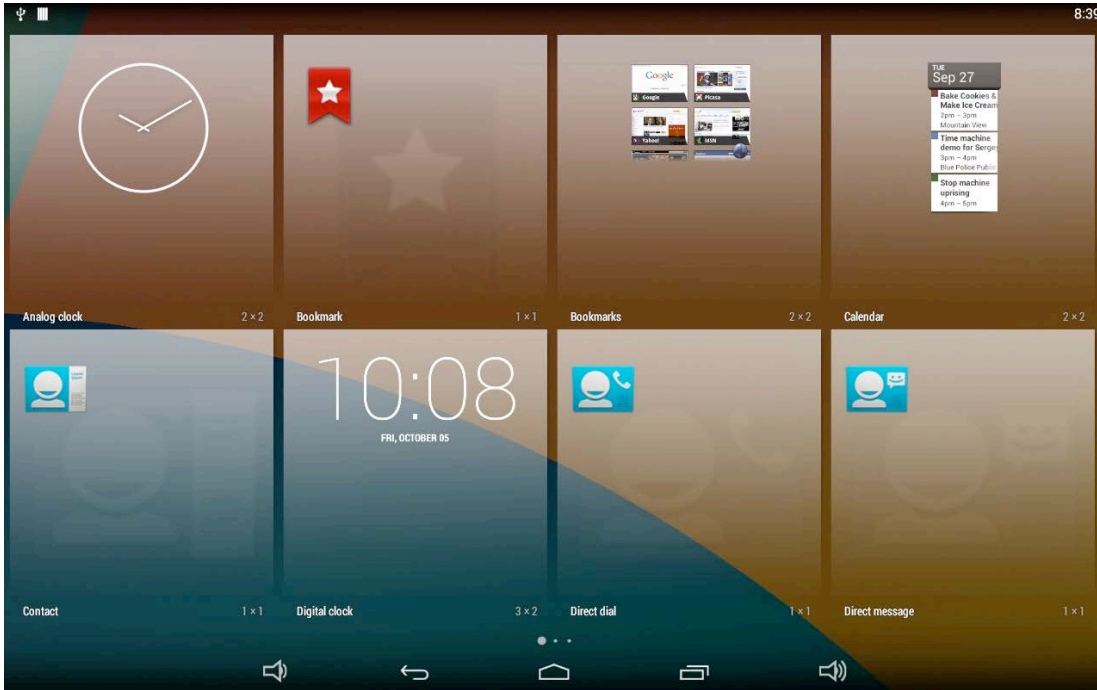


 2. Press and hold a widget and drag it to desktop.

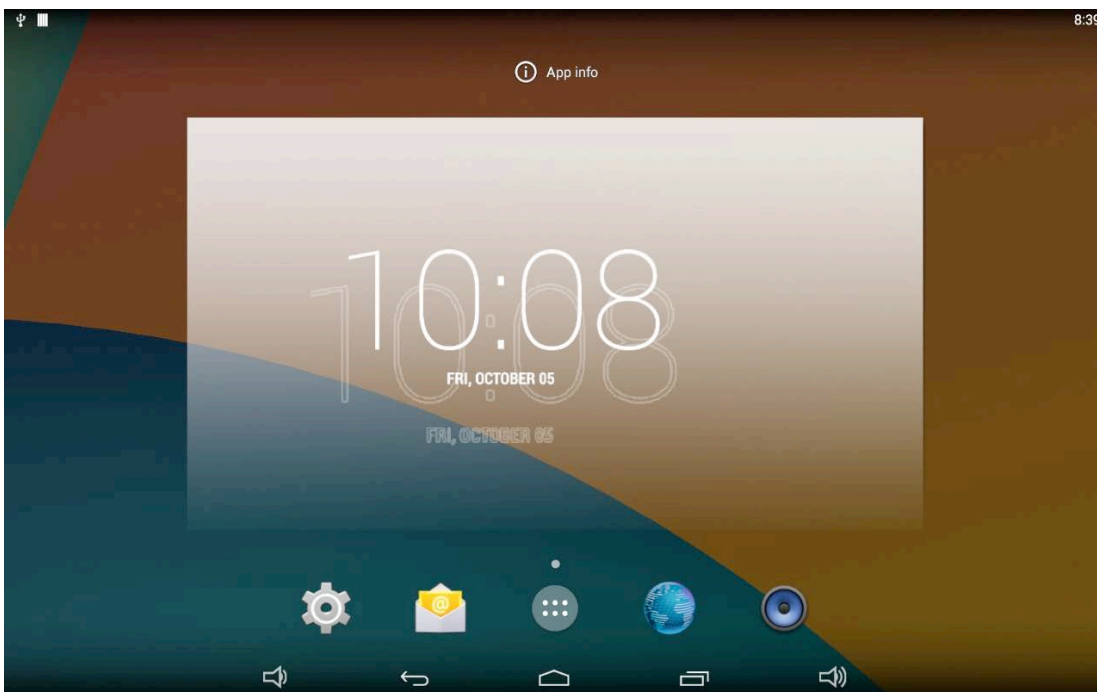


3. A dialog box prompts you to allow adding a widget for the first time. Check

 the checkbox and then click “Create”.

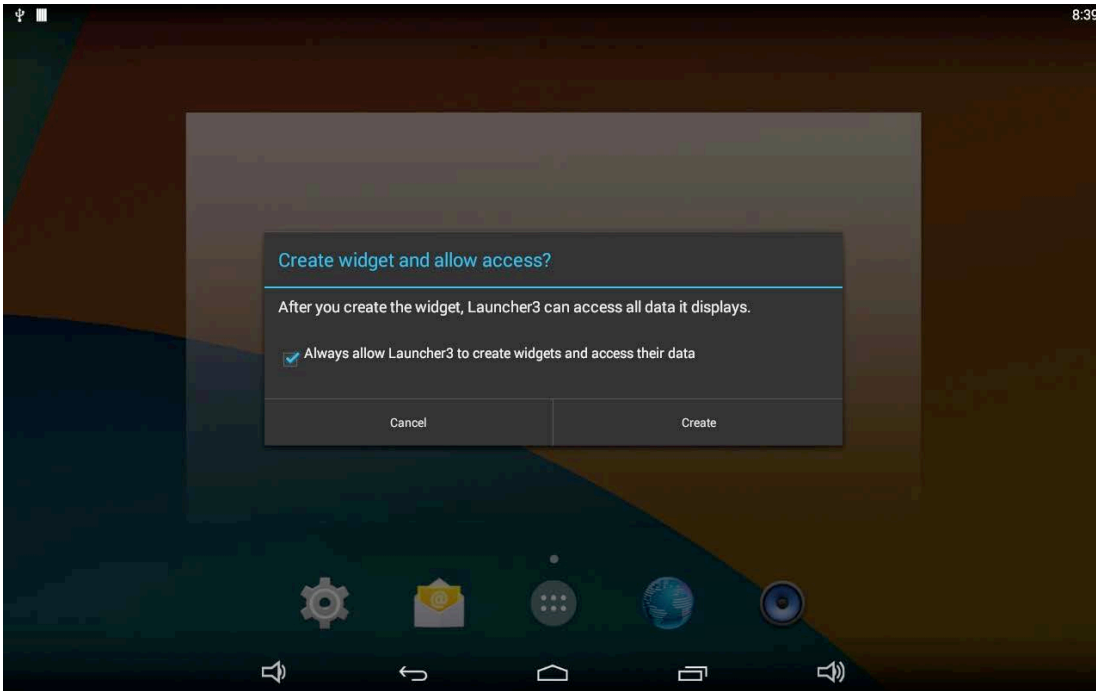

 4. If you want to remove an icon, press and hold the widget and drag it onto “Remove” at the top of the screen and drop it until it turns red.

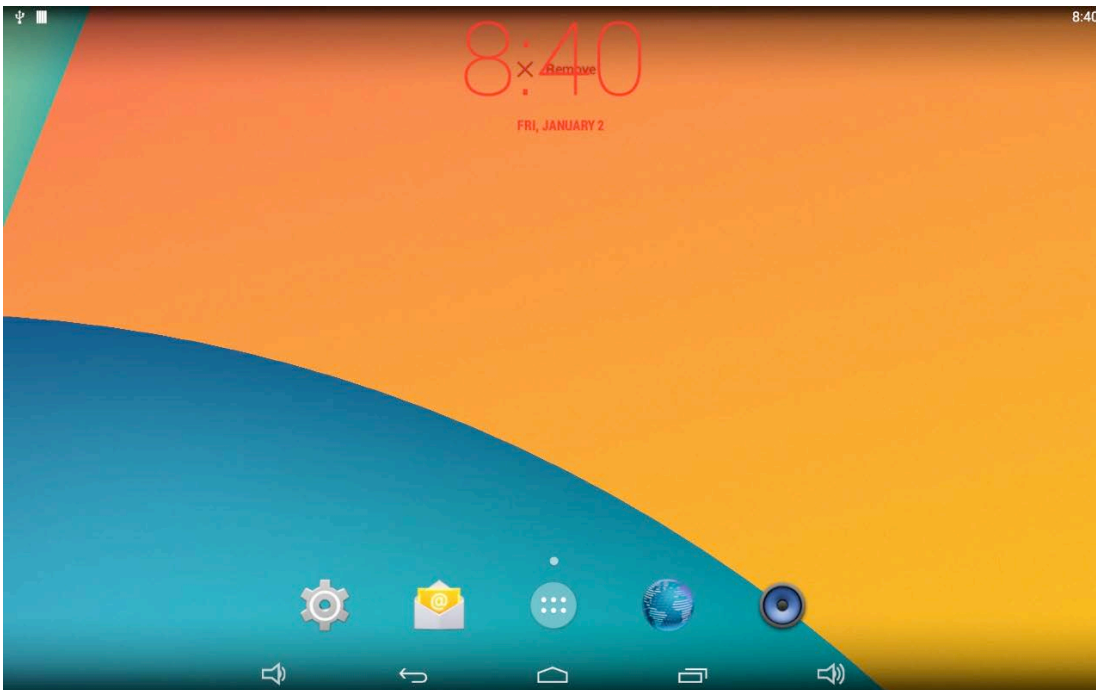


System Bar


Navigation Buttons



 
1. **Volume-**: Decrease the system volume.
2. **Back**: Return to the previous page.
3. **Home**: Return to the home screen.
4. **Recents**: Switch between recently used apps.
5. **Volume**: Increase the system volume

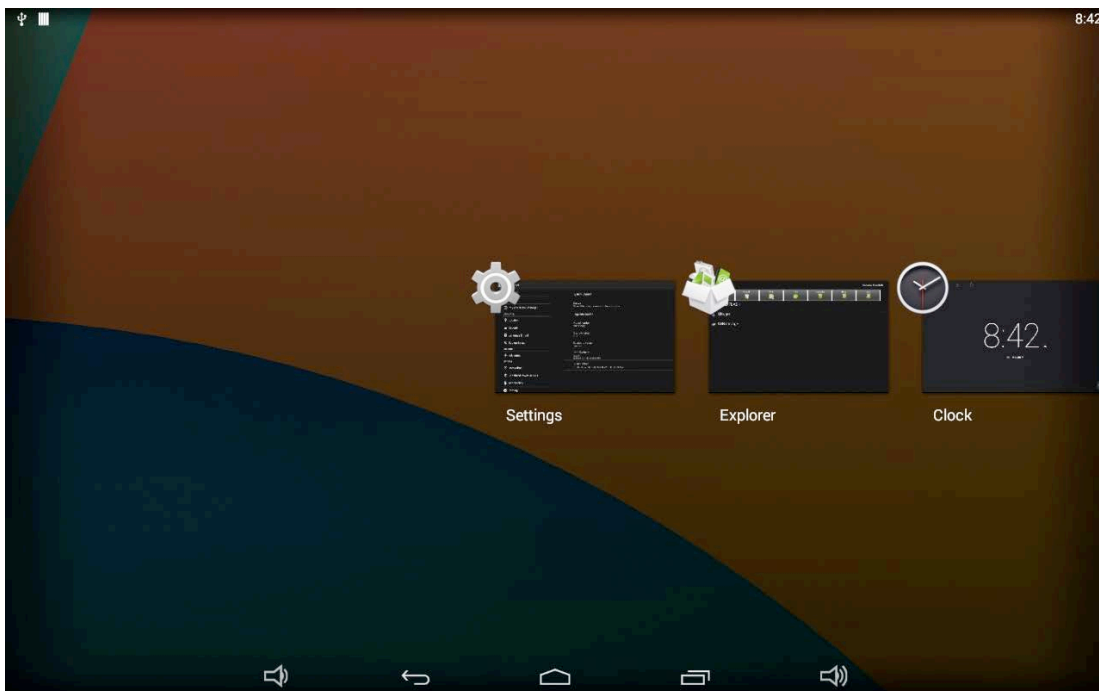

 To remove an app from the list, press and hold the icon to select “Remove from list”.

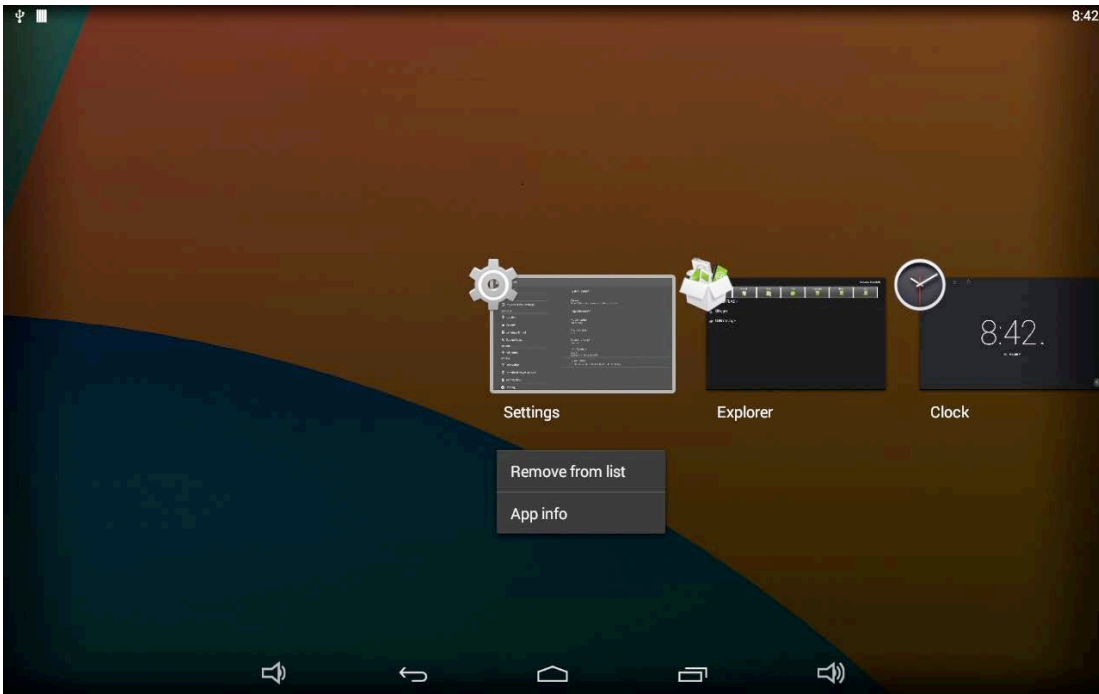

 Or swipe the app item up or down to remove it.

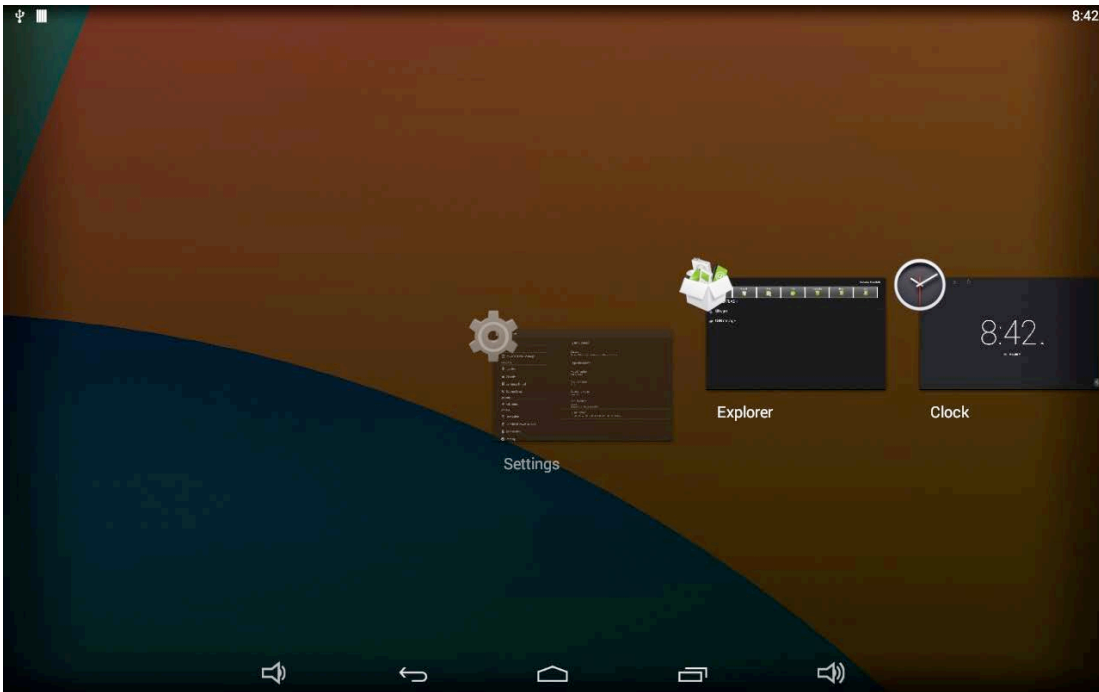


Status Notifications




Status bar at the top of the screen displays system status, such as time, Wi-Fi, SD card and USB connection etc.

 Pull down the upper-left corner to open the status window.

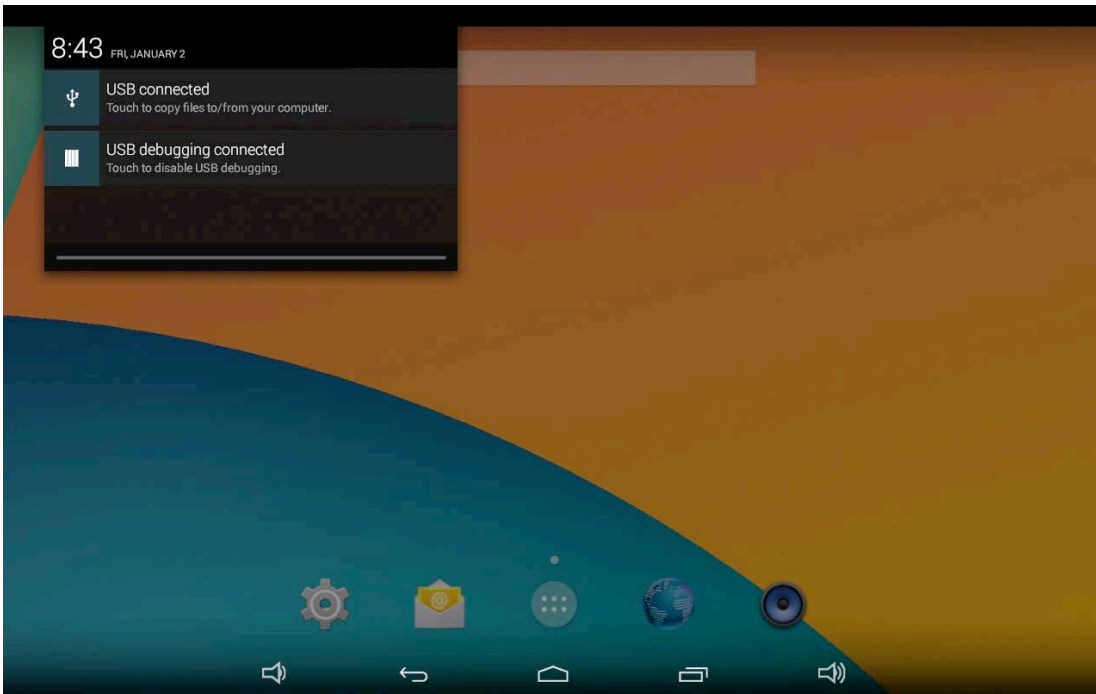


 Pull down on the upper-right corner to open the shortcuts window which contains brightness adjustment, Wi-Fi, auto rotate, airplane mode and location switch, along with the system settings entrance.

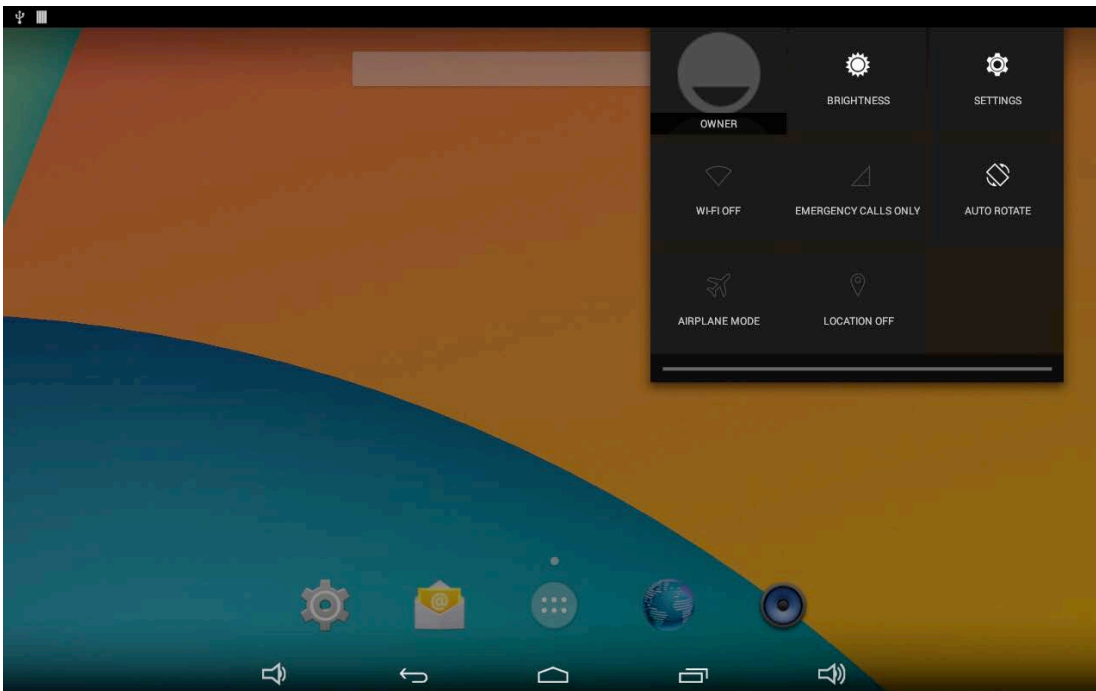


Applications

 Click the bottom of home screen to enter the applications page.

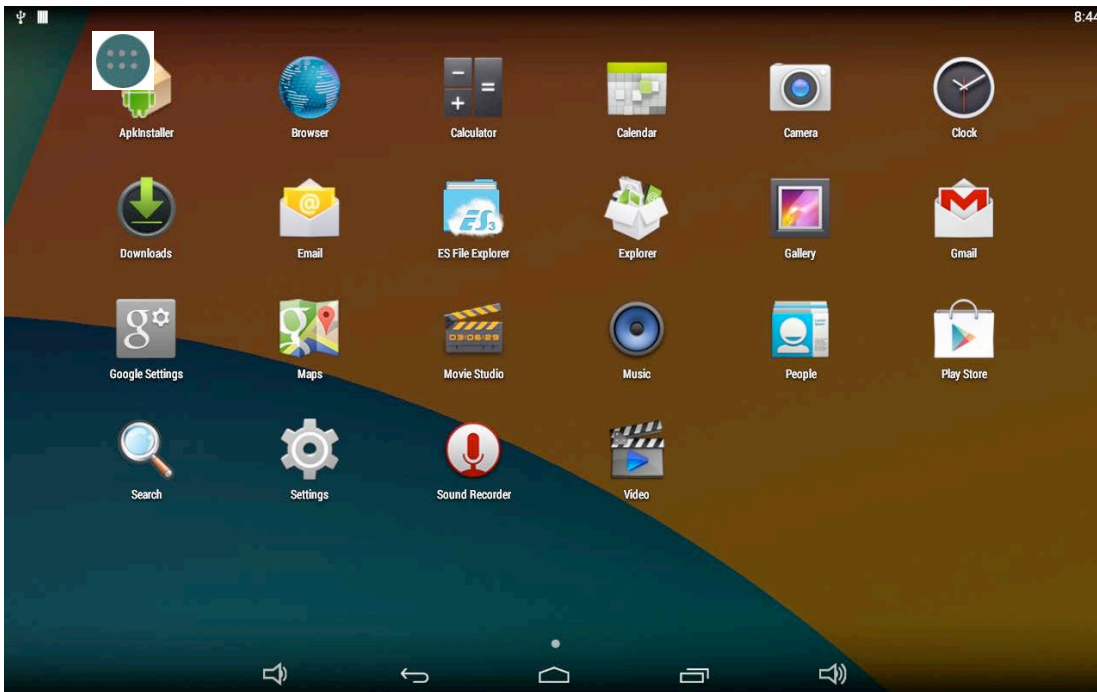


The installed applications will be shown here and you can open an app by clicking its icon.

 To find an app easily, you can create a shortcut by pressing and holding the icon and drag it to the home screen.

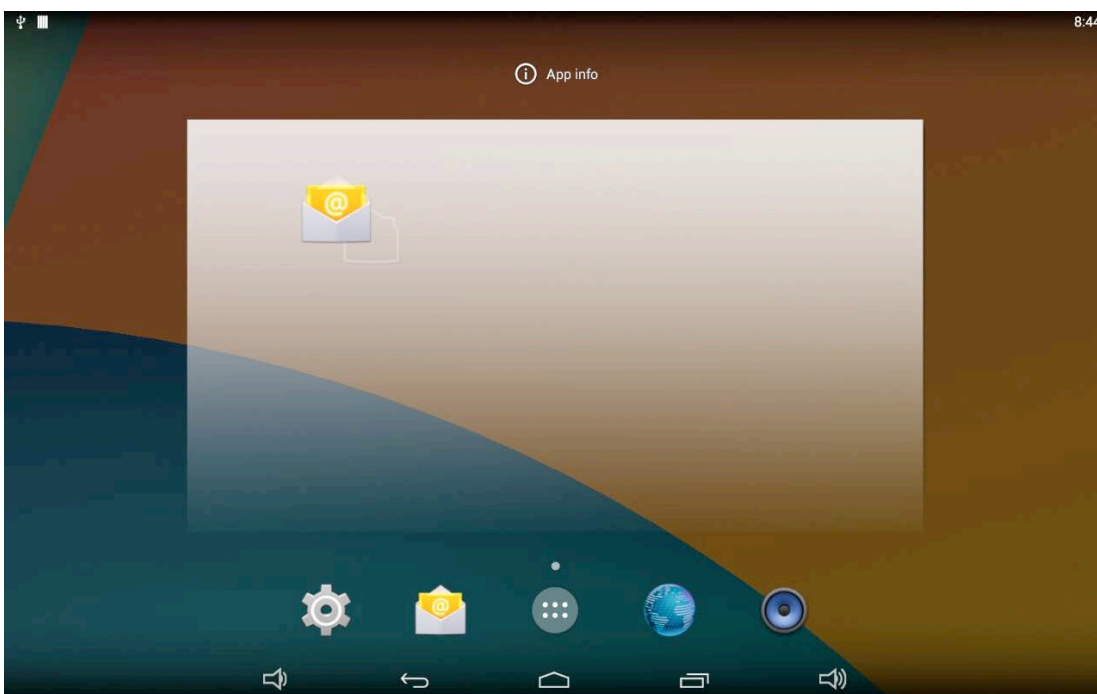


Language

 In the App list, click “**Settings**” to open the system setting app, and select the “**Language & input**” option.

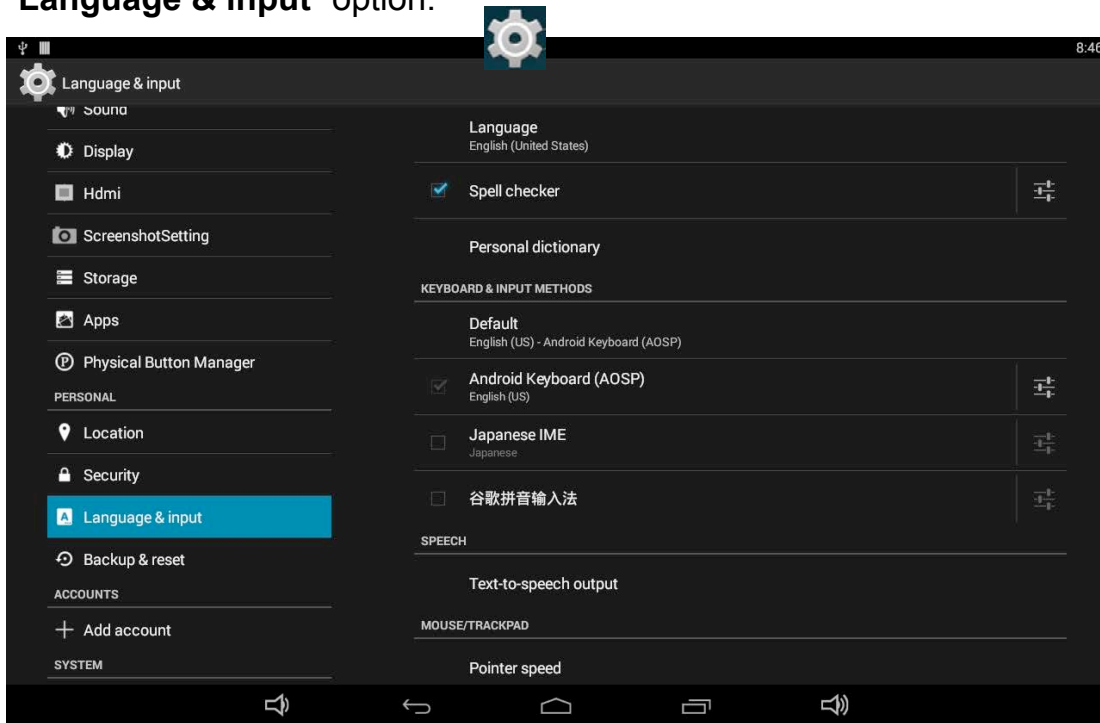


 Click the first option “**Language**” under “**Language & input**”, and then you can change the system language according to your preference.

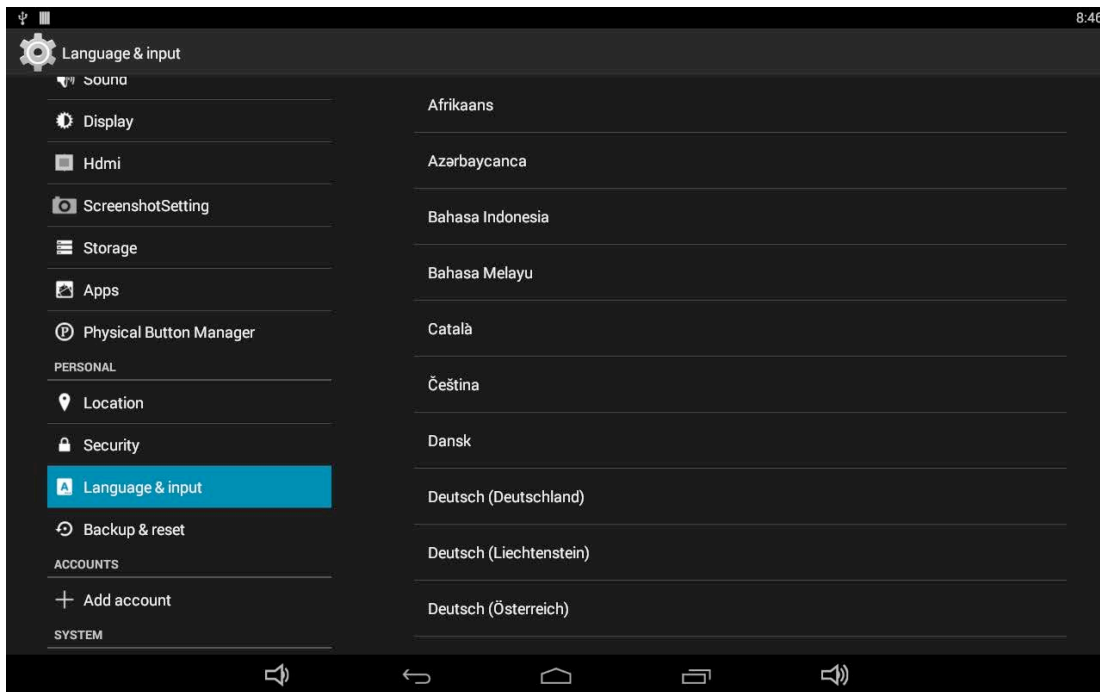


Date & Time

 In the App list, click “**Settings**” to open the system setting app, then select the option “**Date & time**”.

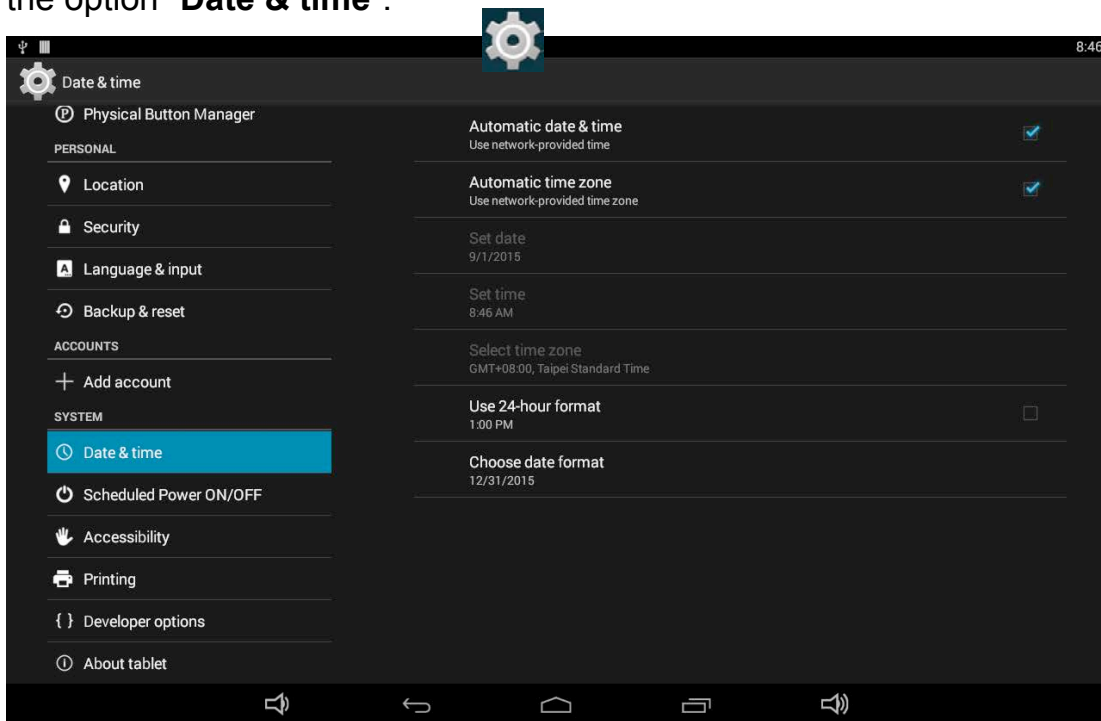



 If you enabled the option “**Automatic date & time**” under “**Date & time**”, system date, the time will be synchronized automatically with network time when you connected a Wi-Fi network.

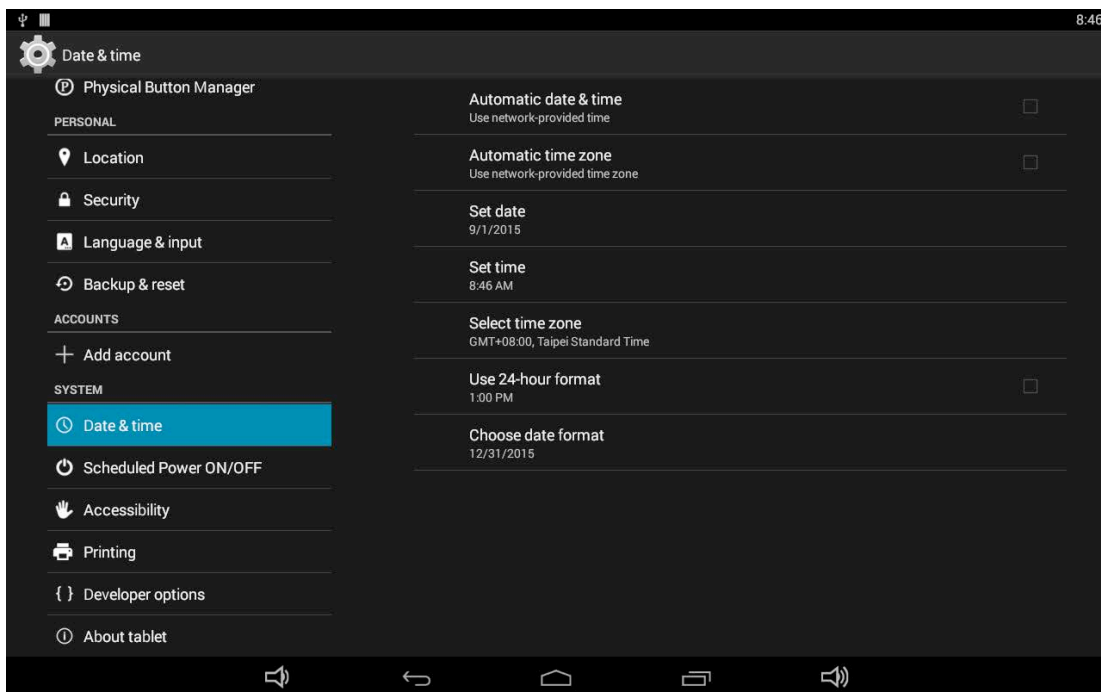If you want to set the time manually, you need to disable “**Automatic date & time**” and “**Automatic time zone**”.



In this option, you can also set time zone, time notation and date format.

 
Volume

On the system bar, click the **Volume-** icon  to decrease the system volume, and click the **Volume+** icon  to increase the system volume.

Or you can press the function keys (#6 in **Product Instruction**) on the top of the product to adjust the volume.

Brightness

Pull down the upper-right corner of the screen to open the shortcuts window, and then click “Brightness”.

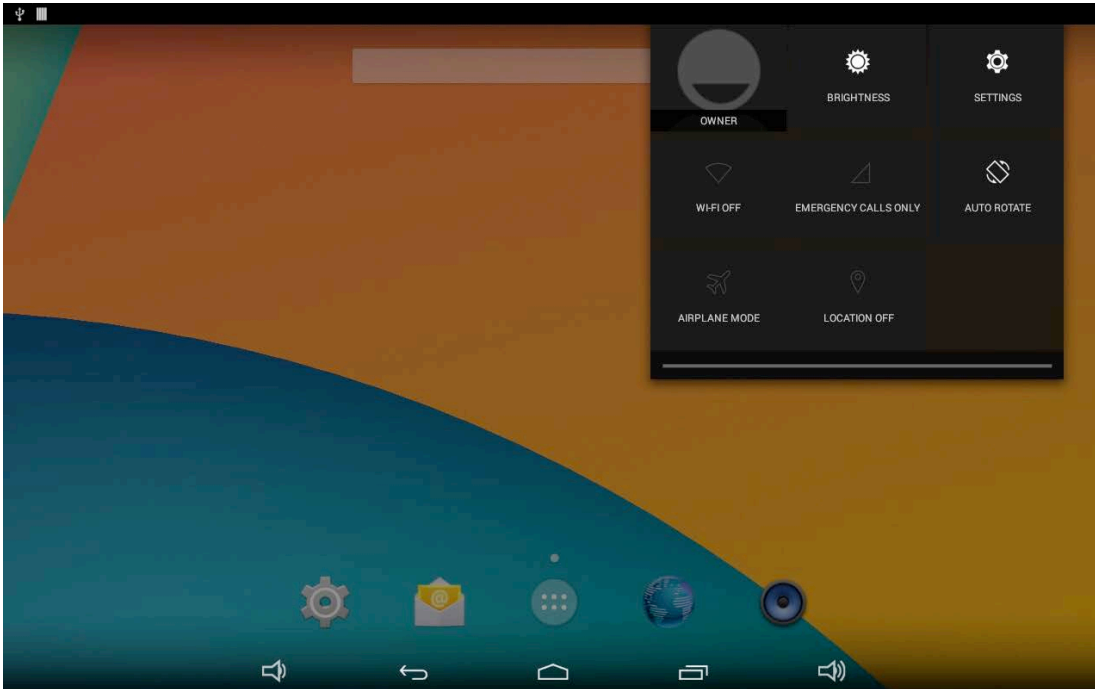


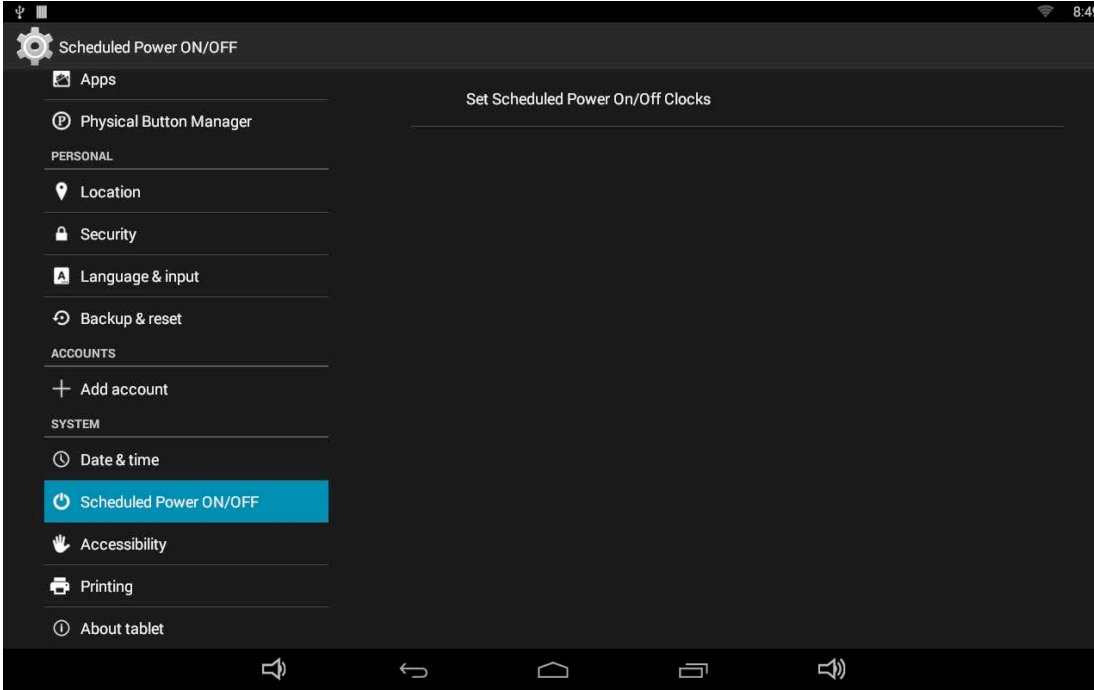 
Slide the brightness button to adjust the brightness of the screen, or turn on **Auto** switch to automatically adjust the display's brightness to the appropriate level for the current ambient light.




Scheduled Power On/Off

This function is used to power the device on and off automatically at a set time.


In the App list, click “**Settings**”  to open the system setting app, and then select the option “**Scheduled Power ON/OFF**”.



 
Click the single option “**Set Scheduled Power On/Off Clocks**”.

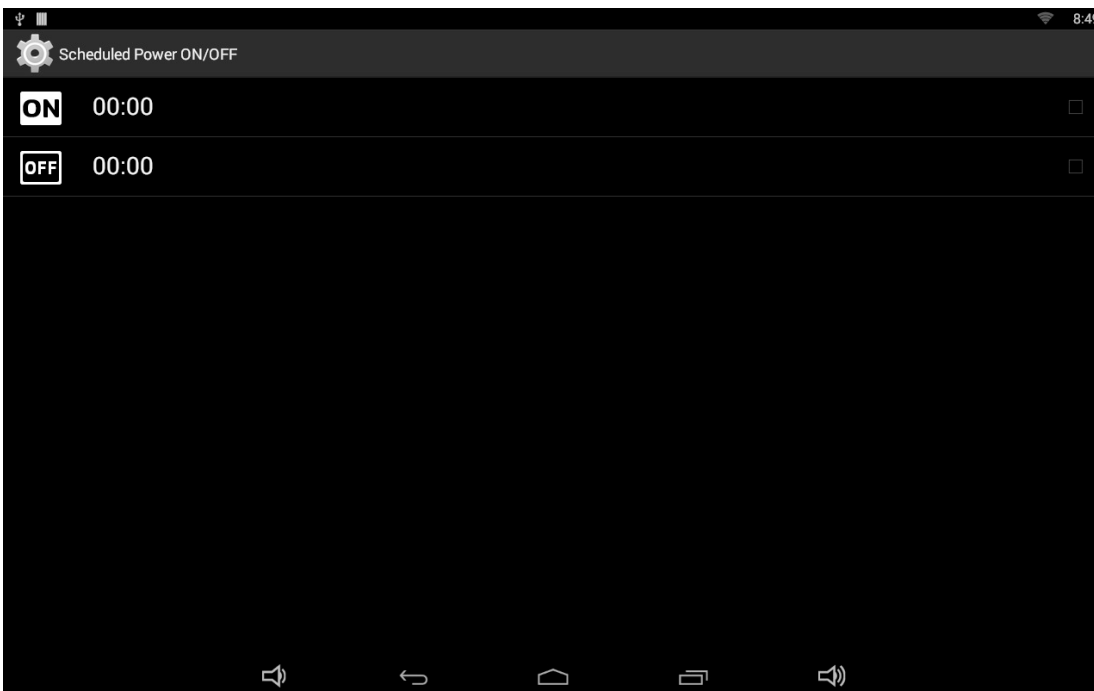

 
The top row is for powering on the clocks, the second row is for powering off the clocks. Click the top row to enter the settings for powering on clocks.

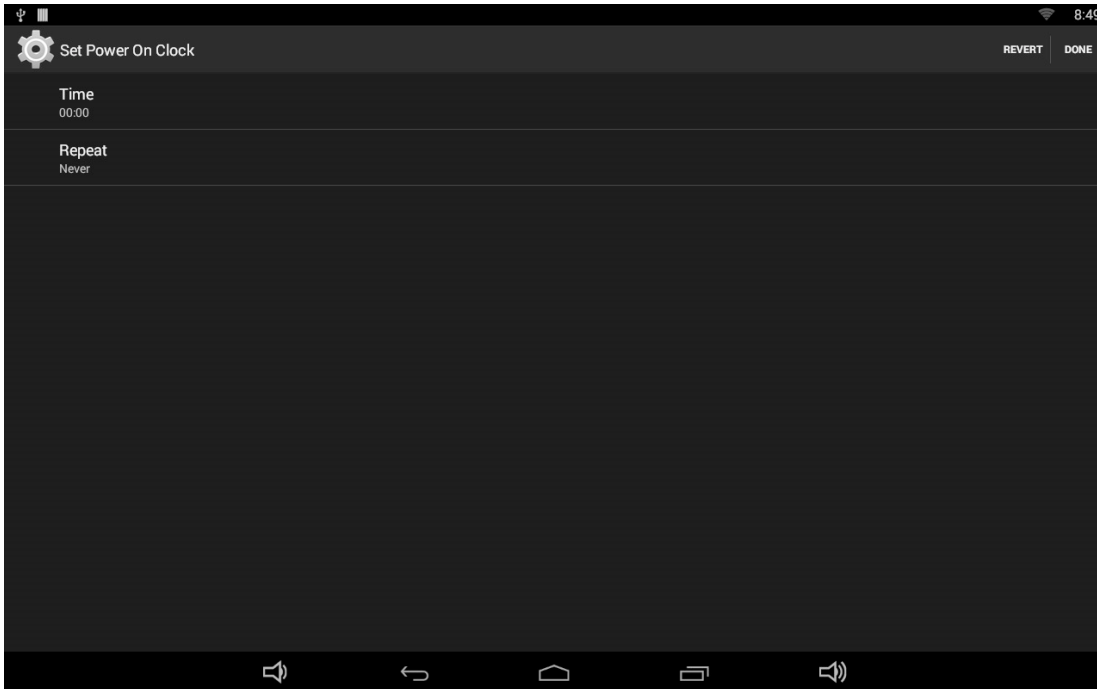

 
Click the option “**Time**” to set the power on time of this device.

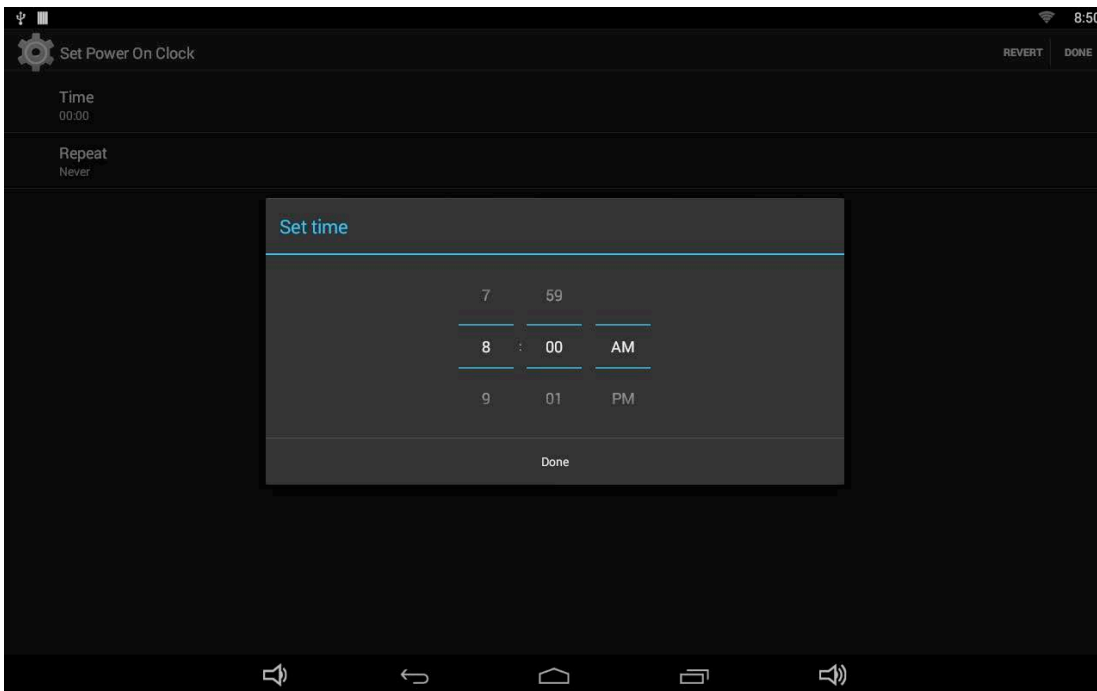

 
Click the option “**Repeat**” to select the days which will power on this device at the set time.

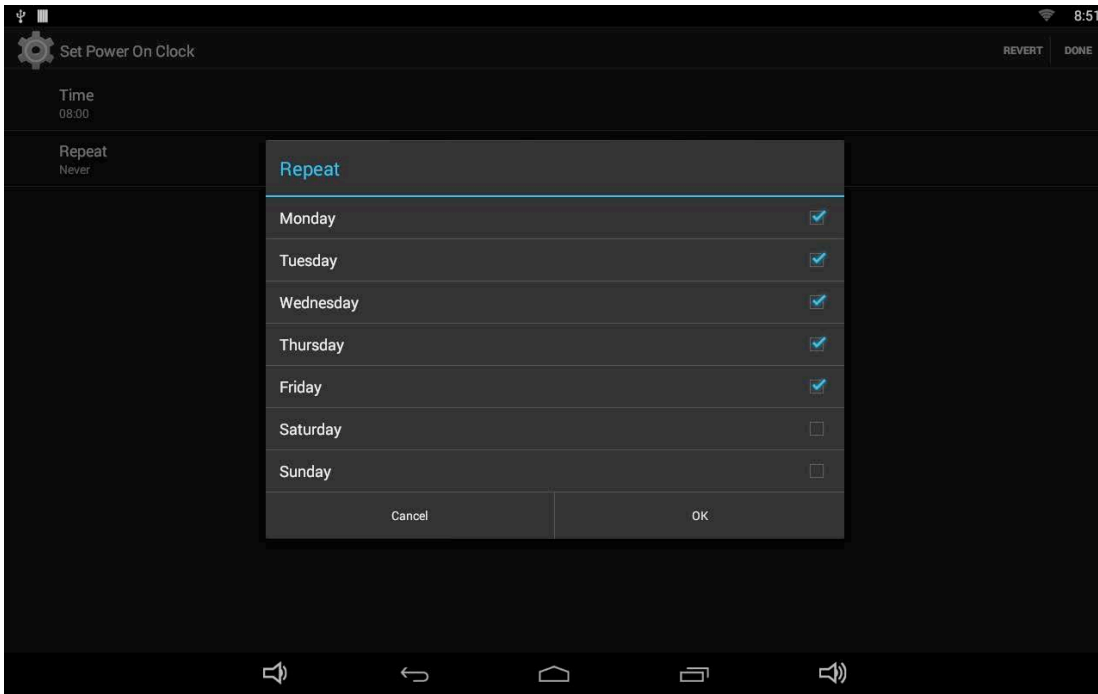

 
Click **“Done”** at the upper-right corner of the screen to save your settings.

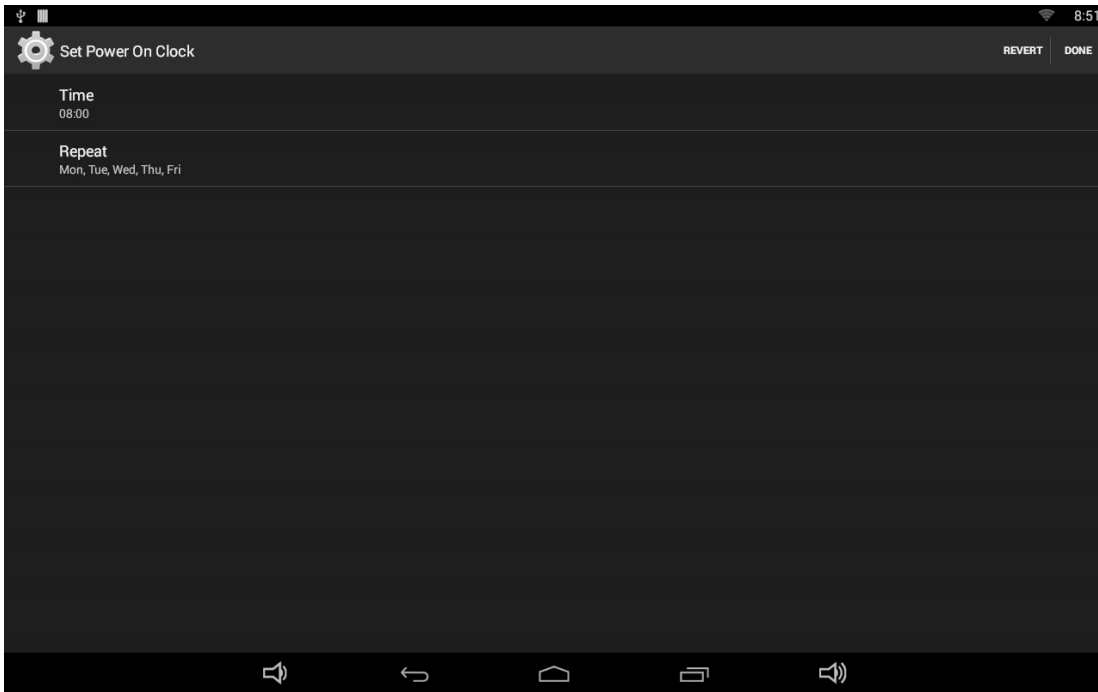

 You will see the power on option checked after saving the settings.

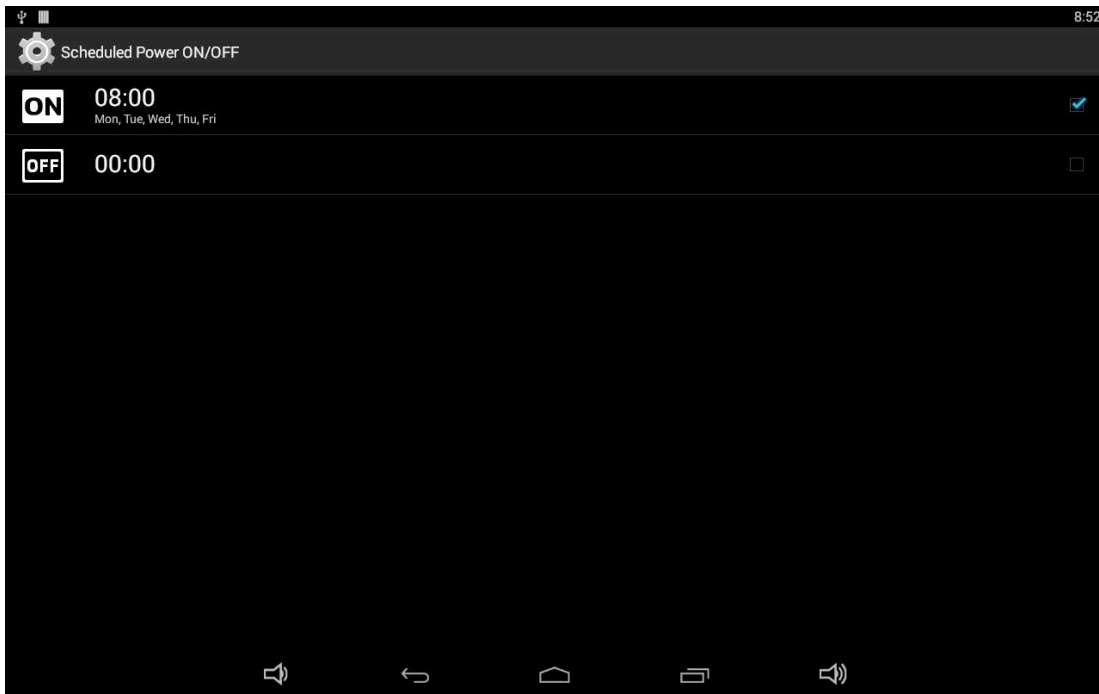

 
For powering off clocks, you can set them in the same manner as power on the clocks.

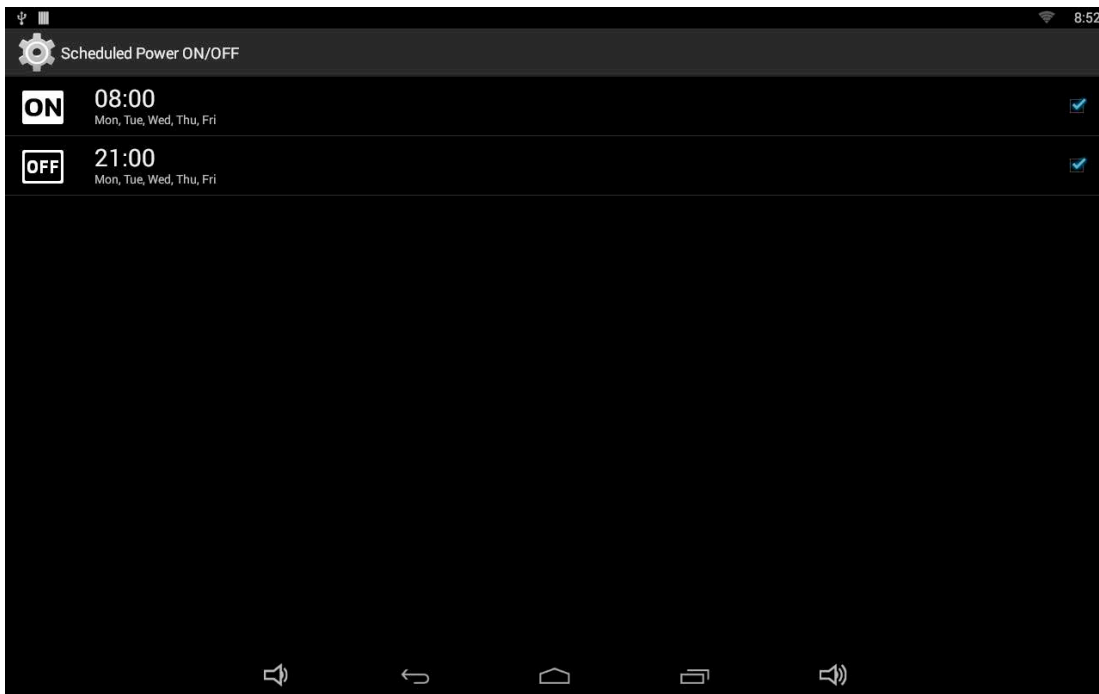

After adjusting the settings, the device will be powered off at the set time, and powered on again when the appointed time is achieved.

Wi-Fi

 
In the App list, click “**Settings**” to open the system setting app, and select the “**Wi-Fi**” option.

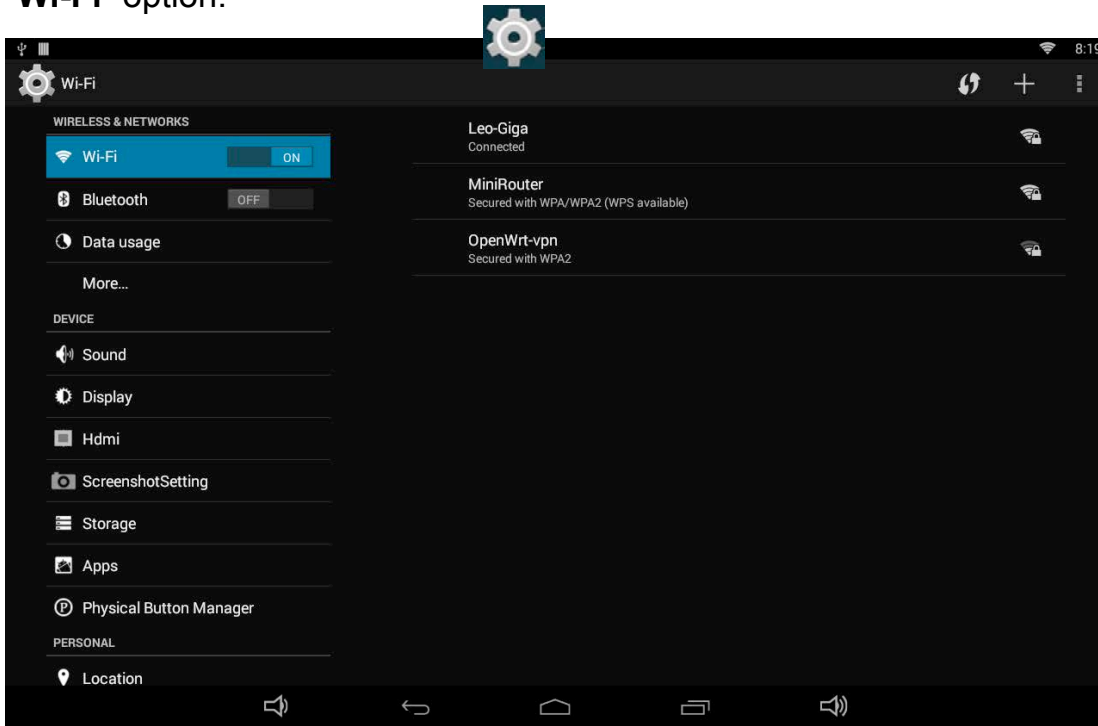

Switch the Wi-Fi button to **ON**. The product will scan available wireless networks automatically. Select a network under Wi-Fi networks and input the password to connect.

Ethernet

 In the App list, click “**Settings**” to open the system setting app, select the “**More**” option and then select “**Ethernet**” on the right side.

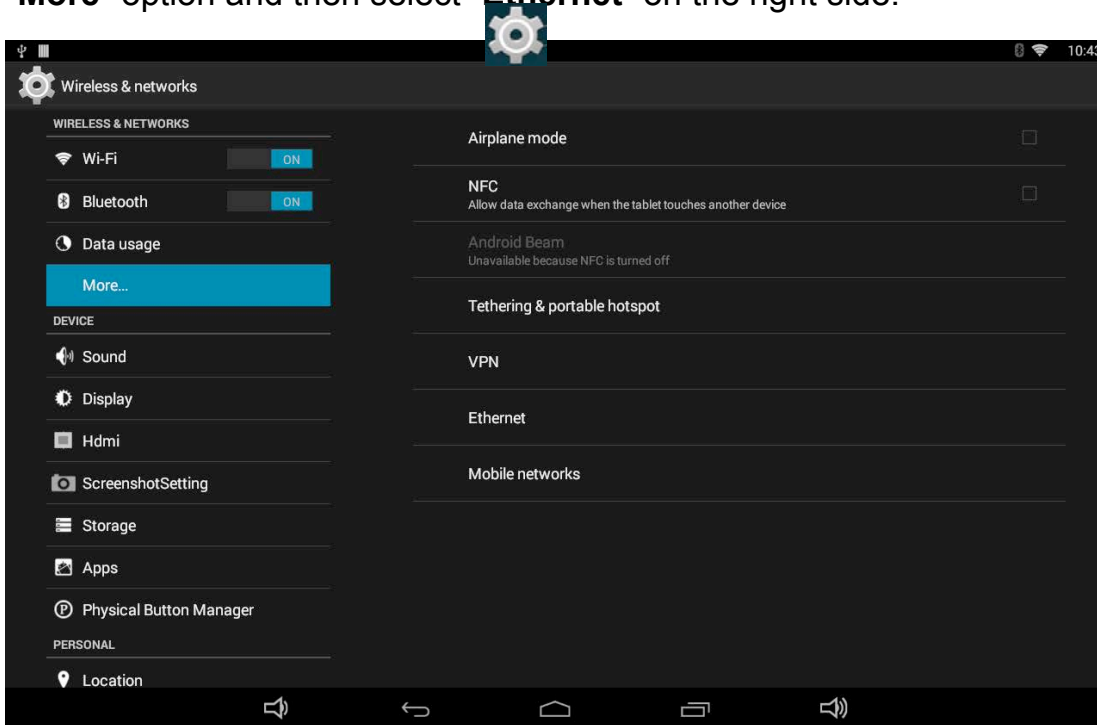


Check “Use Ethernet” and plug the Internet cable into the Ethernet port (**#11** in **Product Instruction**). If Wi-Fi is on, please turn off Wi-Fi to allow Ethernet to function.



If you are Static IP user, please set the configuration manually.


Bluetooth

 In the App list, click “Settings” to open the system setting app, and select the “Bluetooth” option.

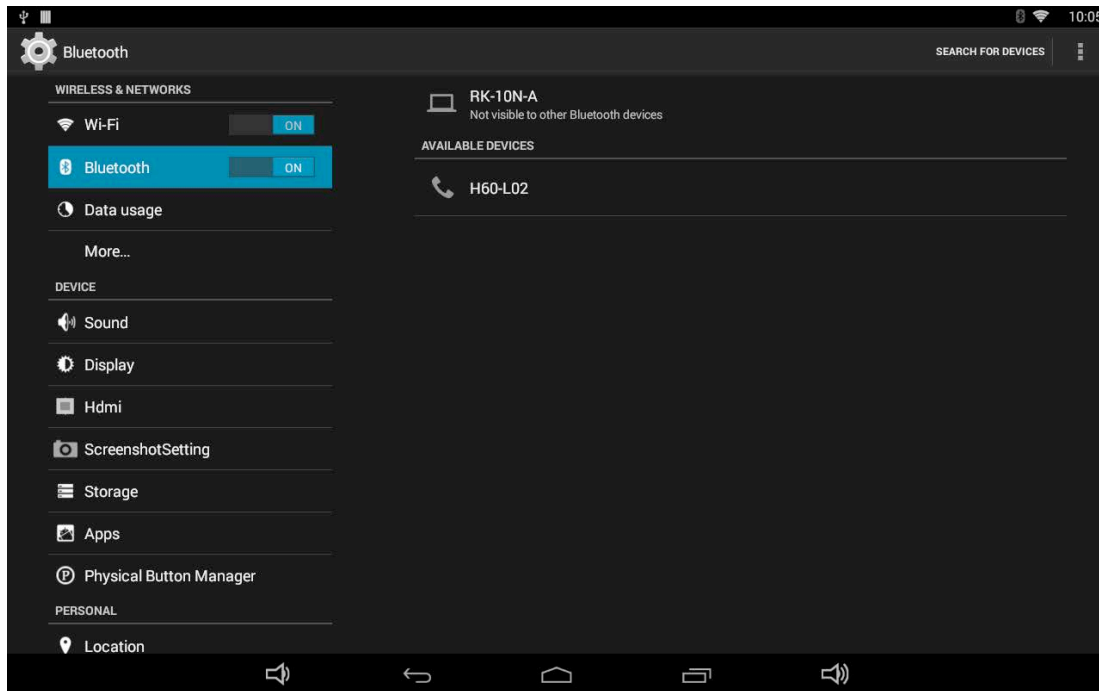


Switch the Bluetooth button to **ON**. The product will scan available Bluetooth devices automatically.

 
If you want to pair another Bluetooth device, select it from the “Available Devices” list, and then click “Pair” in the pop-up window. At the same time, click “Pair” in the pop-up window of the Bluetooth device to be paired.

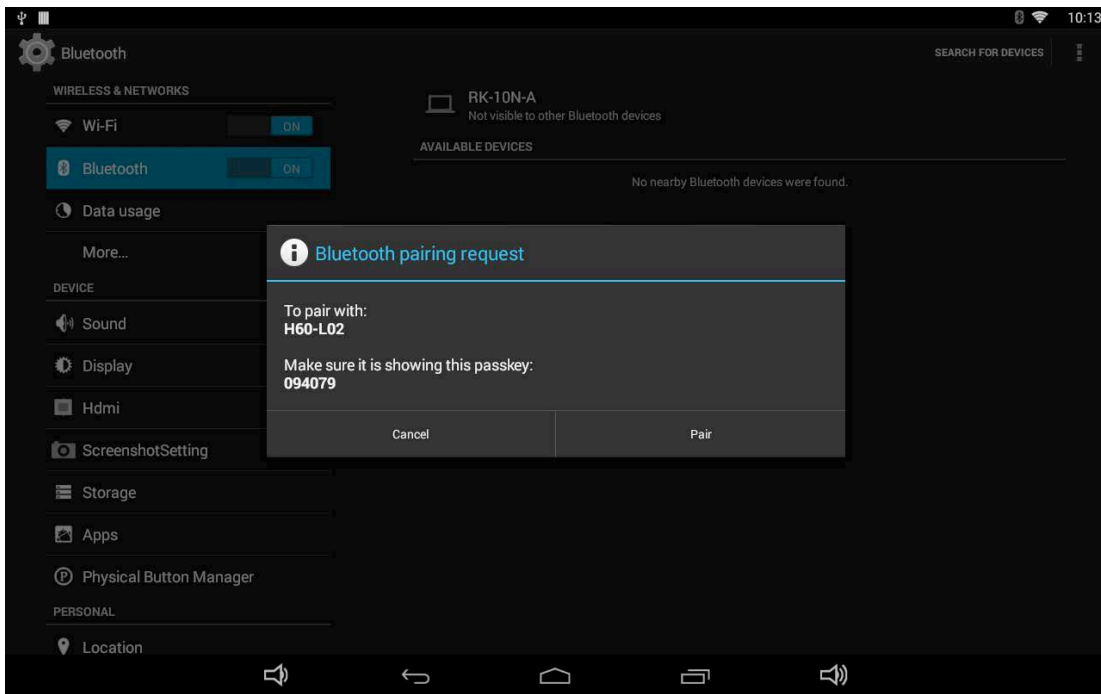

 
After pairing, the paired device will be moved to the “Paired Devices” list.

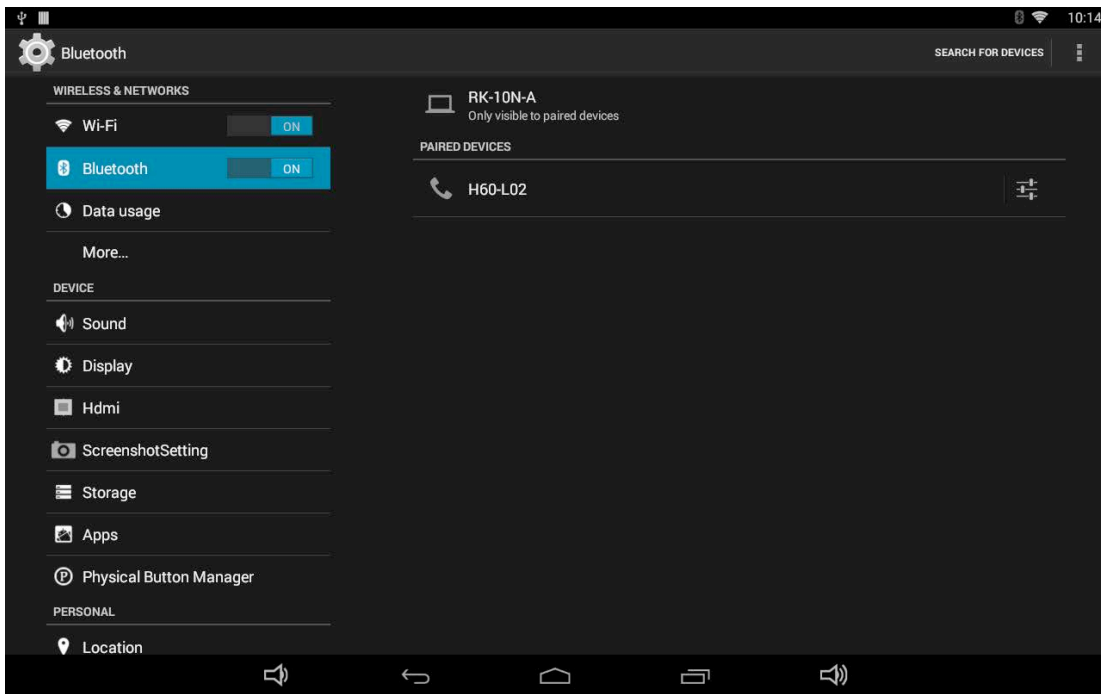

 If you want to pair another Bluetooth device passively, click the Bluetooth name at the top. When the summary changes to “Visible to all nearby Bluetooth devices (Visibility timeout)”, this Bluetooth name can then be scanned by other Bluetooth devices.

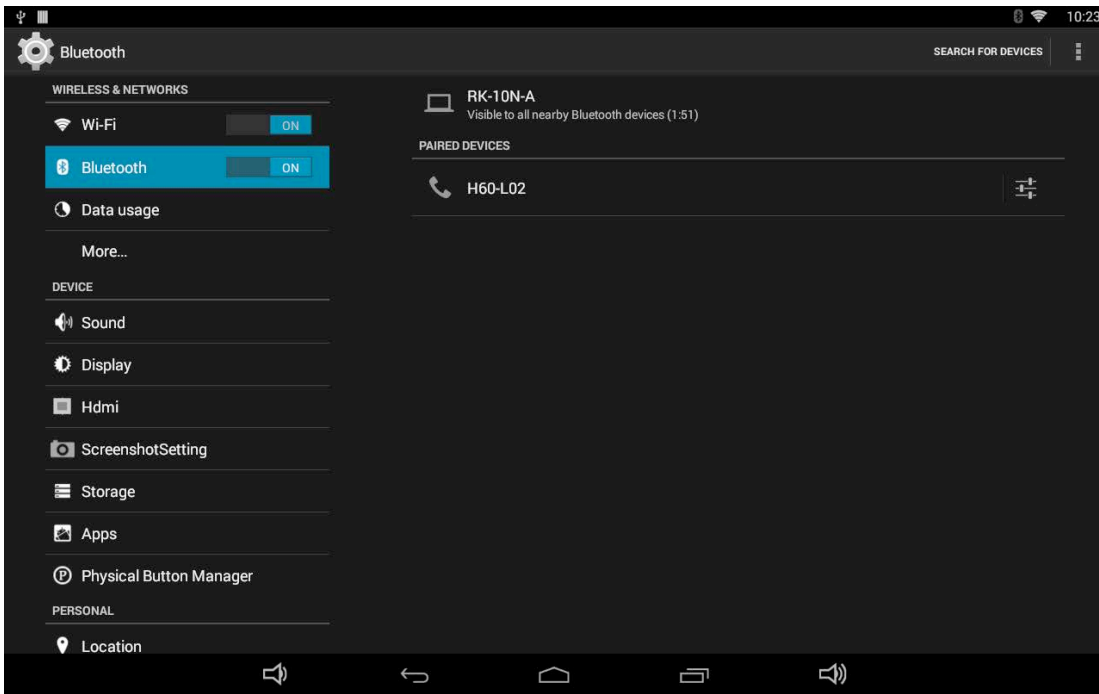

 
The Bluetooth name and visibility timeout can be changed in the menu.


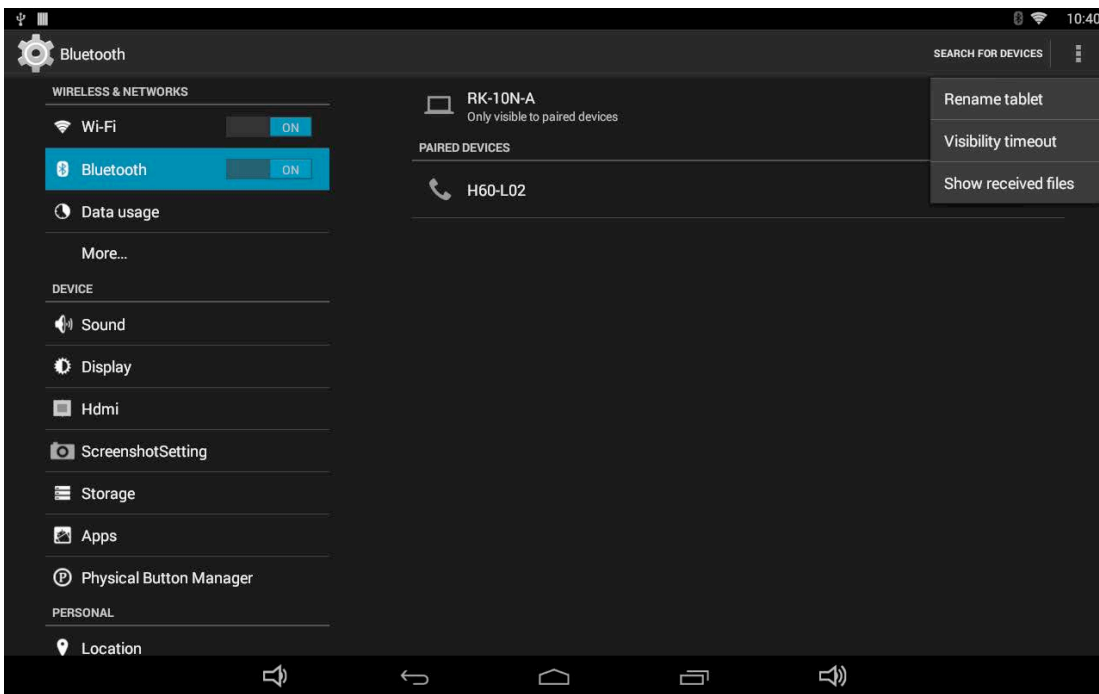


Virtual Keyboard

The device provides a virtual keyboard for typing.


When you click in a text input box, the virtual keyboard will appear at the bottom of the screen.

  To collapse the virtual keyboard, you can click the icon  in the system bar.

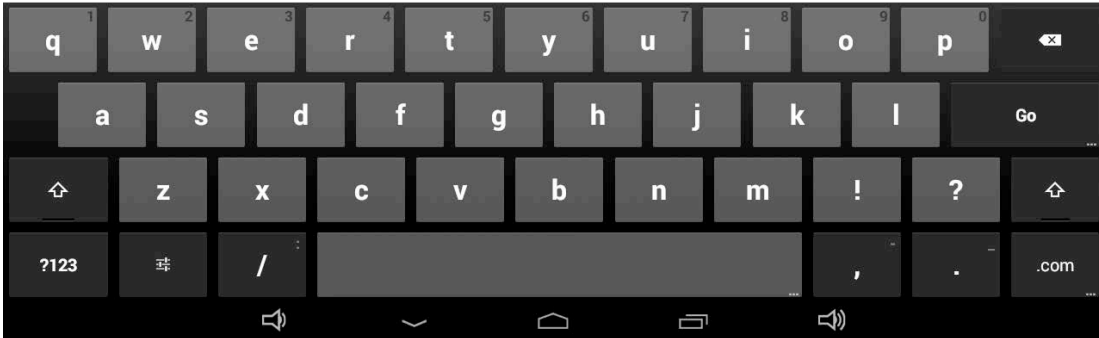


Switch Input Methods

 
In any text input box, pull down the upper-left corner of the screen to see the status window, and click **“Choose input method”**.

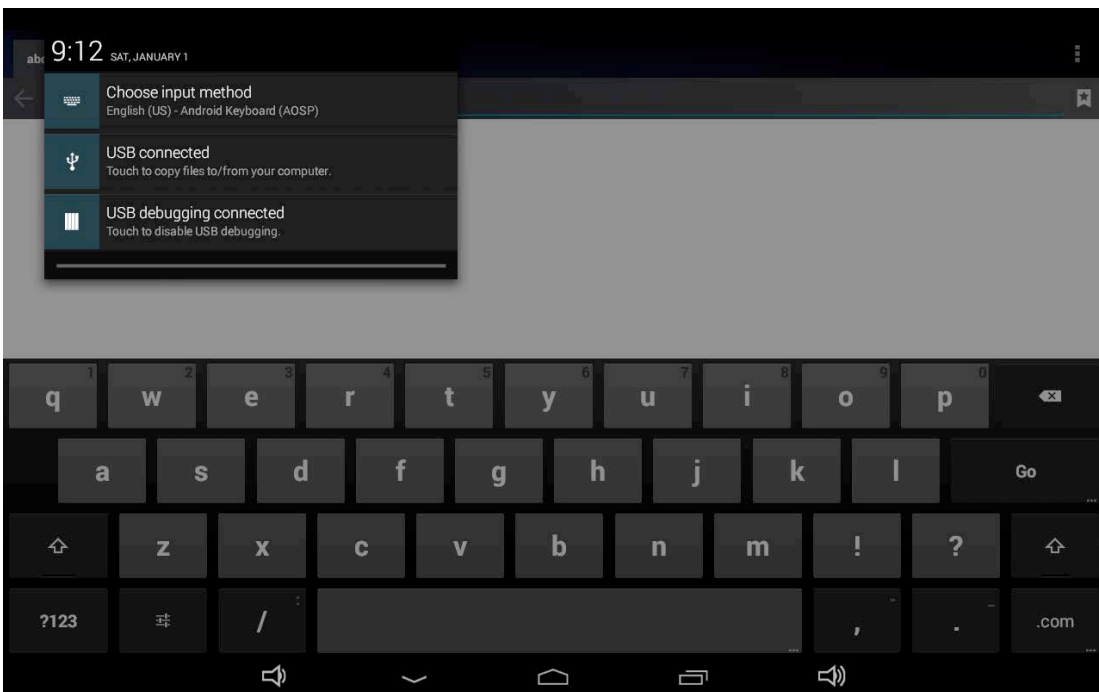

 Select an input method from the pop up window.

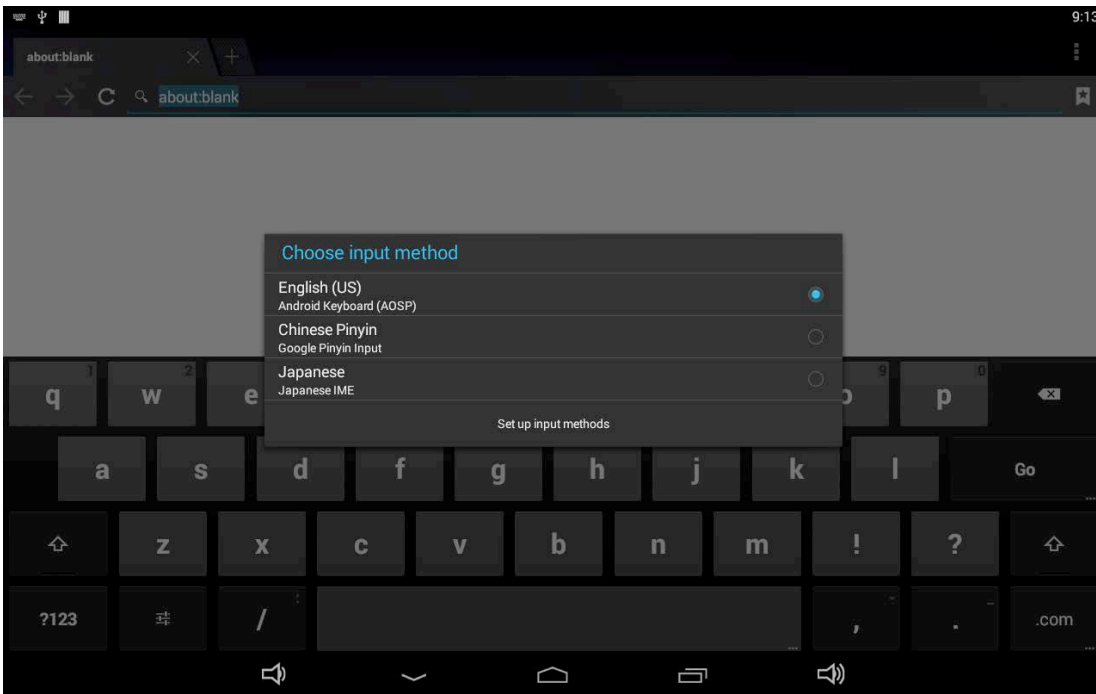

 
If the keyboard icon is invisible, please check whether the installed input method is selected in the “**Language & input**” option under the system setting app.

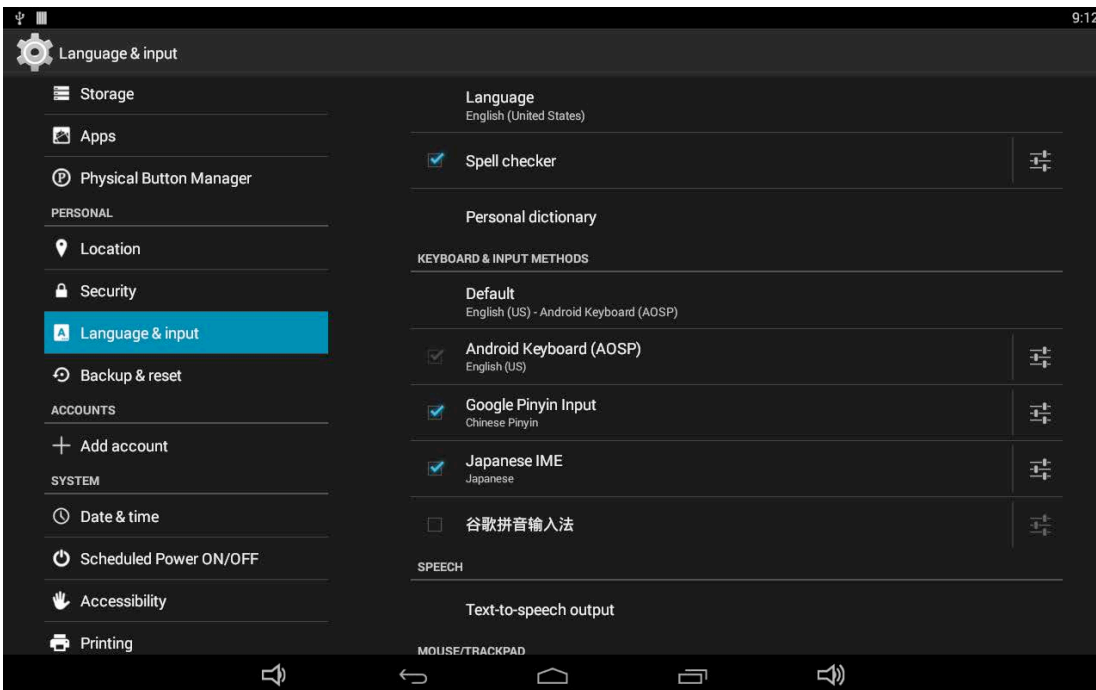

Taking Photos

Front 5M pixels camera is an optional accessory.


In the App list, open “**Camera**” .

 
Click the capture button  to take a photo.






Click  above the capture button to change camera settings.

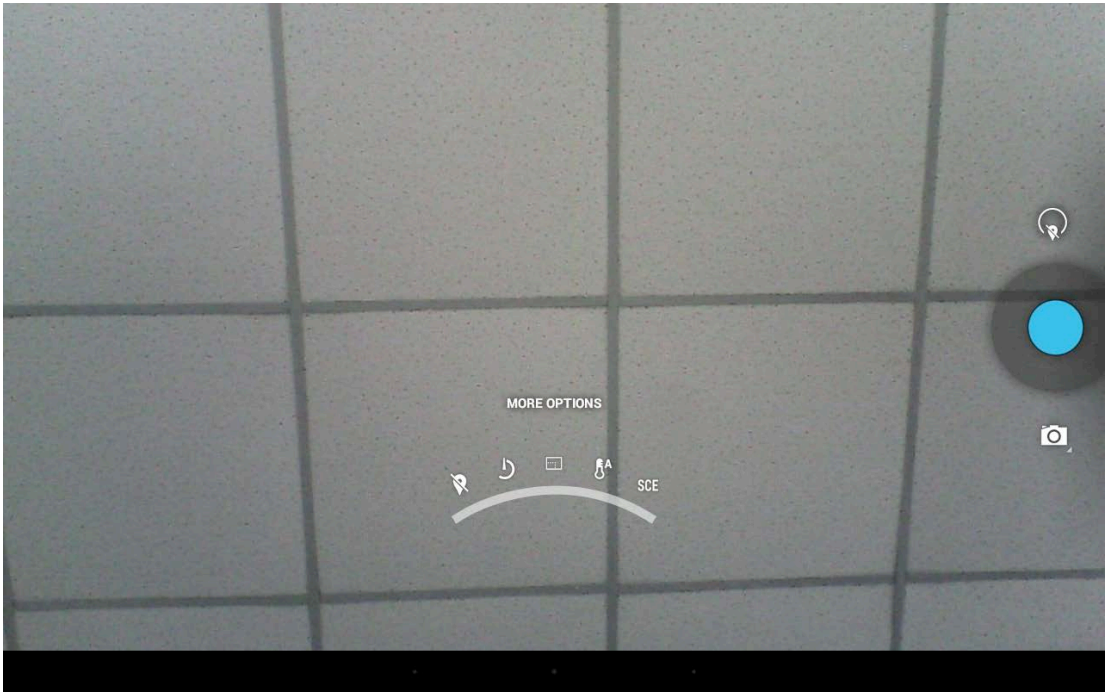


Click  to open detail settings. From left to right in the picture are: location on/off, countdown timer, picture size, white balance, and scene mode.



 
Click  or  under the capture button to switch take photos or videos.

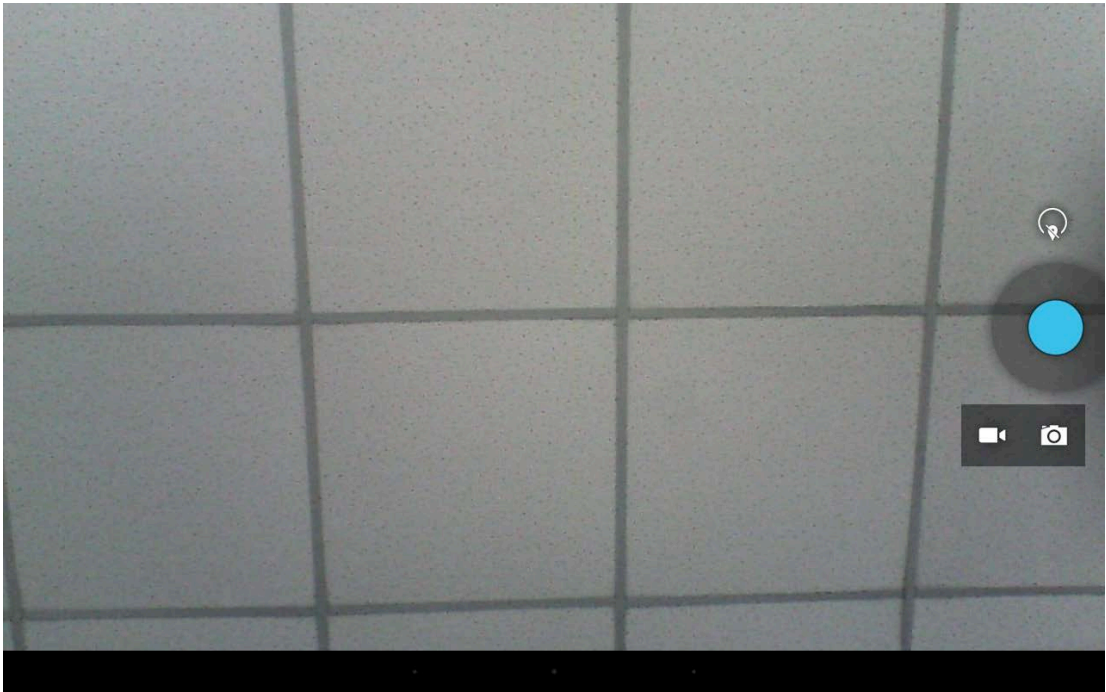

 Click the capture button  to shoot a video.

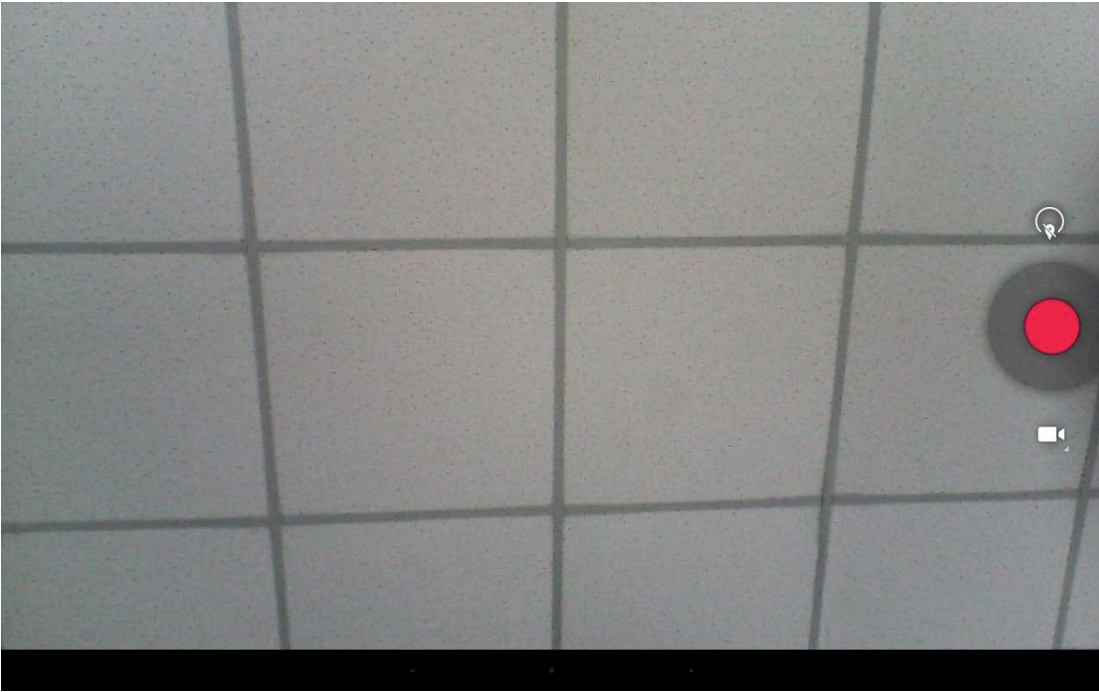

Click the capture button  to stop the video

 


Surf Online

In the App list, open “**Browser**”.




When connecting the device to a network, you can visit websites, play online media or download files via the browser.

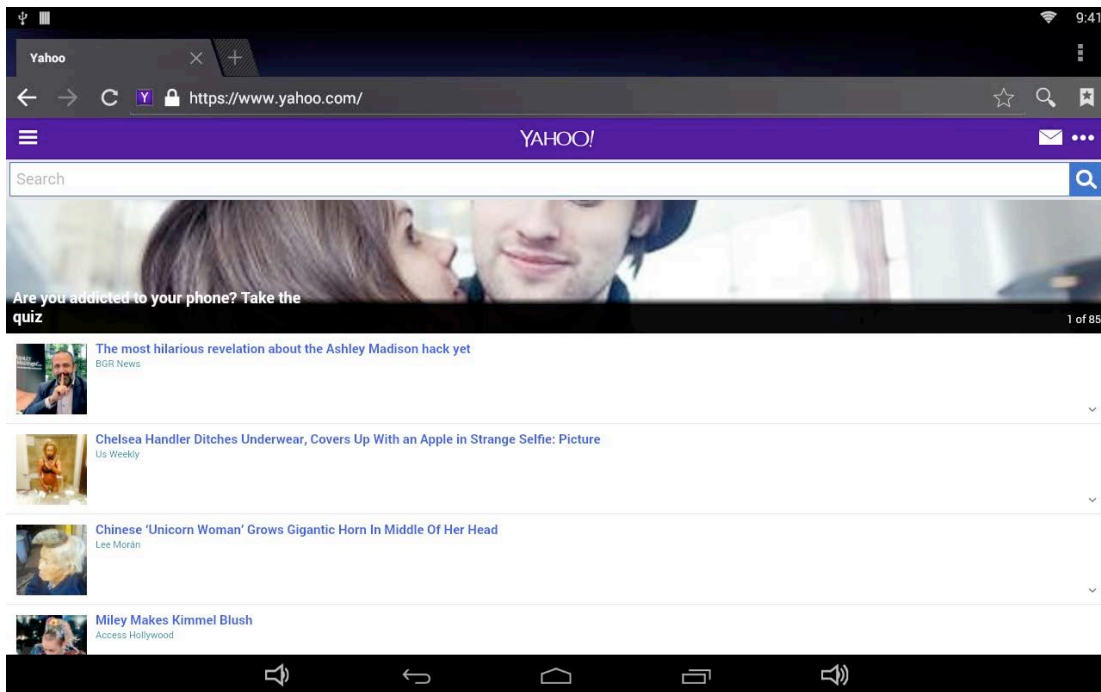


Browse Files

 
In the App list, open “**Explorer**” to view local files.

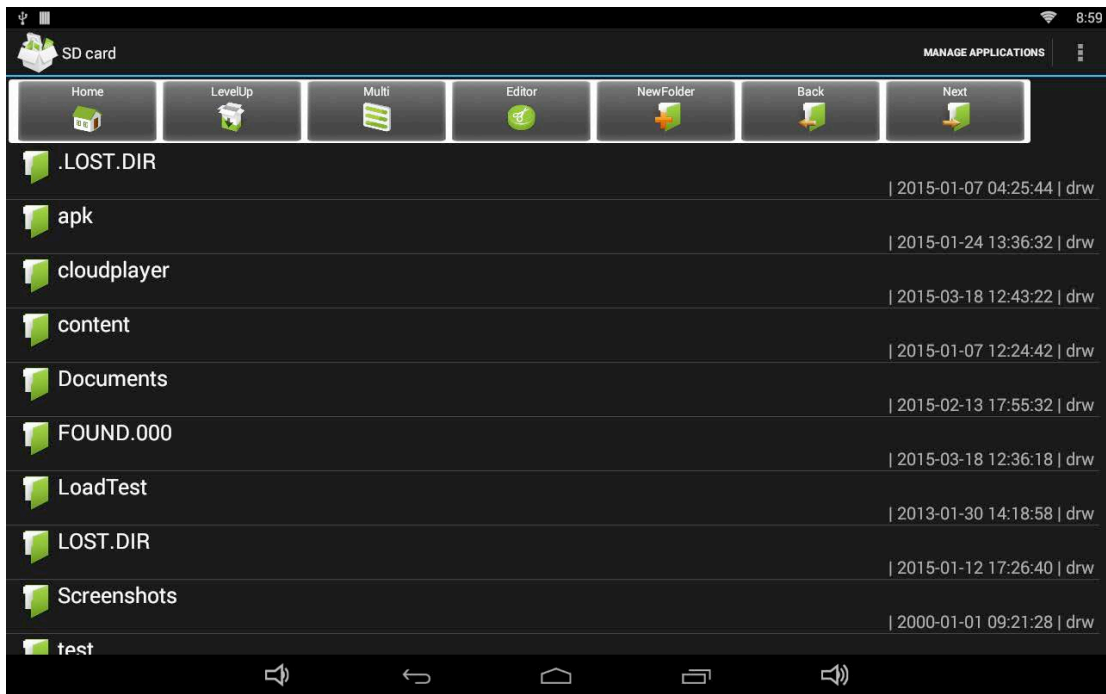

 Press and hold a file or folder to complete a file operation, such as copy, delete, move (cut), paste, rename, send (share) and create shortcut.

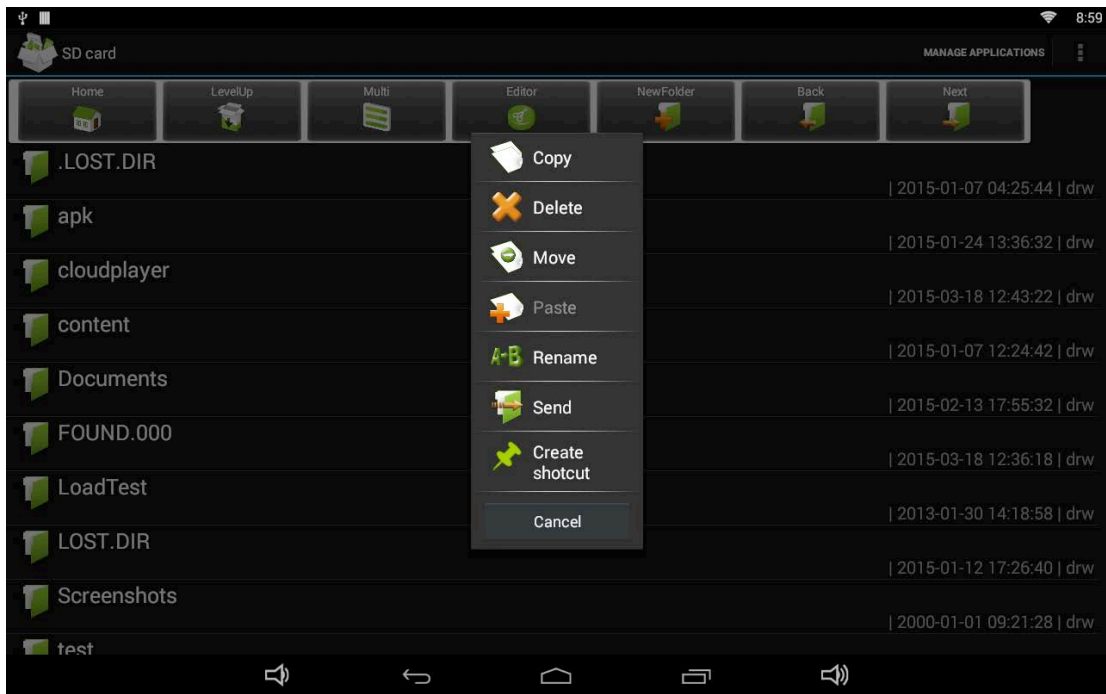

 If you want to select several files/folders at once, click “Muti” in the menu, and then select files/folders. The selected files/folders will be highlighted in blue.

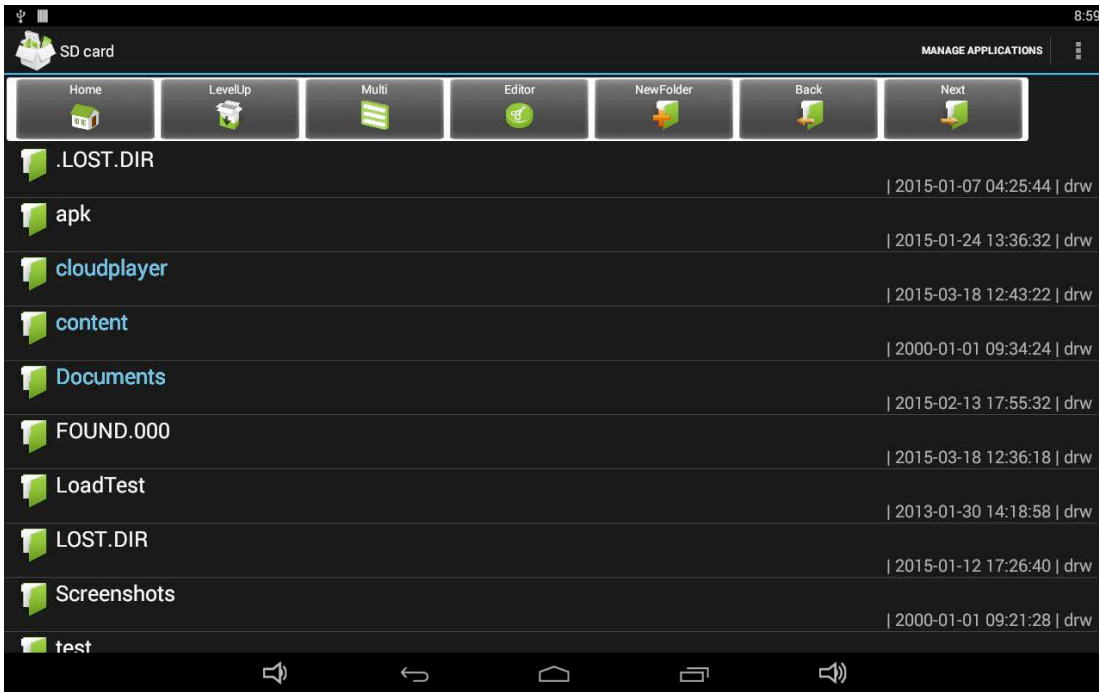

Click “Editor” in the menu to operate the selected files/folders.

Play Media

With the provided apps, you can view/play your media files on your storage, such as pictures, music and videos.



Picture Player:

Support JPG, BMP, GIF.



Music Player:

Support MP2, WMA, WAV, AAC, OGG, ASF.




Video Player:

Support MKV, TS, FLV, AVI, VOB, MPG, DAT, ASF, RM, MOV, 3GP, MP4, WMV.

 
Install & Uninstall Apps

Install Apps


Before installing an app, please download the app (.apk) via the browser, or copy a downloaded app to the device from your computer.

Then you can open “**ApkInstaller**”  in the App list to install the downloaded app.


Click "Install" button.

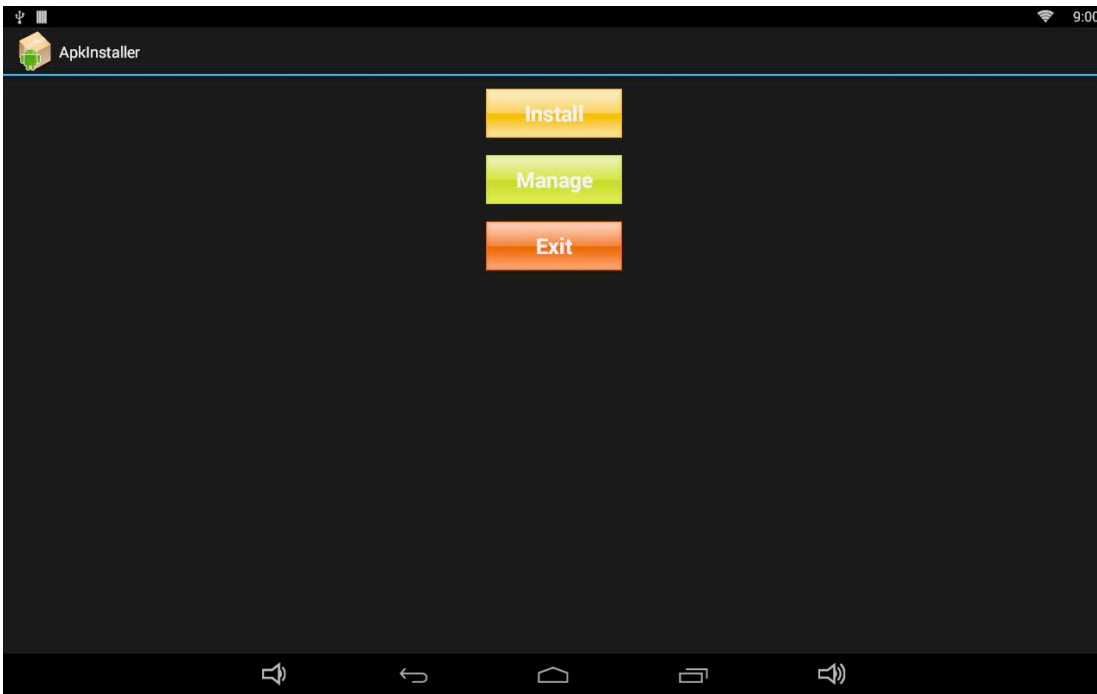

 
Choose the installation file's location.

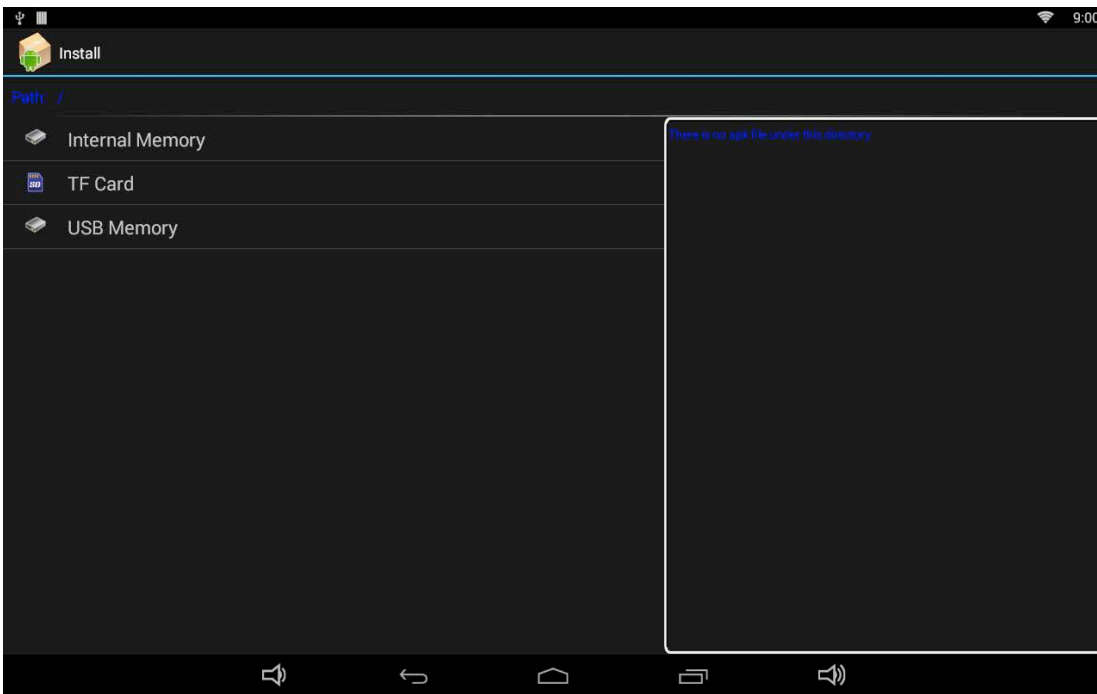

 
The apk files will be automatically scanned on the right side of the display in a list.

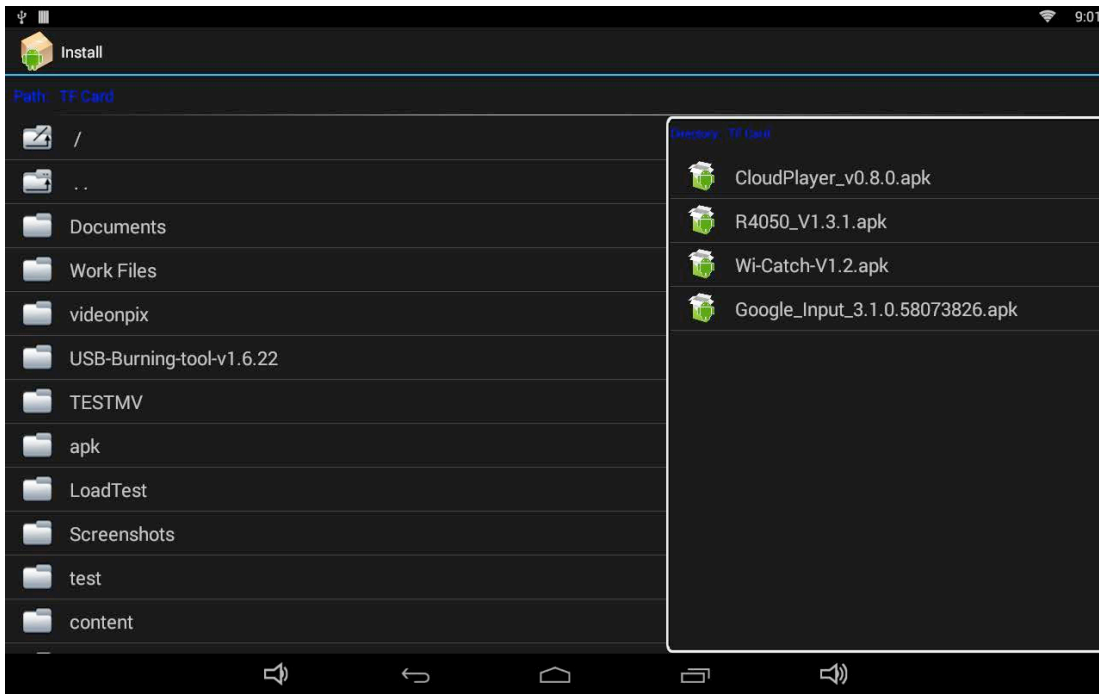

Click the apk you want to install.

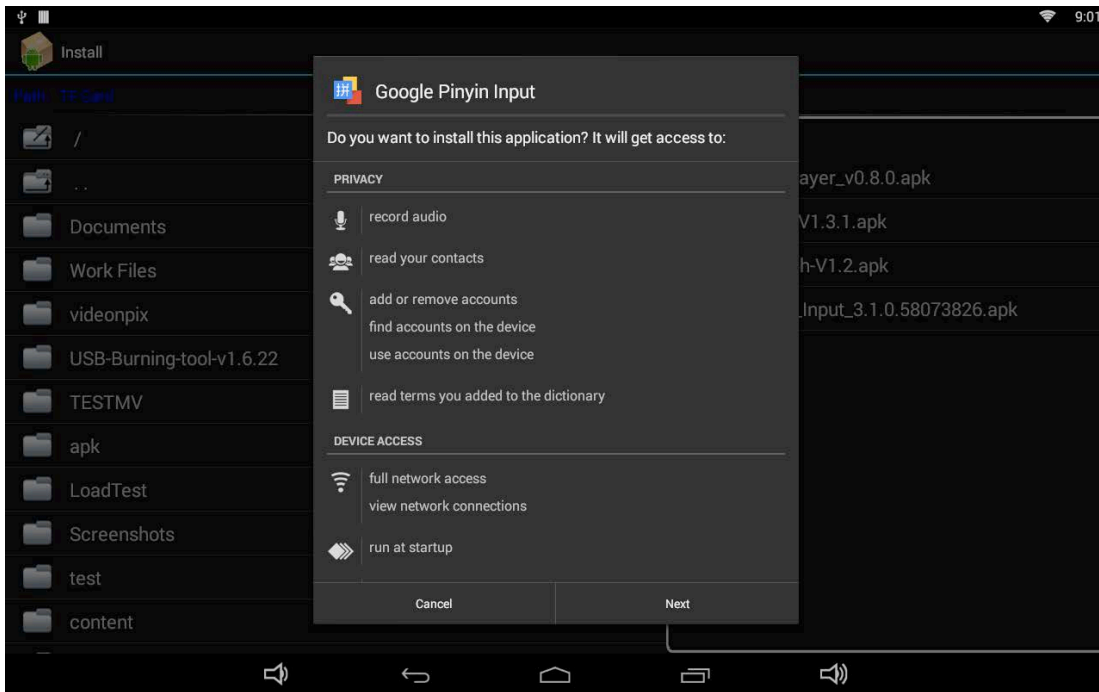 


 Click "Install" or "Next" until it reads "Install", and then wait for installation to complete.

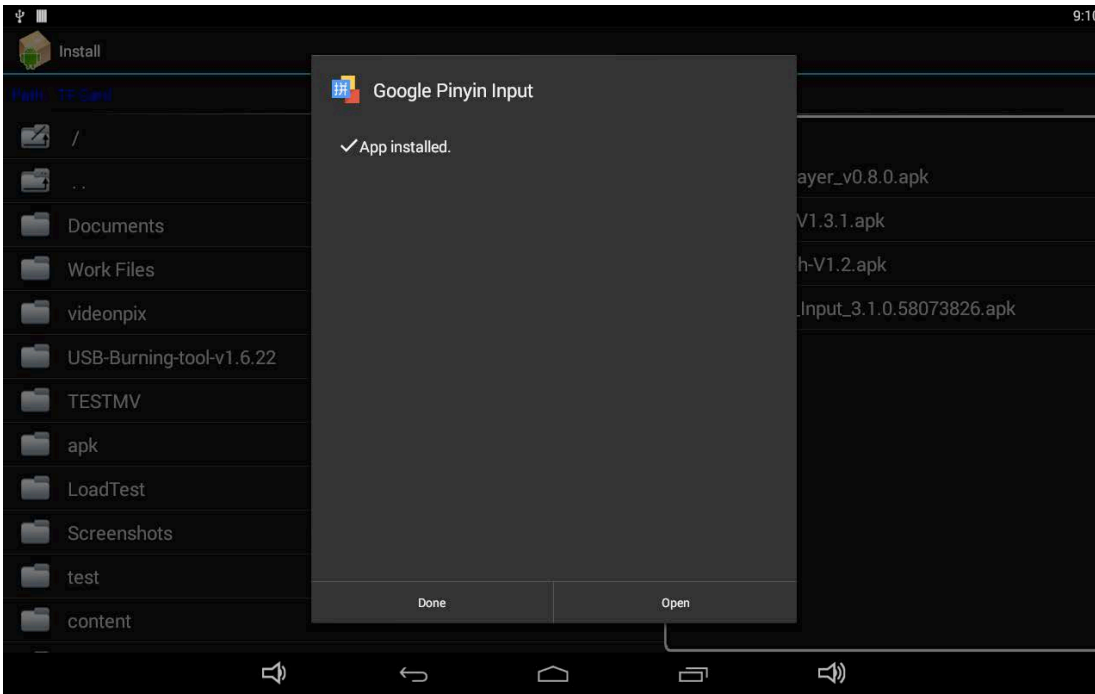


You can also download an android app market, and install the apps via the market.

 If “Install blocked” is prompted when installing an app, please open “**Settings**” and select the “**Security**” option, then allow “**Unknown sources**” and then back to reinstall the app.

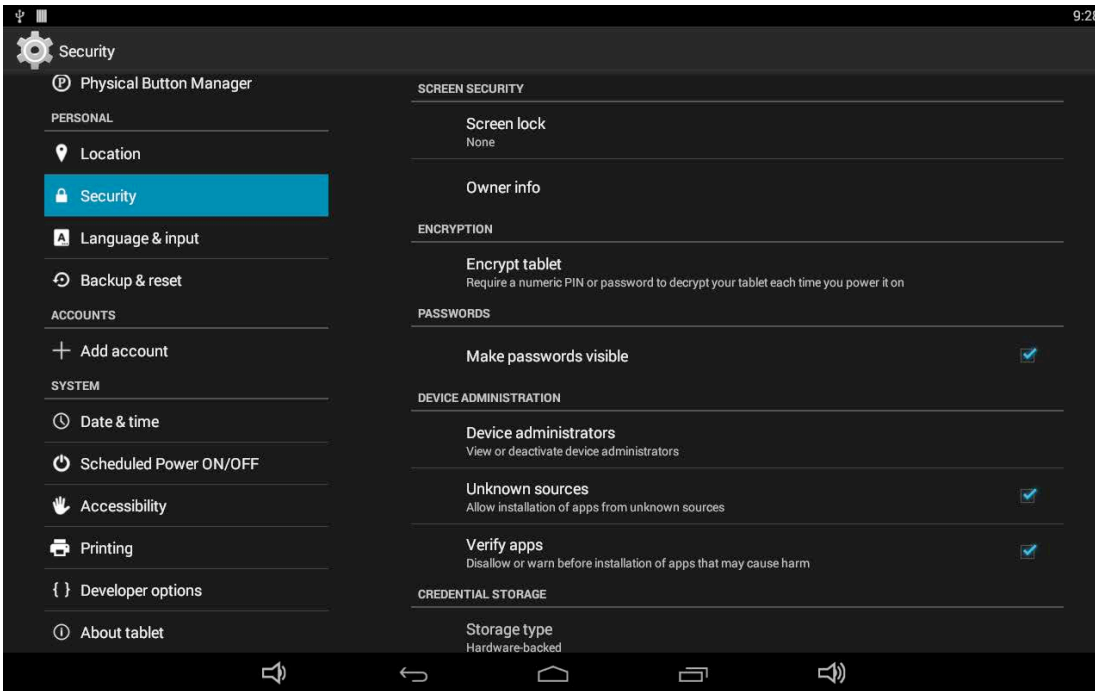


Uninstall Apps

 
To uninstall an app, please open “**Settings**” in the App list and select the “**Apps**” option. In this option, you will see the installed apps list.

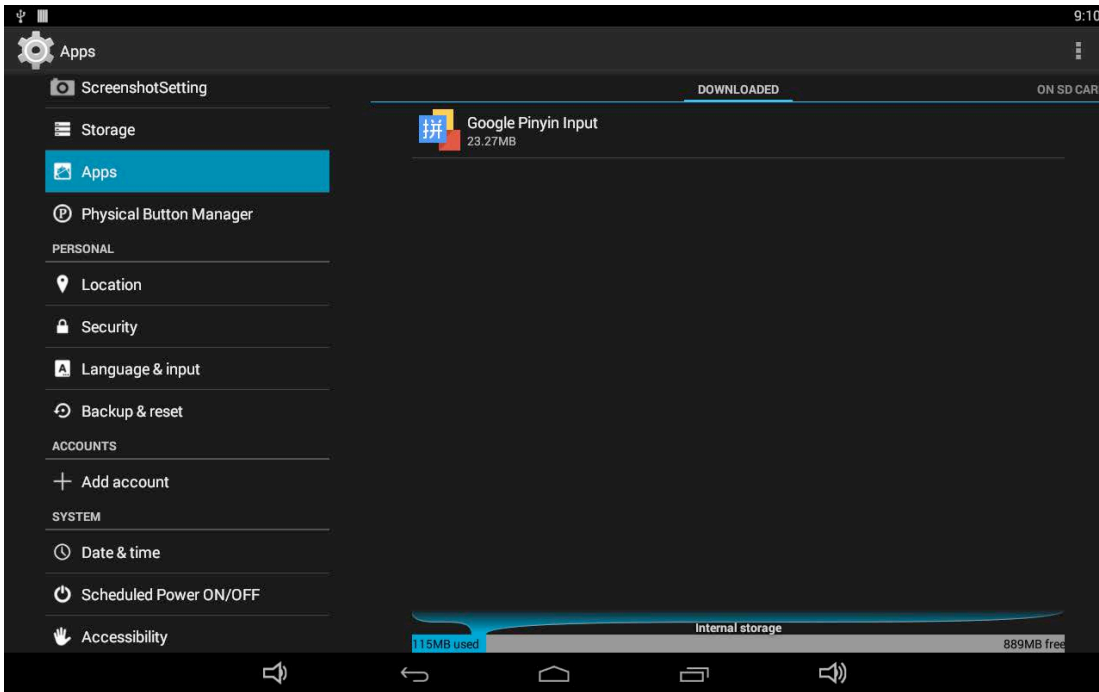

  Click the app you want to remove to enter the detail page.

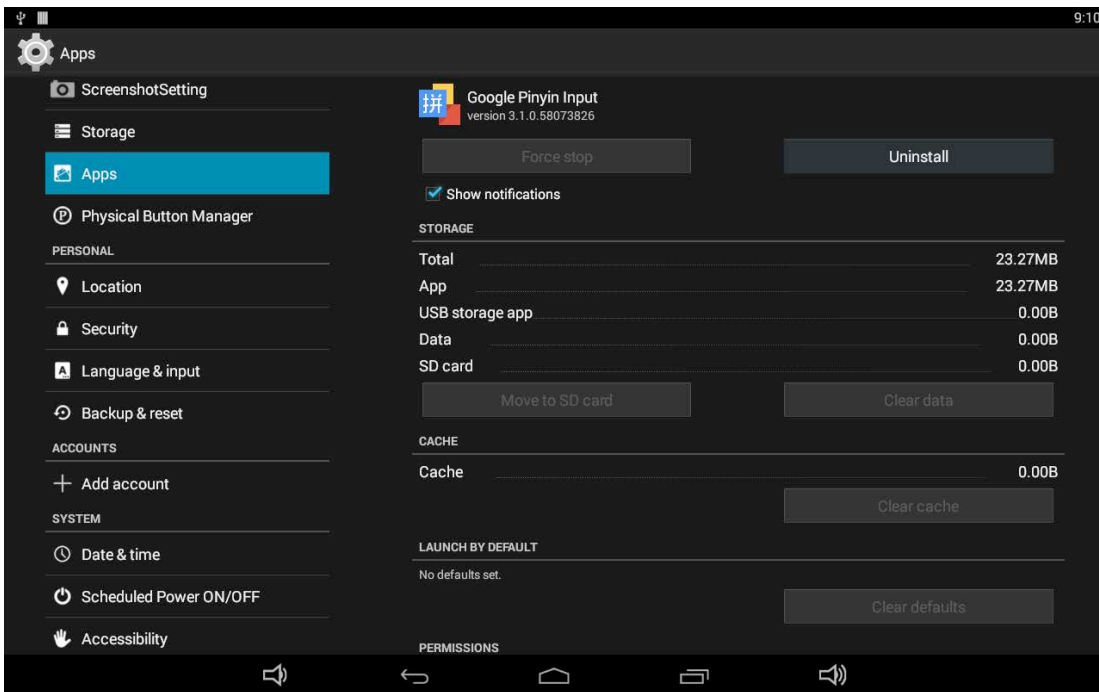


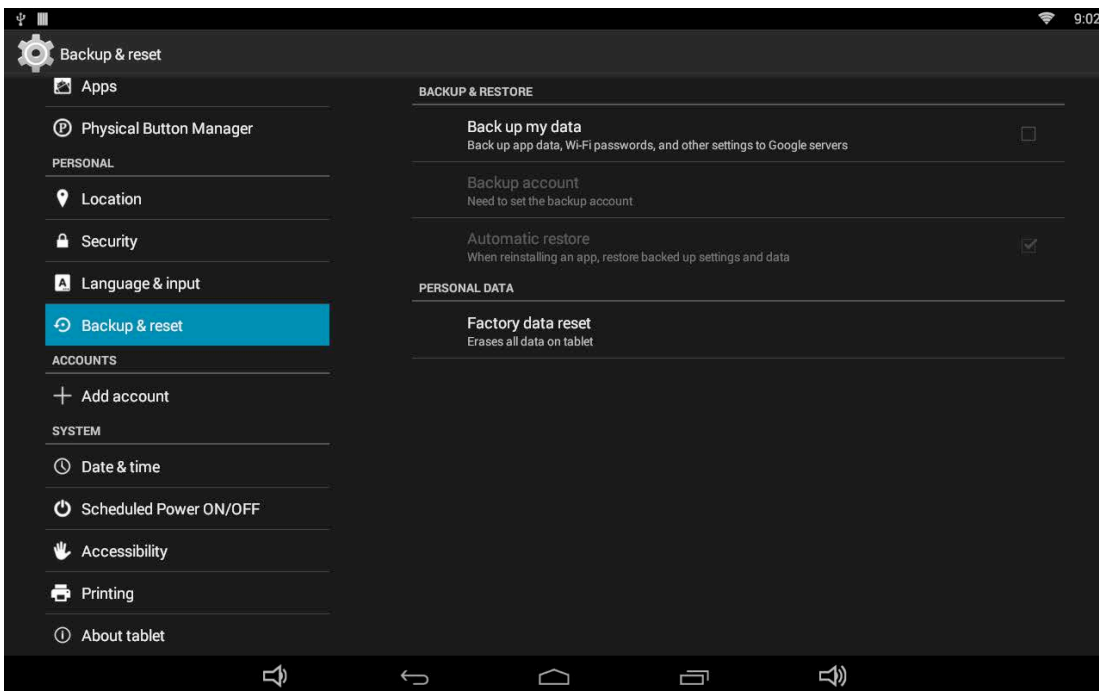 
Click the “**Uninstall**” button and select “OK”, and then wait for uninstallation finished.

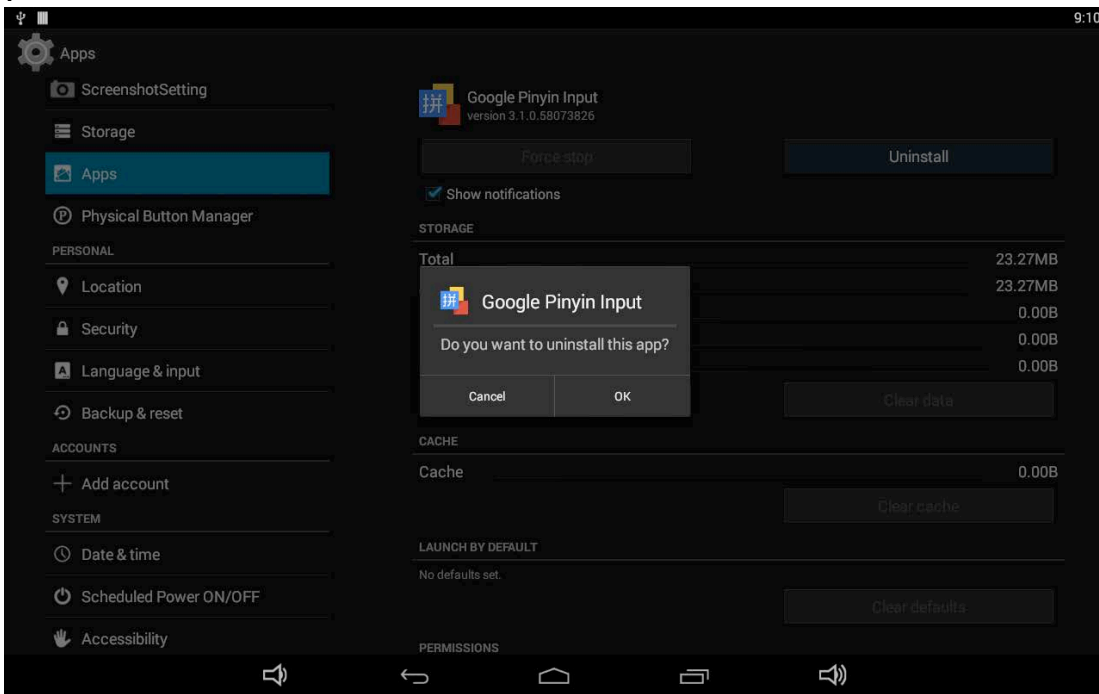


Reset to Factory Default

Please make sure to back up important data before resetting the device.


In the App list, click “**Settings**”  to open the system setting app and then select the “**Backup & reset**” option.



 Click “Factory data reset”.

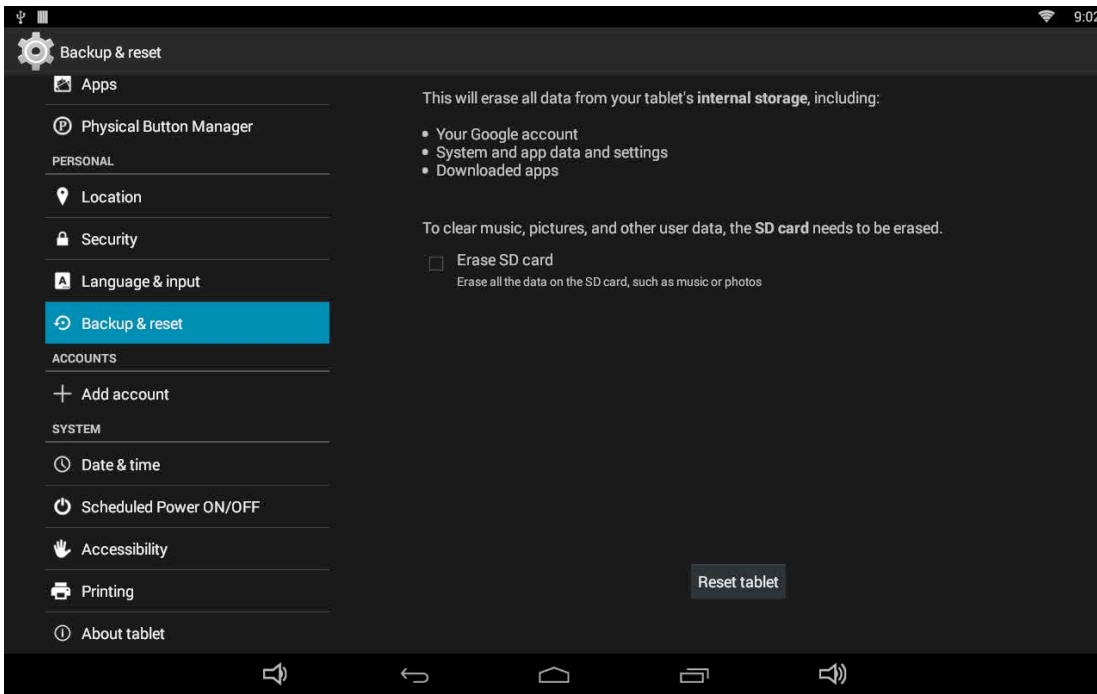

Click “Reset tablet” button.

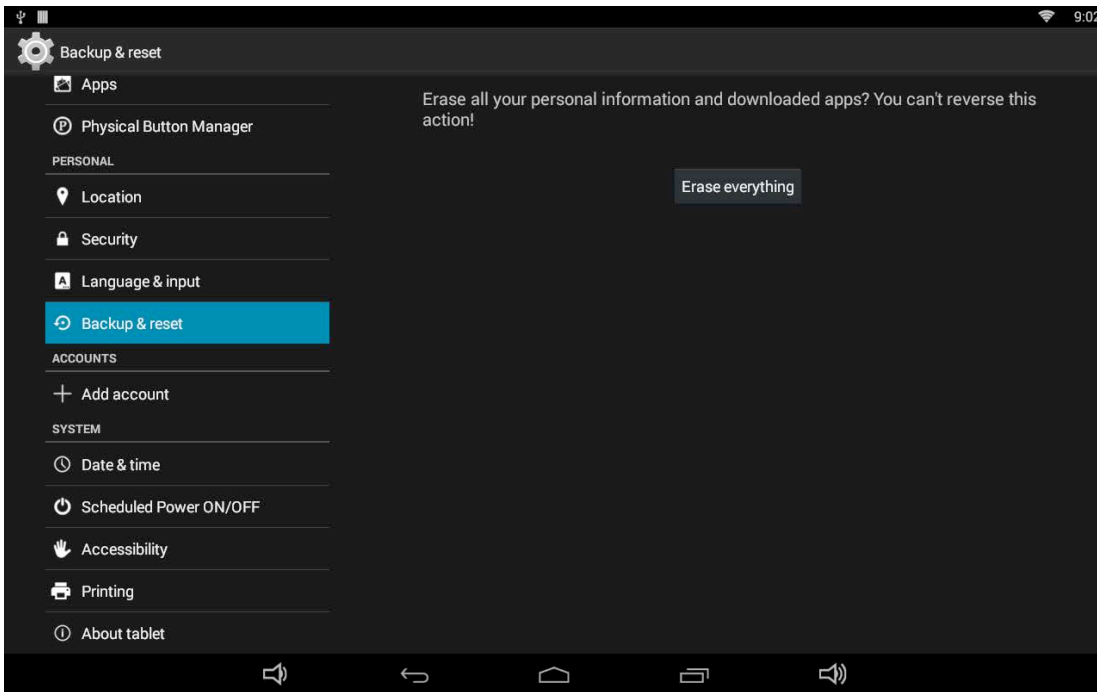 

Click “Erase everything” button, and then wait for the system to reboot and reset to the factory default.