 
INSTRUCTION MANUAL

56" Rapier with remote control

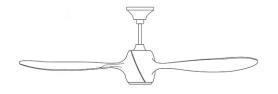

Elegant Ceiling fans Since 1989

www.ElegantFans.com

TABLE OF CONTENT

ltem Pa	ge No
1.Safety Precaution	1
2.Parts & Accessories	2
3.How To Assemble	3
4.Installation Instruction	4
5.Circuit Diagram	5
6.Remote Setting	6

SAFETY PRECAUTION

IMPORTANT: PLEASE READ BEFORE INSTALLATION.

- 1. Installation must be carried out by a qualified wiring installer.
- 2. Turn off the electrical mains at the circuit breaker fuse box.
- 3. Do not use power supply other than 240V~ 50Hz.
- 4. This appliance must be earthed.
- 5. When mounting the fan, ensure that the safety wire is loop across the ceiling mounting hook.
- 6. The ceiling mounting hook must be able to withhold a min. weight of 35 pounds.
- 7. The ceiling fan must be mounted at a min. height of 8.2 feet / 2.5m of clearance from the floor.
- 8. Do not place any objects in the path of the blades.
- 9. When all electrical connections are done, store all wires neatly.
- 10. Make sure that all screws and connection are tightly screwed and secured.
- 11. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- 12. Children should be supervised to ensure that they do not play with the appliance.
- 13. Ensure that the fan is switched off from the supply mains before removing the guard.

Warning


This product is designed to use only those parts supplied with this product and/or accessories designated specifically for use with this product. Using parts and/or accessories not designated for use with this product could result in personal injury or property damage.


Note

The illustrations in this manual are for explanation purposes only and may differ from the actual unit. It is subjected to change without prior notice for further improvements.

PARTS & ACCESSORIES


Item	Qty
1. Canopy	1
2. Downrod Assembly with Rubber Pulley	1
3. Coupling Cover	1
4. Motor Assembly & adaptor	1
5. Blade	3
6. Metal Pad & Screw for Blade	6+13
7. Remote Control Set (Transmitter & Receiver)	1
8. LED Light & Silicon Ring	1
9. No Light Shade & Silicon Ring (option)	1
10. Screw Pack	1
11. Balancing Kit	1

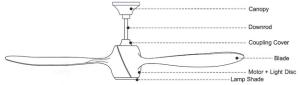 

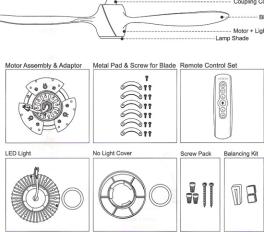

HOW TO ASSEMBLE

 Secure the hanger bracket to ceiling beam or a suitable piece of tiber inserted between the ceiling beams. The bracket be attached with two (2) long wood screws as supplied within the package.

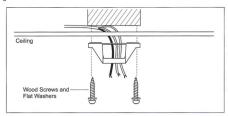

DOWNROD MOUNT

- Obtain fan motor.
- Remove cotter pin and bolt from yoke.
- Loosen jam screw in yoke until it is flush with the inside surface.
- Obtain downrod and canopy (and yoke cover (optional)).
- Place downrod inside canopy (and yoke cover (optional)).
- Route wires and safety cable exiting motor through canopy and downrod.
- Insert bolt through hole in shaft and downrod. "Be careful not to damage or cut the fan wires."
- Secure bolt with cotter pin.
- Secure downrod in position by tightening jam screws and lock nut.
- Place motor housing onto motor top
- Slide voke cover (optional) over voke













NOTE: All set screws must be checked and re-tightened where necessary, after installation.

ţ

INSTALLATION INSTRUCTION

Align the holes on the blade with motor and screw on with the screws and metal pad provided.

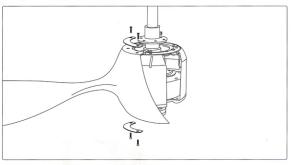

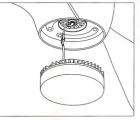

With light & without light (option)

Connect the motor plug with LED light' plug.
Install the "LED light and silicon ring" aligning with adaptor.

Warning: turn off the electrical mains at the circuit breaker fuse box.



Install the "no light cover & silicon ring" aligning with adaptor.


Warning: turn off the electrical mains at the circuit breaker fuse box.

4

CIRCUIT DIAGRAM

REMOTE CONTROL(OPTION)

This fan is equipped with a canopy type remote control unit for controlling the fan speeds and light kit, please refer to the instruction sheet packed with the control unit for more information about the wiring and installation.

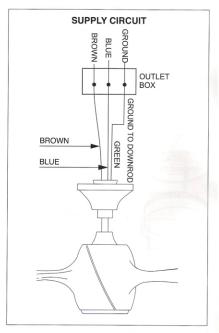

NOTE: Once ground wires are connected, carefully tuck wires and marrette into the metal outlet box making sure that the wires are clear of the hemisphere and downrod when positiond in mounting bracket.

REMOTE SETTING

Battery installation on back side of Transmitter

1 Remove battery cover.

2 Install 12V 23AE battery x 1 pc. (Included)



SETTING before starting fan.

Note: Do not press any other button on the transmitter before setting as it will cause the procedure to fail.

 
① Pressing the button " or over 5 seconds till the receiver makes Bi-Bi sound. This fan has completed frequency setting.

IMPORTANT:

In event of no Bi-Bi sound (fan is faiked for setting), do the following step for re-setting : Switch off the main power and wait for 10 seconds, then switch on the power again and do the



TRANSMITTER BUTTON

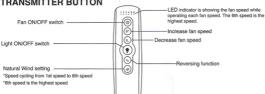

Your fan is ready for operation now.