

Intelligent Bluetooth Mortice Lock

APP BT-Remote Control

For IOS and Android users, you can unlock it within 1.5s via APP "TTLock"



Unlock Options

- Pin Code
- Fingerprint (CL431BF Only)
- MiFare Card
- TTLock App (iOS/Android)
- Mechanical Key Override
- Gateway (sold separately)

1 2 3 4 5 6 7 8 9 0 *

Overview

The CL400B & CL400BF Smart Door Locks are very versatile Keyless Digital/Electronic Door Locks. It is able to utilise existing mortice lock furniture.

It can be operated via Bluetooth from remote locations using the TTLock iOS/Android app without the need for Internet or

WiFi. It is suited for Homes, Offices, Airbnb, Motels, Holiday Homes etc.

Specific codes can be sent via SMS or E-Mail. These codes can be temporary (1 day) or permanent.

Bluetooth access (one-time, temporary, or permanent) can al so be shared by SMS or E-Mail.


An audit trail can be accessed through the app to see door access events.

Many of these management actions can be performed wirelessly using a TTLock wireless gateway (sold separately)

A Micro USB port is included for power if the batteries go flat.



Product Specifications

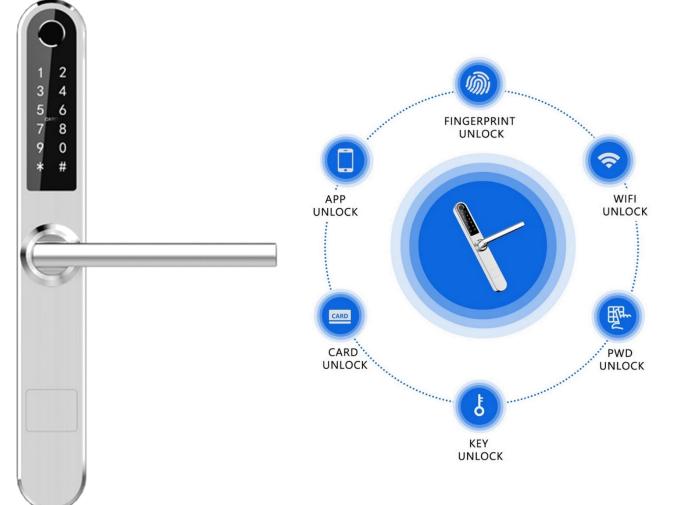

ltem no.	CL400BF S
Material	Zinc Alloy
Lock Dimensions	280*38*25mm
Weight	2.5kg
Colour Options	Silver
Communication mode	Bluetooth 4.0BLE (Bluetooth Low Energy)
Door Thickness Options	30-80mm
Data Capacity	500 PIN Codes, 500 MiFare Cards
Unlock time	≈ 1.5 sec
Power supply	4pcs AAA batteries
Working Temperature	-25°C - 60°C
Low Voltage Alarm	4.5V



Features

- 1. This lock has two different models. The CL400BF is the base model with an added fingerprint reader.
- 2. Master Bluetooth Key: The "TTLock" app can be used to open the Lock using Bluetooth.
- 3. Master Code: The Bluetooth lock unlocks with a permanent Master code.
- 4. User Code: The mobile app can generate up to 300 codes, with validity durations including One Time, Permanent, or from 5 minutes to 180 days.
- 5. Wrong Code Entry Limit: After 5 unsuccessful attempts at entering a code, the Bluetooth lock will be unresponsive for 5 minutes. Mechanical key and Bluetooth Unlock can be used to unlock in this state.
- 6. Fingerprint access can be added through the TTLock app.
- 7. Time Auto lock: After successfully unlocking, the Bluetooth lock will be automatically locked after a period of time (between 5 to 120 seconds). The owner sets this function.
- 8. Simple Locking: Press * key for 2 seconds to lock the Bluetooth lock.
- 9. Lower Battery Consumption: 4pcs AA batteries can provide 5000 openings
- 10. Lower Battery Indicator If battery power is low. it will emit low battery warning, battery level will also be updated on the app during Bluetooth unlock. If battery power runs out. Use the keys or a Micro USB cable to provide power and open the lock.
- 11. Decoy Code: 8 decoy digits can be entered prior to the actual code to prevent the code from being exposed.
- 12. The TTLock App can be used with multiple locks: Ensure you select the correct device when managing settings or adding users.

System Initialization

- 1. Open the cover plate of the back panel.
- 2. Press the "Reset" button on the back panel for 5s.
- 3. Press "000#", & the initialization is complete.





11-13 Thompson Street Abbotsford VIC 3067, Australia

Call 1300 366 277

sales@corplock.com.au




Using The TTLock App






Installing TTLock

Search for "TTLock" on the App Store

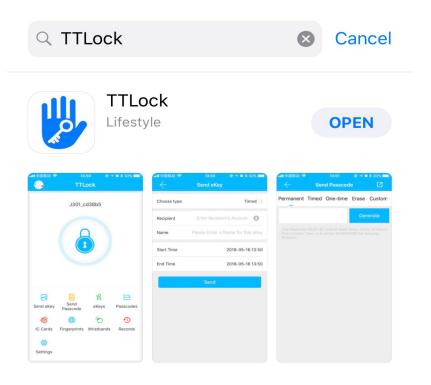

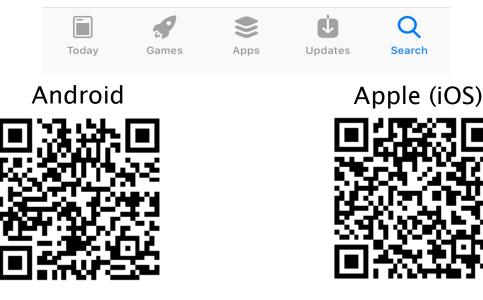



Pair your device:

1) Touch the digital keyboard, remove one battery, touch the keyboard

one more time, then put back the battery immediately.

2) Press the '#' button within 3-5 seconds, you will hear 'Di Di' to confirm the lock is in discovery mode.

3) Immediately open your app, tap the menu icon in the top-left corner, then 'add Lock', 'lock' and select your lock type from the list. Your lock will only be selectable when it's in discovery mode.

4) If the lock has been placed in discovery mode, it will appear on the next screen "Nearby Locks"

Changing the Admin code:

1) Open the TTlock app.

2) Select the lock you wish to change the admin code for.

3) Tap the 'gear' symbol in the top-right hand corner of the screen.

4) Tap 'Admin passcode' and follow the prompts.

Sending e-Keys:

1) Open the TTlock app.

2) Select the lock you wish to authorise an eKey for.

3) Tap 'eKey'. Choose *period* key or *permanent key*.

4) Input the person's mobile number, leave a message, then tap 'send'.

Sending passcodes:

1) Open the TTlock app.

2) Select the lock you wish to authorise a passcode for.

3) Tap 'passcode'. Choose a validity period

 
(one-time, minute(s), hour(s), day(s), month(s), permanent).

- 4) Tap the 'generate' button to create a code.
- 5) Tap 'Send Text Msg' to send the code to the user.

Unlock:

1) Open the TTlock app.

- 2) Touch digital keyboard until the backlight is on.
- 3) Listen to the doorbell tone from your phone.
- 4) Hear the lock motor disengaging the dead bolt.



÷		Record	S
	Search	All	*
2	158******* App		2017.03.15 14:39:54
	41234567 Passcode		Fail 2017.03.15 14:38:30
	7515747 Passcode		2017.03.15 14:38:24
	885715747 Passcode		Fail 2017.03.15 14:38:21
	94841087 Passcode		2017.03.15 14:37:38
	07515747 Passcode		2017.03.15 14:36:20



TTLock

Server Room

82

eKeys

0

Records

Generate

Passcode

Fingerprints

3**—×**

Passcodes

Ö

Settings

6-

Send eKey

RA


IC Cards



Locksmiths & Electronic Security

These steps are similar for IC Cards & Fingerprints


- 1. Select the lock you wish to add users to.
- 2. Press "IC Cards" or "Fingerprints", depending on what credential you wish to add.
- 3. Press the three vertical dots in the top right of the screen, and select "Add Fingerprint/IC Card".
- 4. Enter a name for the credential, & specify whether it is permanent or will only work for a limited time.
- 5. Follow the prompts to add a fingerprint/IC Card. The software will ask you to present the card/fob to the lock, or to place your finger on the fingerprint reader multiple times.
- Once this is complete, "Operation Successful" will show, & you will return to the first screen with the new credential added.

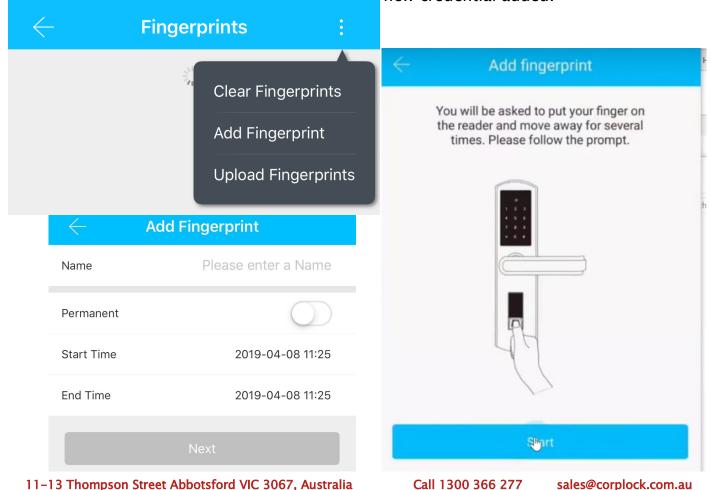



Gateway Instructions


Sold Separately

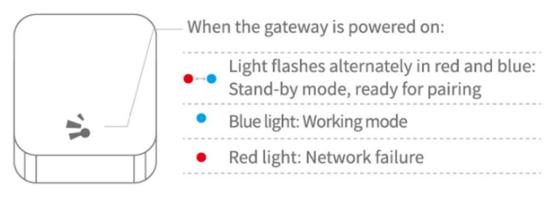

Pair the Gateway with APP




9) Add complete

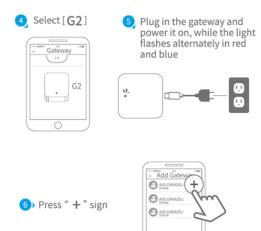

- 1. Open "TTLock" and press the menu button.
- Select the "Gateway" option, then press the "+" icon.
- 3. Press the "G2" Gateway option, then plug the gateway into power using the included USB-C cable.
- 4. Select the Wi-Fi network & enter password.
- 5. The gateway will then search for nearby locks.




Installation & Mounting Instructions

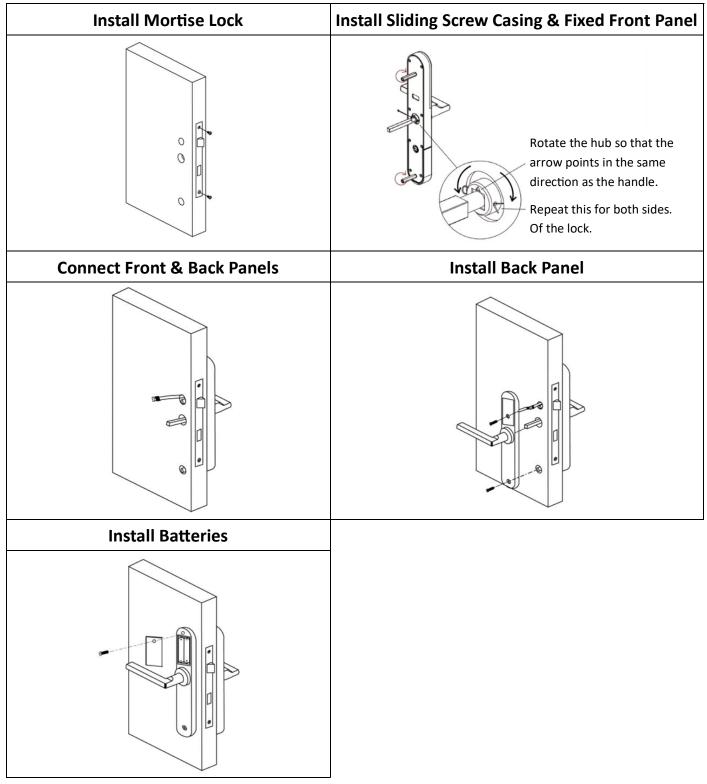




Lock Handing Instructions

Notice: Adjust the handle according to the direction you open the door

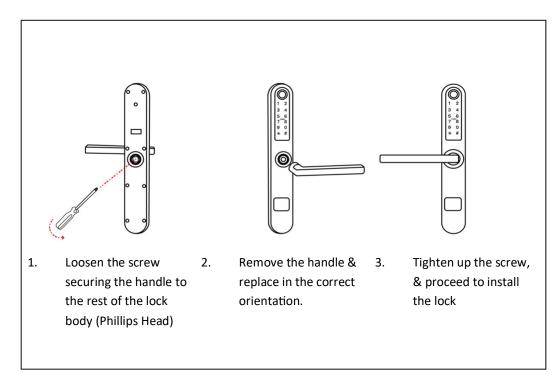


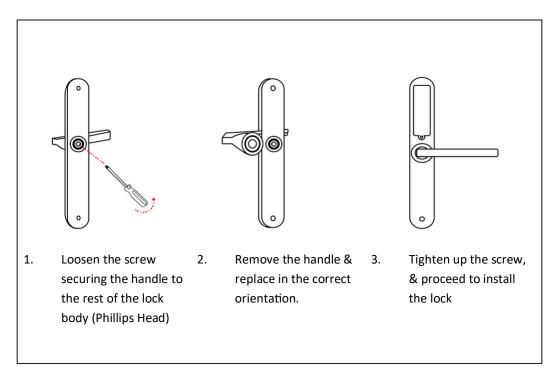



Lock Dimensions (Not to Scale)

Handle Dimensions

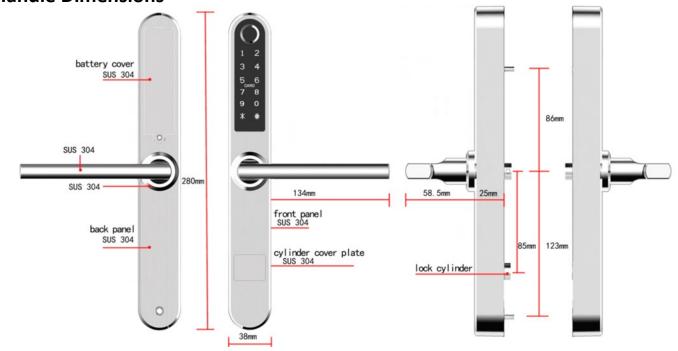

Mortise Lock Options

