

# CB Folding-S Features and Accessories




## Optional Item (sold separately)

**WFM-2 Locking shoe mount** \_\_\_\_\_  
(for wireless operation, flashes or cords without 1/4" x 20 thread)



## Camera mounting instructions

Camera screw (two positions)

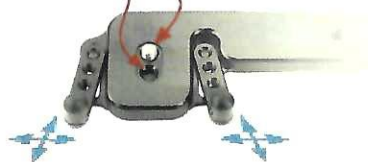

### Choosing the camera position

The camera plate has two (2) camera position screw holes for positioning the camera.

### Choosing the front or back hole

Depends on anti-twist arms positioning.

### Setting the camera anti-twist

Once the camera is positioned, adjust the two (2) camera anti-twists to contact the front of the camera.



The anti-twist arm (with post) arm has four threaded holes and the camera plate has a slot. Only use the back threaded hole. Where the anti-twist post makes contact to the camera is the photographer's preference.

Tighten the two (2) camera anti-twist screws located on the bottom side of the camera plate using the 1/8" Allen wrench provided with the bracket.

*The camera screw has some play in the screw hole. Make sure camera and camera screw are pushed backward. This will insure the best anti-twist for the camera.*

## Flash anti-twist instructions

Canon off-camera cord II,  
Canon Cord 3, Nikon SC-17  
(first time installation)

- 1- Attach cord with screw  
(do not tighten completely)
- 2- Slide one anti-twist to cord  
(tighten anti-twist screw)
- 3- Slide other anti-twist to cord  
(tighten anti-twist screw)
- 4- Tighten flash screw to cord

Nikon SC-28, SC-29 Cords  
(first time installation)

- 1- Attach cord (reversed) with screw  
(do not tighten completely)
- 2- Slide left anti-twist to cord  
(tighten anti-twist screw)
- 3- Remove cord and install (normal)
- 4- Slide right anti-twist to cord  
(tighten anti-twist screw)
- 5- Tighten flash screw to cord