

## Features and Accessories



### Optional Items (sold separately)

**WFM-2** Locking shoe mount with anti-twist  
(for wireless operation, flashes or cords without 1/4" x 20 thread)

**MC** Cold shoe  
(for Radio Slaves or additional flash with lock ring)

**CK-500** Arca-Swiss style bottom plate



### Flash anti-twist instructions

Canon off-camera cord II,  
Canon Cord 3, Nikon SC-17  
(first time installation)

Nikon SC-28, SC-29 Cords  
(first time installation)

1- Attach cord with screw  
(do not tighten completely)

2- Slide one anti-twist to cord  
(tighten anti-twist screw)

3- Slide other anti-twist to cord  
(tighten anti-twist screw)

4- Tighten flash screw to cord

1- Attach cord (reversed) with screw  
(do not tighten completely)

2- Slide left anti-twist to cord  
(tighten anti-twist screw)

3- Remove cord and install (normal)

4- Slide right anti-twist to cord  
(tighten anti-twist screw)

5- Tighten flash screw to cord