



CB FoldingSB

Features and Accessories

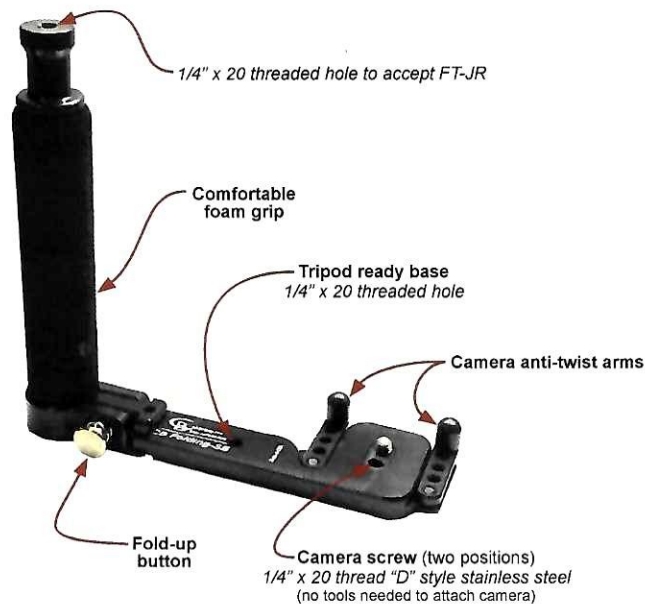

Camera mounting instructions

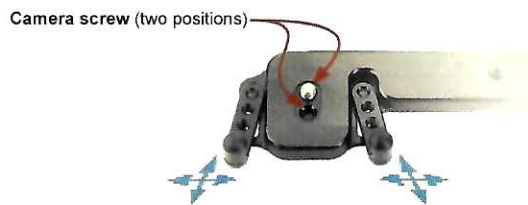

Choosing the camera position

The camera plate has two (2) camera position screw holes for positioning the camera.

Choosing the front or back hole

Depends on anti-twist arms positioning.

Setting the camera anti-twist

Once the camera is positioned, adjust the two (2) camera anti-twists to contact the front of the camera.



The anti-twist arm (with post) arm has four threaded holes and the camera plate has a slot. Only use the back threaded hole. Where the anti-twist post makes contact to the camera is the photographer's preference.

Tighten the two (2) camera anti-twist screws located on the bottom side of the camera plate using the 1/8" Allen wrench provided with the bracket.

The camera screw has some play in the screw hole. Make sure camera and camera screw are pushed backward. This will insure the best anti-twist for the camera.