


# CB Mini-RC INSTRUCTIONS



phone: (440) 810-1199  
website: [www.custombrackets.com](http://www.custombrackets.com)  
email: [info@custombrackets.com](mailto:info@custombrackets.com)

## Top view

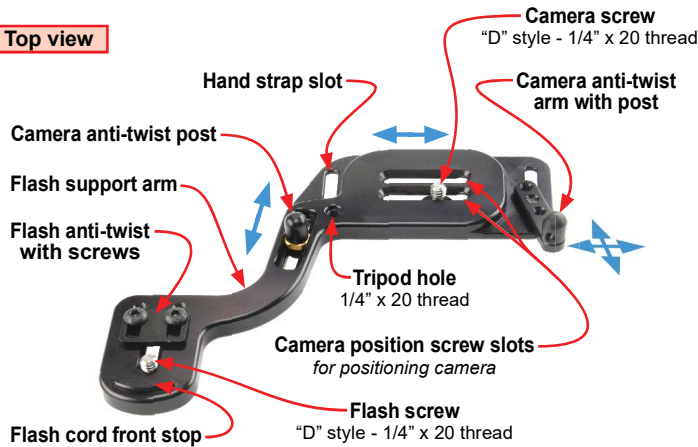

## Bottom view

### Optional Item (sold separately)

**WFM-2** Locking shoe mount (for flashes and cords without 1/4" x 20 thread)



*Lifetime warranty. See website for warranty policy.*

## Camera mounting instructions

### Choosing the camera position

The camera plate has two (2) camera position screw slots for positioning the camera.

### Choosing the front or back slot

- 1- Clearance for photographer's hand between camera and flash.
- 2- Access to the battery compartment.
- 3- Comfortable grip when holding camera in the vertical position.

**Screw, camera plate, or camera's mounting hole may be damaged and warranty will be void if camera screw is not installed and removed at end of slot marked "install screw this end".**

### Choosing position left to right in slot

- 1- Access to the battery compartment.
- 2- Comfortable grip when holding camera in the vertical position.

There is no set position for any camera on the CB-Mini RC. Positioning of the camera on the CB-Mini RC is the photographer's preference on how comfortable it feels when holding the camera in the horizontal and vertical positions and for battery access.

### Setting the camera anti-twist

Once the camera is positioned, adjust the two (2) camera anti-twists to contact the front of the camera.



The first camera anti-twist post is located on the flash support arm. Some minor adjustment in the camera position may be necessary for the best location of this post against the camera body. This is the photographer's preference as to where the post makes contact to the camera.



The second anti-twist post is located on the camera anti-twist arm. The arm has three threaded holes and the camera plate has a slot. Choosing which threaded hole and where the anti-twist post makes contact to the camera is the photographer's preference.

Tighten the two (2) camera anti-twist screws located on the bottom side of the camera plate using the 1/8" Allen wrench provided.

### Flash mounting instructions

Canon off-camera Cord II, Canon Cord 3, Nikon SC-28, SC-29 Cords or equal

- 1- Attach cord to camera plate with flash screw (do not tighten completely)
- 2- Slide flash anti-twist to captured cord between anti-twist and flash cord front stop choose screw position holes to allow anti-twist to be fully against flash cord and tighten the two (2) anti-twist screws using the 1/8" Allen wrench provided.
- 3- Tighten flash screw to cord