

GFM (Gimbal Flash Mount) INSTRUCTIONS



phone: 440.810.1199
website: www.custombrackets.com
email: info@custombrackets.com



Different configurations shown.
6" extension arm can be removed to
move flash closer to lens.

Flash anti-twist instructions

Canon off-camera cord II, Canon Cord 3, Nikon SC-1

- 1- Attach cord with screw
(do not tighten completely)
- 2- Slide one anti-twist to cord
(tighten anti-twist screw)
- 3- Slide other anti-twist to cord
(tighten anti-twist screw)
- 4- Tighten flash screw to cord

Nikon SC-28, SC-29 Cords

- 1- Attach cord (reversed) with screw
(do not tighten completely)
- 2- Slide left anti-twist to cord
(tighten anti-twist screw)
- 3- Remove cord and install (normal)
- 4- Slide right anti-twist to cord
(tighten anti-twist screw)
- 5- Tighten flash screw to cord

Optional Items (sold separately by Custom Brackets)

WFM-1 Locking shoe mount with anti-twist
(for flashes and cords without 1/4" x 20 thread)

