 


## Folding the bracket for storage

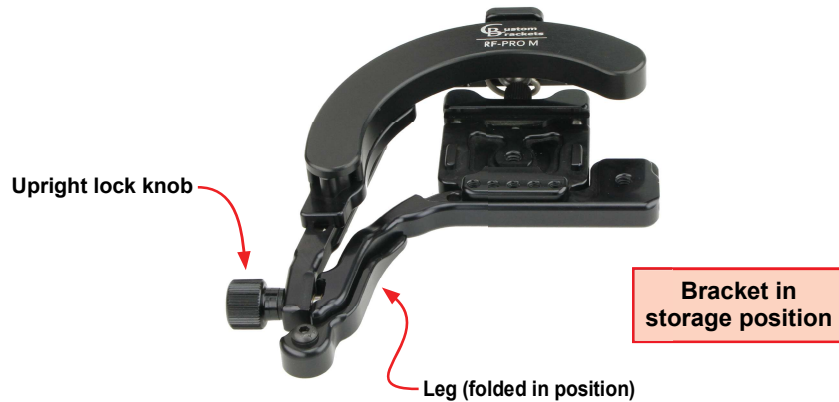

Remove your camera and flash prior to storage. It is not necessary to remove a flash cord if attached to the flash mounting plate. Loosen the upright lock knob and rotate upright backward to lower until flat. Fold in the leg. If upright is in lowest position, rotate the flash rotator to its 45 degree position for storage.

### **Note:**

- The upright knob may be tightened when the bracket is in the storage (flat) position. The upright lock knob **must** be loosened prior to rotating the upright or damage may occur and warranty will be void.

## **Attaching the bracket to a tripod or monopod**

Attach the RF-PRO M to a tripod / monopod's 1/4" x 20 threaded mounting stud and tighten until firmly attached.

### **Optional Accessories - Sold Separately**

<b>RF-WT</b>	Locking shoe mount with anti-twist for wireless flash operation	<b>RF-C1</b>	Connector for Spider Camera Holster™ - Carry Speed™
<b>WFM-2</b>	Locking shoe mount with anti-twist for wireless transmitters	<b>RF-C2</b>	Connector for Black Rapid™ ConnectR
<b>CK-501</b>	Bottom quick release plate for tripod (Manfrotto RC2 Series)	<b>RF-C3</b>	Connector for Sun Sniper™ - Custom SLR™ - Joby™

Refer to instructions included with accessory for attaching to bracket

### **USA Lifetime Warranty**

For the entire lifetime of the product to the original owner, Custom Brackets will repair or replace free of charge, any defect in material or workmanship. Warranty does not cover repairs due to customer abuse, negligence, impact or any modifications made by the customer. Warranty service is available by returning the RF-PRO M (shipping prepaid) to Custom Brackets. All returns must include a return authorization (RA) number (contact Custom Brackets to obtain), letter explaining the problem, and a copy of the sales receipt.

### **International Lifetime Limited Warranty**

For the entire lifetime of the product to the original owner, Custom Brackets will repair or replace free of charge, any defect in material or workmanship. Warranty does not cover repairs due to customer abuse, negligence, impact or any modifications made by the customer. Limitation to the warranty - after one year shipping charges are not covered. Warranty service is available by returning the RF-PRO M (shipping prepaid) to Custom Brackets. All returns must include a return authorization (RA) number (contact Custom Bracket to obtain), letter explaining the problem, and a copy of the sales receipt.

### **Repair**

Repair service is available by returning the RF-PRO M (shipping prepaid) to Custom Brackets. All returns must include a return authorization (RA) number (contact Custom Bracket to obtain), letter explaining the problem, and a copy of the sales receipt. A repair cost will be issued and must be approved prior to any repairs. Shipping charges are the responsibility of the customer.

### **Maintenance**

 
The only maintenance necessary on the RF-PRO M is to clean the inside track of the rotator (backside) periodically with a clean cloth and WD-40 to remove any dust or dirt that may have accumulated to keep it working at its best. The rotation tension is factory set. Attempting to adjust the tension will void the warranty and may result in damage to the camera, lens or flash.

# RF-PRO M (Rapid Fire) INSTRUCTIONS

**Custom Brackets**  
Innovative Camera Mount Accessories



  
Made in USA  
U.S. Patent 8,774,618

phone: 440.810.1199  
website: [www.custombrackets.com](http://www.custombrackets.com)  
email: [info@custombrackets.com](mailto:info@custombrackets.com)

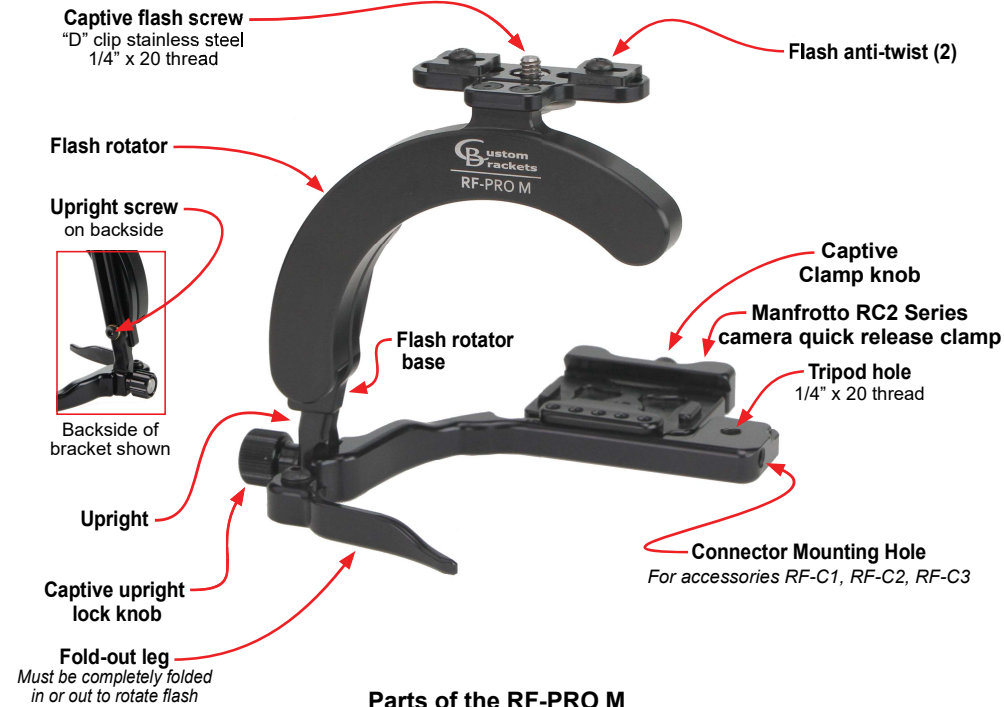

**Parts of the RF-PRO M**
  
## Attaching the camera to the bracket

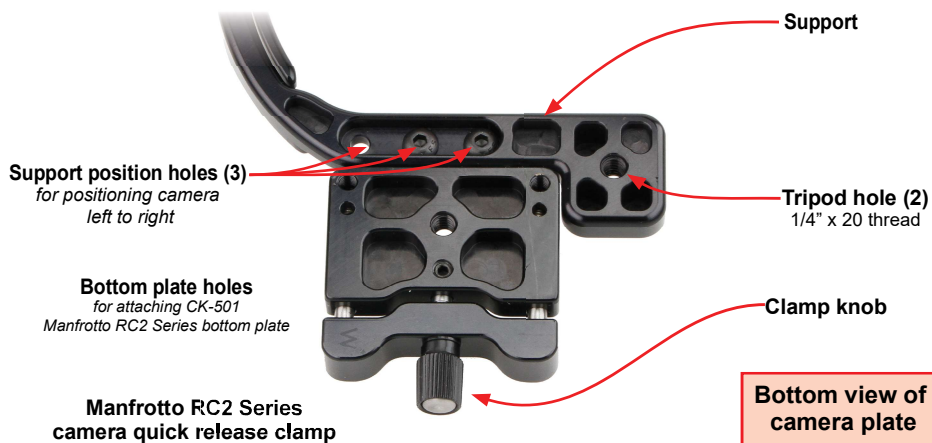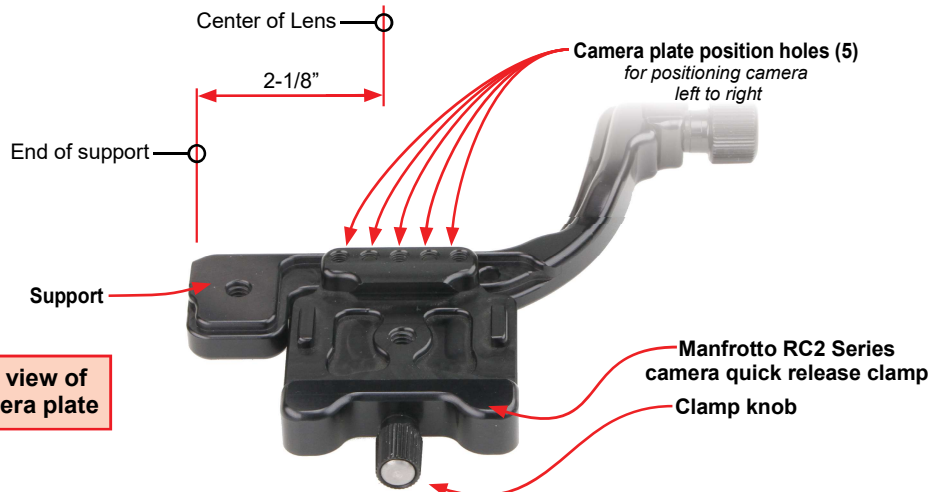

### Note:

- Prior to attaching the camera, raise the flash rotator to the up position (see back view of bracket).

 
### To attach the camera:

Open the clamp to the fully open position by turning the clamp knob in the counter-clockwise direction. Insert your camera (with Manfrotto RC2 Series camera plate) into the quick release clamp. Close the clamp securely by turning the knob in the clockwise direction.

### To remove the camera:

Open the clamp to the fully open position by turning the clamp knob in the counter-clockwise direction. Remove your camera from the quick release clamp.

## Attaching the flash cord to the flash mount

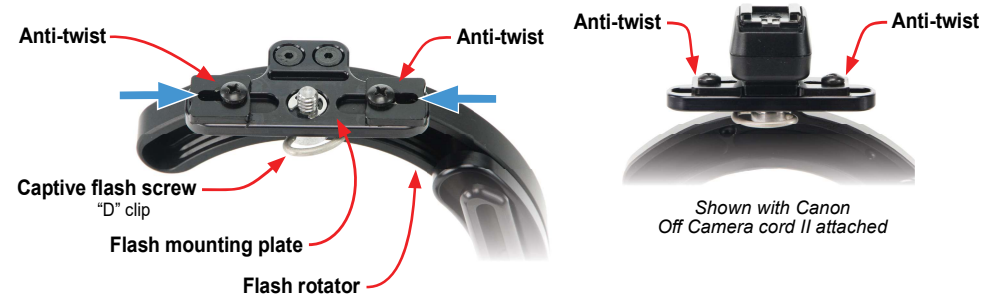

### Flash anti-twist procedure

Canon off-camera cord II, Canon Cord 3,  
Nikon SC-17 cords (first time installation)

 
Nikon SC-28, SC-29 Cords  
(first time installation)

- |  |  |
|--|--|
| 1- Attach cord with flash screw (do not tighten completely)  | 1- Attach cord (reversed) with flash screw (do not tighten completely) |
| 2- Slide one anti-twist to cord (tighten anti-twist screw)   | 2- Slide left anti-twist to cord (tighten anti-twist screw)            |
| 3- Slide other anti-twist to cord (tighten anti-twist screw) | 3- Remove cord and install normal                                      |
| 4- Tighten flash screw to cord                               | 4- Slide right anti-twist to cord (tighten anti-twist screw)           |
|  | 5- Tighten flash screw to cord   |

### Note:

- Do not rotate the flash rotator unless a flash cord or the RF-WT (mount for wireless flash operation) is attached to the flash mounting plate and "D" clip of the screw is folded down. Rotating without one of these attached may cause damage to the rotator and void warranty.

## Adjusting the flash rotator height

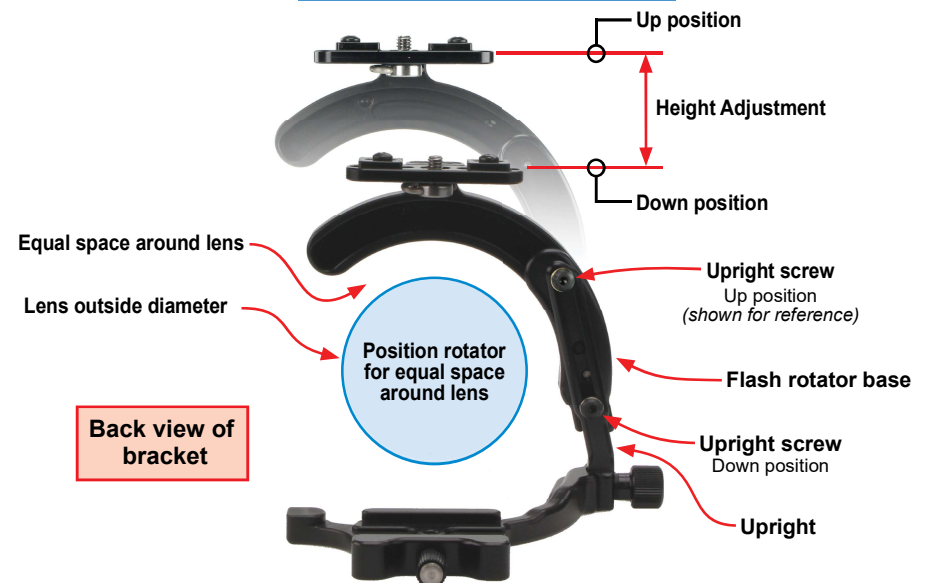

The flash rotator is adjustable to work with short or tall cameras.

Adjust by loosening the upright screw, then position the rotator to be centered around the lens of the camera. After desired position of rotator is set, lock upright screw using the 1/8" Allen wrench provided with bracket.

### Note:

- Rotating without equal space around lens may cause damage to the lens or bracket.
- The leg must be completely folded in or out to rotate flash to avoid damage to the bracket.