

# JACK MASON


## OVERLAND

Field 3-Hand 42mm

JM-F111-003



## Epson Caliber No. VL57 Function

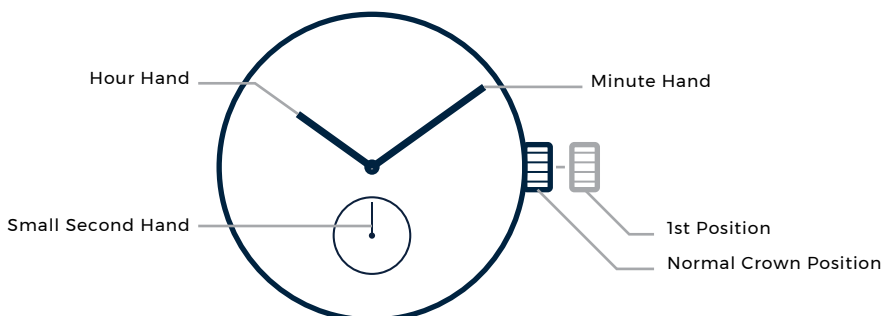

### Setting The Time

1. Pull the crown out to the **1st Position** so that the **Second Hand** stops at zero position.
2. Turn the crown to set **Hour and Minute Hands**.
  - \* When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.
3. Push the crown back to **Normal Position**.

### Power Depletion Warning Function:

1. When the battery nears its end, the small second hand moves at two-second intervals instead of the normal one-second intervals. In that case, have the battery replaced with a new one as soon as possible.