



## THE BEST BRANDS, THE BEST PRODUCTS

Your one stop shop for all sauna and steam needs.

---

2021

saunas.com  
(888) 503-8157  
info@saunas.com  
6700 N Linder # 152-180  
Meridian, Idaho 83646

### Warm Start: Is It Installed?

If you enable Warm Start on the Elite and you get a steam tank temperature error when you try to turn on Warm Start for the first time (see **Turning Things On and Off** on page 2), you'll need to remove the cover from your steamer and see if the Warm Start option is installed. **Always turn off all power to the steamer before removing the cover!**

If warm start is installed, you'll see a temperature sensor on the side of the steam tank which connects through a tube to the steamer's circuit board. *Diagram 1 shows an AX generator with the insulation folded up to show the temperature sensor and its connection.*

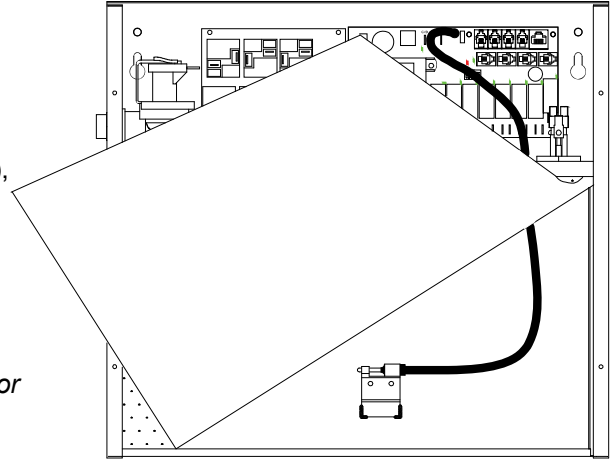


Diagram 1

If Warm Start is installed and you still get a sensor error, first make sure the sensor is connected to both pins on the steamer board (between the cable jacks and the level probe wires). *If it is connected, contact Support for further assistance.*

**If Warm Start is not already installed**, the following sections will tell you how to install it, enable it and how to use it.

### Installing the Warm Start Temperature Sensor

When you receive your Warm Start kit, you should receive a temperature sensor to be mounted on the tank and a retaining clip to hold the sensor in place. The sensor will have a metal tip and a long neoprene tube ending in a small connector. The long tube should have a yellow band *If it does not have a yellow band, contact Support for assistance.*

1) **Install the retainer clip**

Carefully fold the insulation out of the way to expose the side of the steam tank. Slide the bottom lip of the retainer clip down into the bracket on the side of the tank. It will snap into place when the clip's bumps slide into the bracket's holes. *Slide the clip while flat against the tank so the bracket does not get damaged.* (See Diagram 2 at right.)

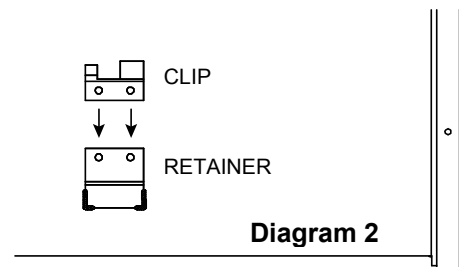


Diagram 2

2) **Install the sensor**

Slide the metal tip into the retaining clip until the tip is touching the tank and the end of the neoprene tube is held in place by the large loop of the retaining clip. (See Diagrams 3 and 4 at right.)

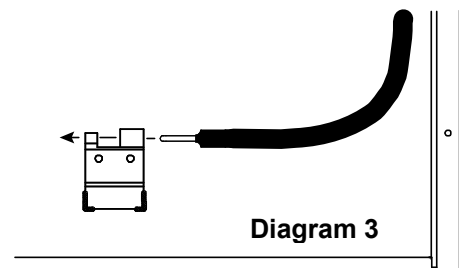


Diagram 3

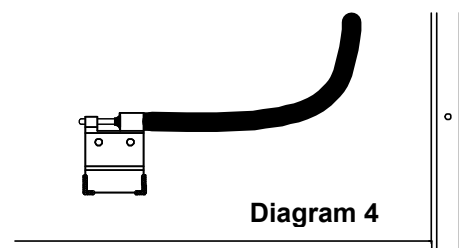


Diagram 4

3) **Route the neoprene tube up through a hole near the level probe, then plug it onto the 2 pin header between the sockets and the level probe wires.** (see Diagram 5 at right.)

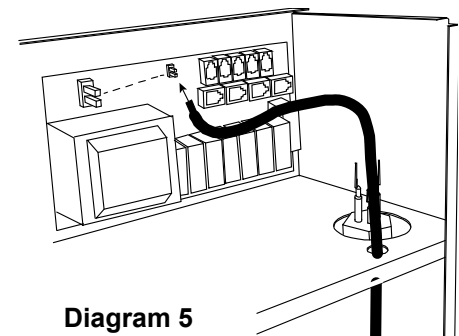


Diagram 5

*If the connection is loose, use a flat screwdriver tip to bend the pins a little further apart.*

### Using Warm Start


 
**Warm Start** is an option which keeps the water in the steam tank warm so the steamer produces steam more quickly after the bath is turned on. If you do not have the Warm Start sensor installed, select Warm Start and move the slider to disable it.

First, go to the Tools menu by pressing its button.



Scroll down and select Warm Start, then set the slider switch to Enable Warm Start (green).

If the Warm Start sensor is installed, you may adjust the temperature up from the 176°F default to speed up steam production even more. *If you do turn up the Warm Start temperature, watch for steam from the steam outlet while the bath is off. If you see steam while only Warm Start is running, turn down the temperature a few degrees and retest. Repeat until the steaming stops.*

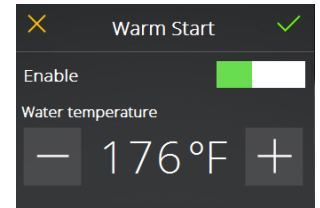

All OFF



WARM START ON



BATH ON



### Turning Things On and Off

Once Warm Start is enabled and its sensor installed the home page bath on/off buttons will change. The Bath On/Off indicator bar shows at the top of the home screen. Note: *if it isn't visible, simply touch the screen to see it again.* Touch the right side to turn the bath on, the center to start Warm Start (if installed) and the left to turn the bath or Warm Start off.

When Warm Start is on, it will stop during a bath, then resume when the bath stops. Press the bath Off button to turn Warm Start off.

For assistance contact Technical support at

P.O. Box 2258, Woodinville, WA 98072  
 Phone 1-800-363-0251  
 1-425-951-1120  
 Fax 1-425-951-1130  
 eMail [Support@amerec.com](mailto:Support@amerec.com)