



CLEANING GUIDE

Protect your investment. Pax is a precision device. It's important to clean and lubricate Pax on a regular basis or every 5 to 10 uses to keep it in top performance.

CLEANING THE MOUTHPIECE

- ✘ Push on the mouthpiece to release it into the ON position. Gently pull the mouthpiece to remove it, using the fingernail groove.
- ✘ Wipe down the mouthpiece with an alcohol wipe from the cleaning kit. Clean the outside and the inside of the mouthpiece stem using a pipe cleaner moistened with isopropyl alcohol or warm soapy water. You can find isopropyl (rubbing alcohol) at your local drugstore.
- ✘ The mouthpiece can be soaked in warm soapy water or isopropyl alcohol. Ploom recommends soaking the mouthpiece with your oven screen at least once a month. Do not disassemble the mouthpiece.
- ✘ Always make sure to dry the mouthpiece completely before applying the mouthpiece lubricant.

MOUTHPIECE LUBRICANT

- ✘ Apply the mouthpiece lubricant after every cleaning session by following the the application instructions found at www.ploom.com/support in the Manuals section. Regular applications of mouthpiece lubricant will make future cleaning sessions a breeze. Remember a little goes a long way.

TEMPERATURE BUTTON

- ✘ Avoid getting moisture around or near the temperature button.

CLEANING THE OVEN & VAPOR PATH

- ✘ If Pax has been on, make sure to wait a couple of minutes for the device to cool down before cleaning the body and oven of the device. Always take precaution when handling a potentially hot device. With the mouthpiece removed, ensure the LED Indicator is displaying your current temperature setting color.
- ✘ Moisten a pipe cleaner with isopropyl alcohol or warm soapy water. Remove the oven lid and insert the pipe cleaner into the stainless steel vapor path from the mouthpiece end until the the oven screen pops out.
- ✘ Use an alcohol wipe, a moistened bent pipe cleaner or a moistened Q-Tip to clean the oven area and screen.

CLEANING THE OVEN LID

- ✘ Do not submerge the oven lid in liquid.
- ✘ Use an alcohol wipe, moistened bent pipe cleaner or Q-Tip to clean the oven lid.
- ✘ Ensure the screen and oven lid are dry before reassembling.

✘ Do not clean Pax other than instructed by Ploom. The warranty does not apply should damage occur outside of Ploom's cleaning instructions.

✘ ✘ Some tobacco blends may require more frequent cleaning. If you start to see any liquid or residue building up in your device at all, clean it. If your Pax is not operating at its best and has not been recently cleaned, a good rule of thumb is to clean it thoroughly before requesting support. A clean Pax is a happy Pax!

QUESTIONS?

Email or chat at Ploom.com/Support, Facebook.com/PloomRoom and/or [@Ploom](https://Twitter.com/Ploom).

