
### DETERMINE YOUR SIZE

#### 1pc cover for "I" shaped sofa

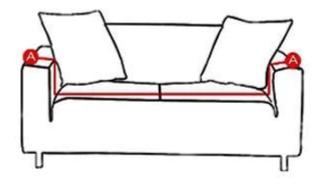

### Measuring the distance between AA


90-140cm (35-55in)

145-185cm (57-73in)

195-230cm (76-91in)

235-300cm (118-139in)

#### 2pcs cover for "L" shaped sofa

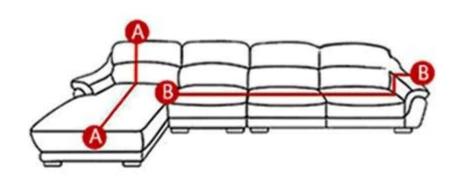

### Choose the right size


1 Seater Sofa Cover

2 Seater Sofa Cover


3 Seater Sofa Cover

4 Seater Sofa Cover


## HOW TO MEASURE

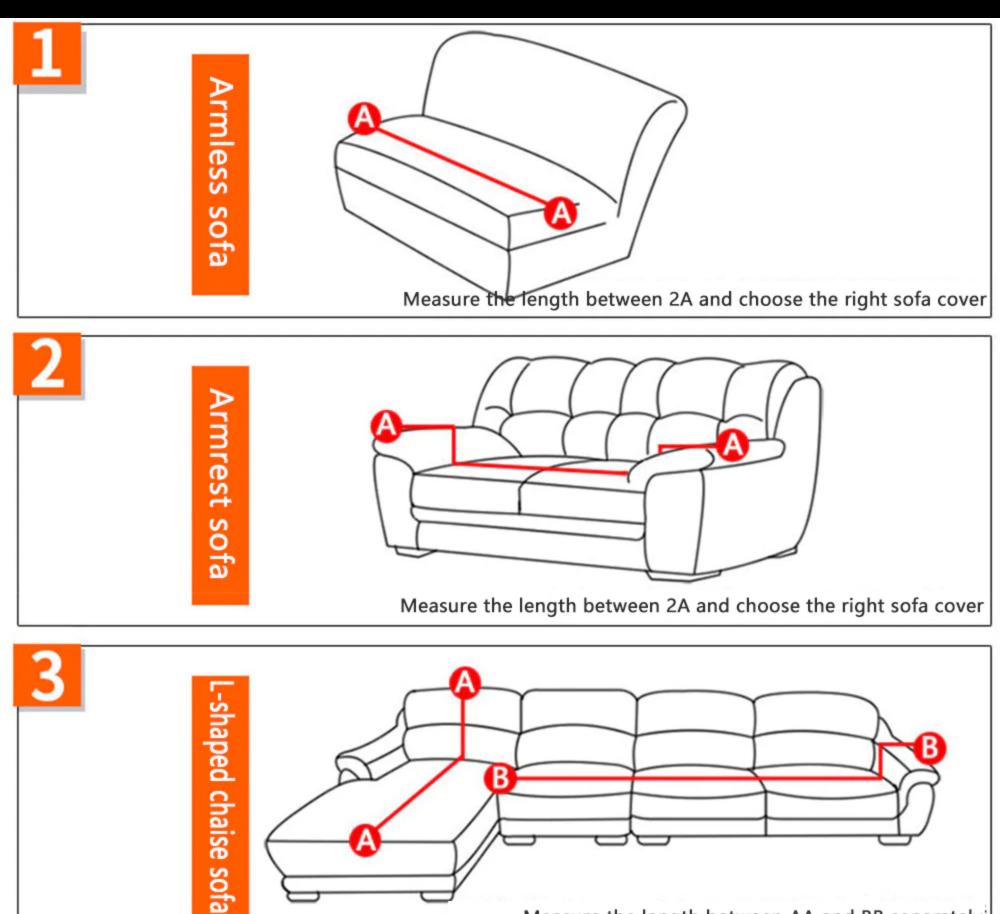

Measure the length between AA and BB separately:

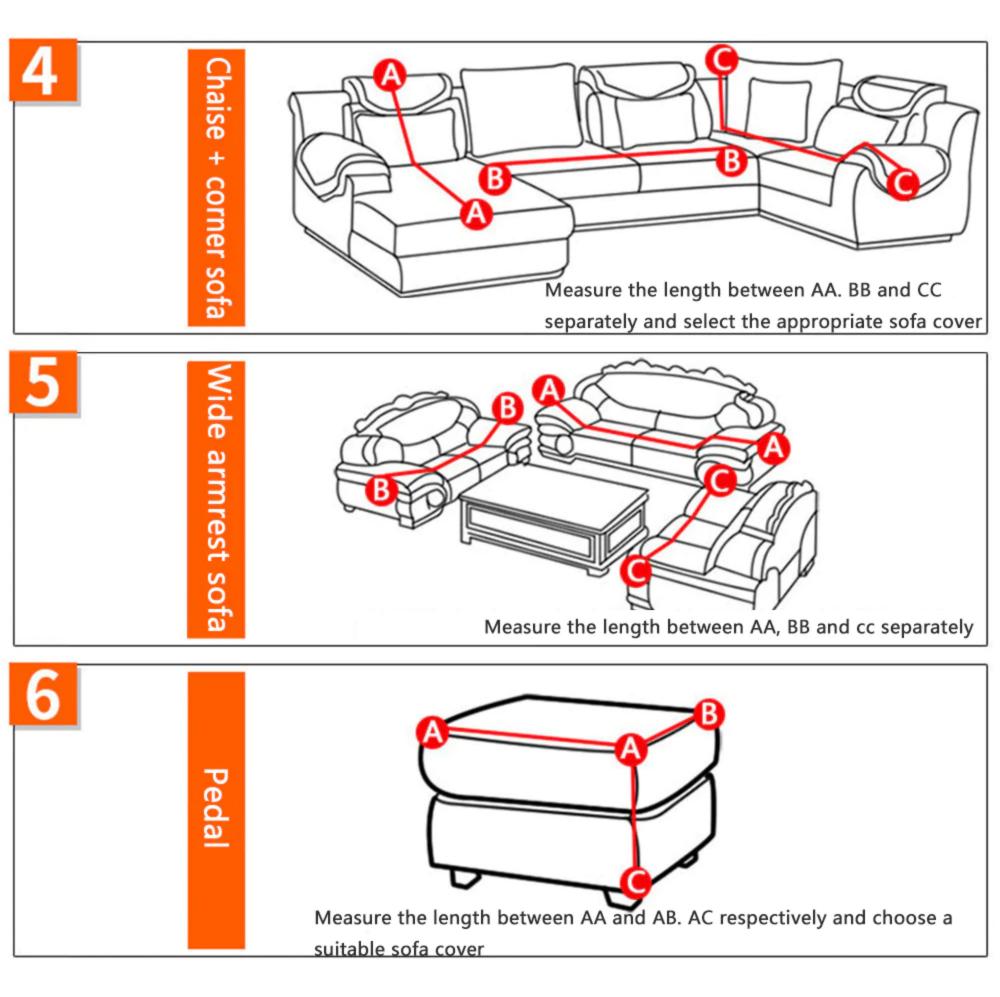


# HOW TO INSTALL

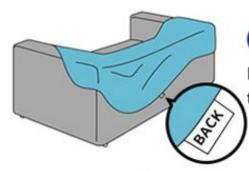


### STEP 1

Find the "Back" tags, and put this side at the back of the sofa.

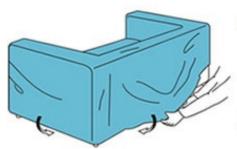


### STEP 2

Pull down to fit around the funiture, and buckle the elastic bottom on the all four sides of the sofa.

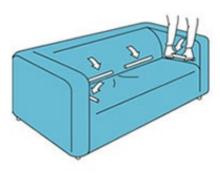

### STEP 3

Stuff excess fabric into the gap, then tuck the foam rods in to make the fabric deeply in the place better.

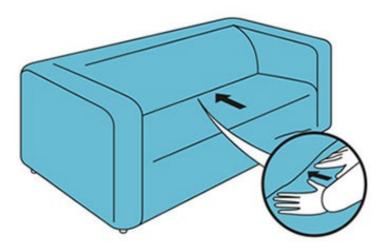

### STEP 4

Make the final adjustment, then you can enjoy it.