


USER MANUAL


Attention:

- 01. This lamp must be installed/dismantled by a qualifiel electrician.
- 02. The input voltage to the driver inside of the lamp is AC220-240V 50Hz.
- 03. Ensure the power is swithched off before installation/dismantling/maintenance.
- 04. Check power cable is properly connected before switching the lamp on.
- 05. Always follow the fire code (NFC/UFC) and allow at least 7.5cm space for ventilation.
- 06.Do not install the lamp on combustible, plaster board, sloping, or damaged surface.
- 07. Under no circumstances should the lamp be covered with insulation blankets or any other similar materials.
- 08.Do not wipe lamp with damp or wet cloth.

Installation Instruction:

- 01. Unscrew the installation plate from the lamp.
- 02. Fix installation plate to ceiling/wall with screws.
- 03. Connect the utility supply (L for Live wire, N for null wire).
- 04.fix the lamp to the installation plate.

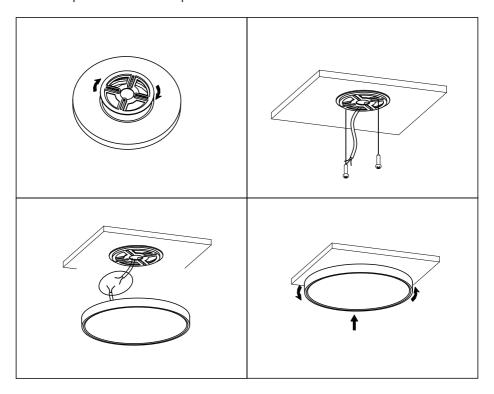

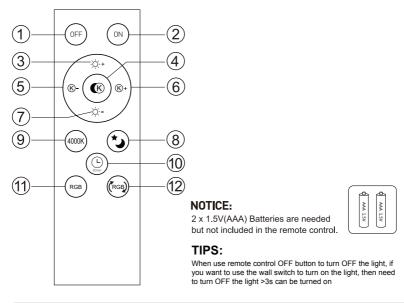

1	OFF	Turn off / Long press to turn off the side lighting
2	ON	Turn on / Long press to turn on the side lighting
3	- <u>`</u> Ċ-+	Brightness +
4	K	Color Temperature Switch Mode (3000K/4000K/6000K)
5	K -	Color Temperature -
6	K +	Color Temperature +
7	-;Ċ:-	Brightness -
8	(Night Light Mode
9	(4000K)	Natural White
10	(L) 3(croin)	Auto turn off after 30 Mins
11	RGB	change one color each time you press it
12	(RGB)	6 kinds of dynamic modes, change one mode each time you press it

