4 Channel Constant Voltage Power Repeater

Model No.: EV4

4 Channel/PWM signal input/Constant voltage output/3KV optoelectronic isolation



C∈ RoHS emc LVD

Features

- 12-36V constant voltage power repeater.
- 4 channel, 5A per channel.
- To receive PWM signal control.
- Power repeater in series or in parallel to expand output unlimitedly.
- \bullet Apply to single color, dual color, RGB or RGBW constant voltage LED strip or module.


Technical Parameters

Input and Output		
Input voltage	12-36VDC	
Input current	20.5A	
Input signal	PVVM	
Output voltage	4 x (12-36)VDC	
Output current	4CH,5A/CH	
Output power	4 x (60-180)W	
Output type	Constant voltage	
Output power	4 x (60-180)W	

Environment	
Operation temperature	Ta:-30°C ~+55°C
Case temperature (Max.)	Tc:+85°C
IP rating	IP20


Safety and EMC		
EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3 ETSI EN 301 489-17 V3.2.4	
Safety standard(LVD)	EN 62368-1:2020+A11:2020	
Certification	CE,EMC,IVD	
Warranty and Protection		
Warranty	5 years	
Protection	Reverse polarity Over-heat Short circuit	
Weight		
Net weight	0.120kg	
Gross weight	0.140kg	

Mechanical Structures and Installations

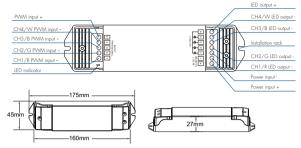


Wiring Diagram

• Parallel connection

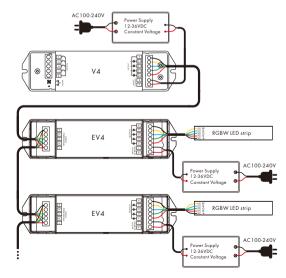

User Manual Ver 1.0.5

Series connection

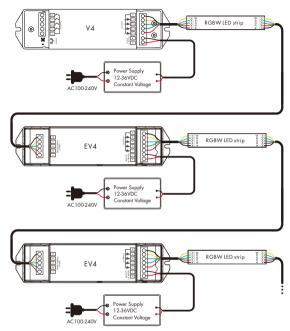

Note: If the power repeater is over heat or short circuit, the LED indicator will blink.

Malfunctions analysis & troubleshooting

Malfunctions	Causes	Troubleshooting
No light	No power. Wrong connection or insecure.	Check the power. Check the connection.
Wrong color	Wrong connection of R/G/B/W wires.	1. Reconnect R/G/B/W wires.
Uneven intensity between front and rear, with voltage drop	Output cable is too long. Wire diameter is too small. Overload beyond power supply capability. Overload beyond controller capability.	Reduce cable or loop supply. Change wider wire. Replace higher power supply. Add power repeater.

Safety & Warnings

- 1. The product shall be installed and serviced by a qualified person.
- 2. This product is non-waterproof. Please avoid the sun and rain.
- 3. Good heat dissipation will prolong the working life of the controller, Please ensure good ventilation.
- 4. Please check if the output voltage of any power supplies used comply with the working voltage of the product.
- 5. Ensure all wire connections and polarities are correct and secure before applying power to avoid any damages to the IFD liahts
- 6. If a fault occurs please return the product to your supplier. Do not attempt to fix this product by yourself.

User Manual Ver 1.0.5