

USER MANUAL


Thank you for your custom. Please read this manual carefully before installation and keep it safe for your reference.

Attention:

- 1. This lamp must be installed/dismantled by a qualified electrician.
- 2. The input voltage to the driver inside of the lamp is AC220-240V 50Hz.
- Ensure the power is switched off before installation/dismantling/maintenance.Check power cable is properly connected before switching the lamp on.
- 4. Always follow the fire code (NFC/UFC) and allow at least 7.5cm space for ventilation.
- 5. Do not install the lamp on combustible, plaster board, sloping, or damaged surface.
- 6. Under no circumstances should the lamp be covered with insulation blankets or any other similar materials.
- 7. Do not wipe lamp with damp or wet cloth.

Installation Instruction:


- 1. Twist diffuser anticlockwise to remove from lamp body.
- 2. Fix installation plate to ceiling/wall with screws.
- 3. Connect the wires(L for live wire,N for null wire)and fix the lamp to the installation plate.
- 4. Return the diffuser to the lamp by twisting it clockwise onto the body of the lamp.

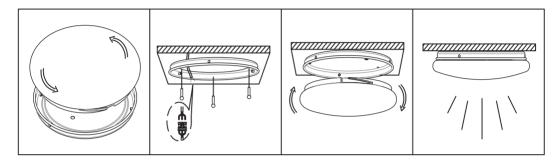

Special Attention:

- 1. Don't dismantle the lamp or unscrew the led broad,otherwise it will affect the heat dissipation,and reduce the lifespan of the led ceiling light.
- 2. if you have any question about the product, please consult our professional engineers.

Remote Control Guide:

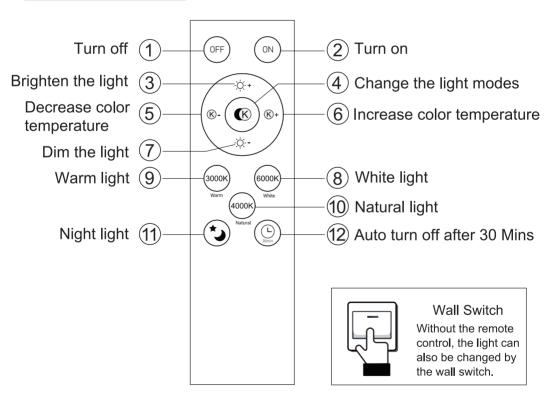

Open the cover 2 pcs of AAA batteries needed Note:Batterie Not Included

