

Ultrathin Touch Slide RF Remote Controller

Model No.: R11, R12, R13, R14, R10

Touch color slide / 1-5 color / Wireless remote 30m distance / CR2032 battery / Magnet stuck fix

Features

- Apply to single color, dual color, RGB, RGB+W or RGB+CCT LED controller.
- Ultra sensitive color adjustment touch slide.
- Each remote can match one or more receiver.
- CR2032 battery powered.
- Operate with LED indicator light.
- Magnet on the back which can be easily stuck on back holder or any metal surfaces.
- White & Black available

 


CE RoHS LVD RED

Technical Parameters

Input and Output		Safety and EMC		Package	
Output signal	RF(2.4GHz)	EMC standard (EMC)	ETSI EN 301 489-1 V2.2.3	Size	L156 x W48 x H22mm
Working voltage	3VDC(CR2032)		ETSI EN 301 489-17 V3.2.4	Gross weight	0.075kg
Working current	<5mA	Safety standard(LVD)	EN 62368-1:2020+A11:2020	Environment	
Standby current	<10μA	Radio Equipment(RED)	ETSI EN 300 328 V2.2.2	Operation temperature	Ta: -30 °C ~ +55 °C
Standby time	1 year	Certification	CE,EMC,LVD,RED	Warranty	
Remote distance	30m(Barrier-free space)			Warranty	5 years

Mechanical Structures and Installations

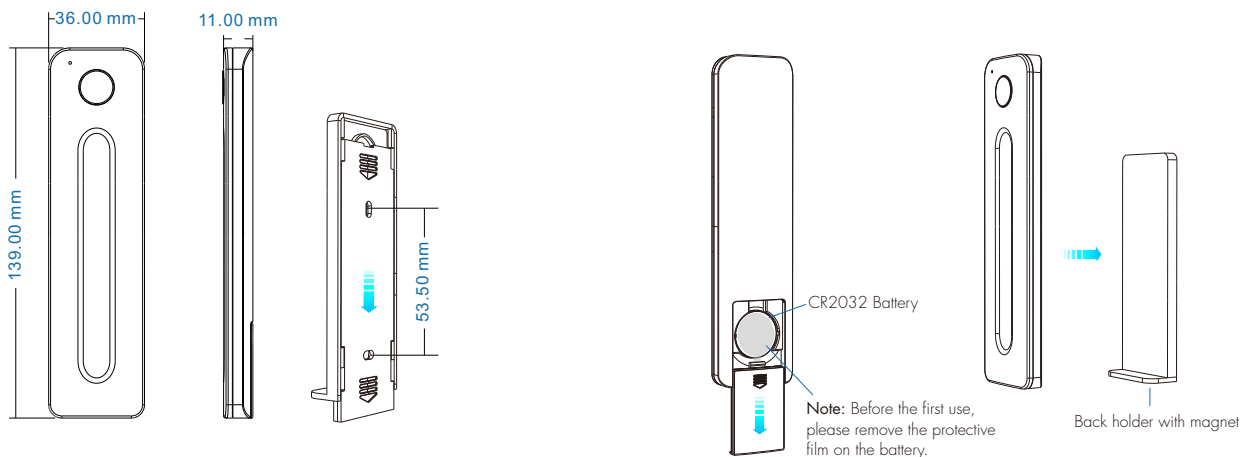

To fix the remote, three options are offered for selection:

- Option 1: stuck the remote on any metal surfaces directly.
- Option 2: fix the remote' back holder on the wall with two screws.
- Option 3: adhere the remote' back holder to the wall with paster.

Match Remote Control (two match ways)

End user can choose the suitable match/delete ways. Two options are offered for selection:

Use the controller's Match key

Match:
Short press match key, immediately press on/off key on the remote. The LED indicator fast flash a few times means match is successful.

 
Delete:
Press and hold match key for 5s to delete all match, The LED indicator fast flash a few times means all matched remotes were deleted.

Use Power Restart


Match:
Switch off the power, then switch on power, repeat again. Immediately short press on/off key 3 times on the remote. The light blinks 3 times means match is successful.

Delete:
Switch off the power, then switch on power, repeat again. Immediately short press on/off key 5 times on the remote. The light blinks 5 times means all matched remotes were deleted.


● R11 1 zone dimming remote

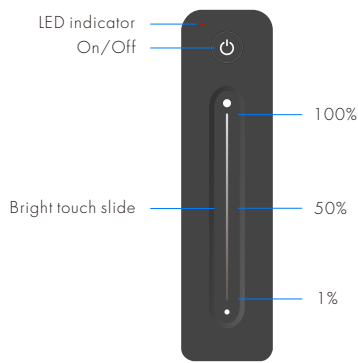


● R12 1 zone CCT remote

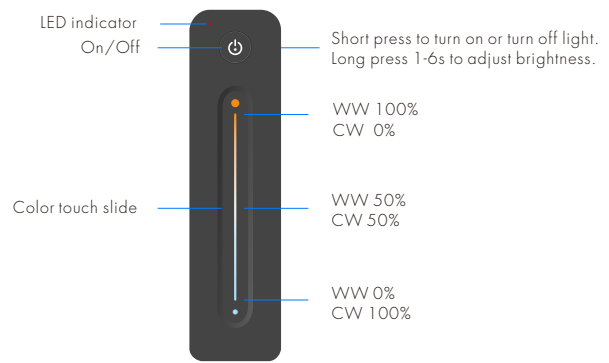 


● R13 1 zone RGB remote

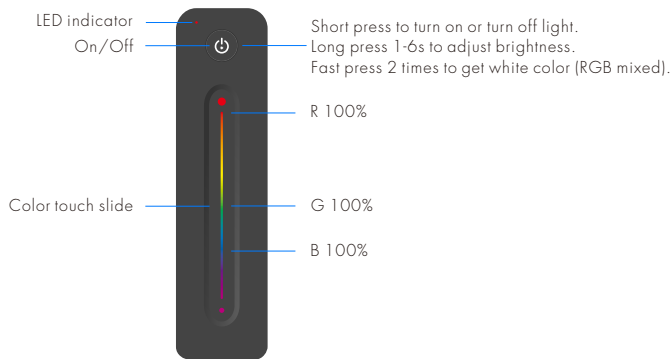 

● R14 1 zone RGBW remote

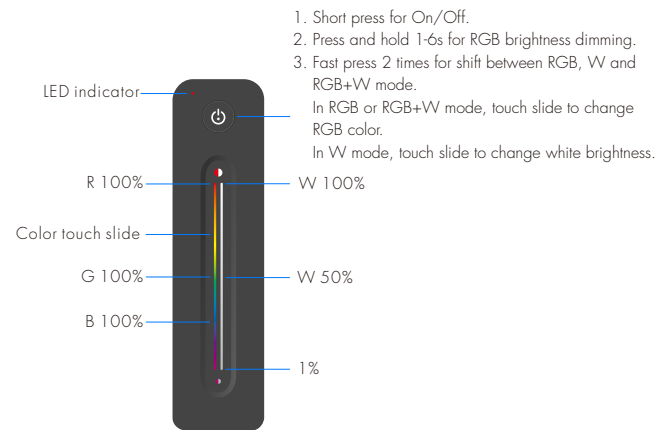 

● R10 1 zone RGB+CCT

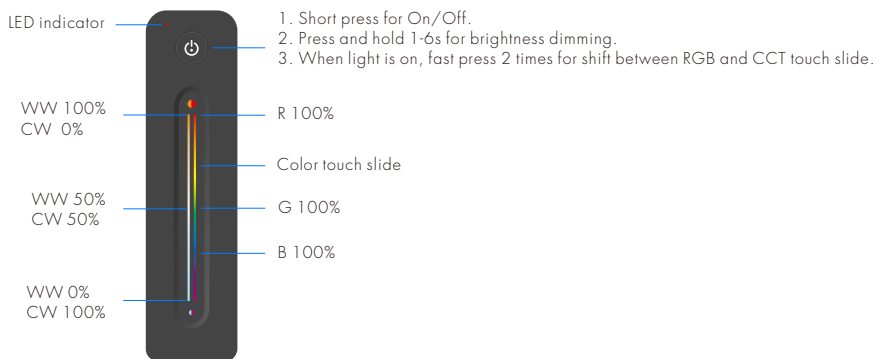 

Safety information

1. Read all instructions carefully before you begin this installation.
2. When installing battery, pay attention to the battery positive and negative polarity.
A long time without the remote control, remove the battery.
When remote distance becomes smaller and insensitive, replace the battery.
3. If no response from the receiver, please re-match the remote.
4. Gently handle remote, beware of falling.
5. For indoor and dry location use only.