Additional Warranty Information

Additional Warranty Limitations:

THE INCLUDED ONE-TIME LIMITED WARRANTY IS YOUR EXCLUSIVE WARRANTY AND IT REPLACES ALL OTHER WARRANTIES OR CONDITIONS, EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THESE WARRANTIES GIVE YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM JURISDICTION TO JURISDICTION. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF EXPRESSED OR IMPLIED WARRANTIES, SO THE ABOVE EXCLUSION OR LIMITATION MAY NOT APPLY TO YOU. IN THAT EVENT, SUCH WARRANTIES ARE LIMITED IN DURATION TO THE WARRANTY PERIOD. NO WARRANTIES APPLY AFTER THAT PERIOD.

Remedy Limitations:

IN NO EVENT SHALL THE COMPANY BE LIABLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES TO THE PURCHASER OR TO ANY THIRD PARTY, INCLUDING, WITHOUT LIMITATION, DAMAGES ARISING FROM LOSS OF PROPERTY, ECONOMIC LOSS, LOST PROFITS, LOSS OF BUSINESS OPPORTUNITY, OR STATUTORY OR EXEMPLARY DAMAGES, WHETHER FROM NEGLIGENCE, WARRANTY, STRICT LIABILITY OR UNDER ANY LEGAL THEORY IN CONTRACT, TORT, OR OTHERWISE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

Return Procedure:

ANY PRODUCT RETURNED UNDER THIS ONE-TIME LIMITED WARRANTY SHOULD BE SENT BY THE CUSTOMER VIA PREPAID MAIL OR COURIER TO THE SERVICE CENTER LOCATED AT 2301 RAVINE WAY, GLENVIEW, IL 60025, U.S.A. PLEASE INCLUDE WITH THE RETURNED PRODUCT TWELVE DOLLARS AND FIFTY CENTS (US\$12.50) FOR RETURN SHIPPING AND HANDLING. THE COMPANY ASSUMES NO RESPONSIBILITY WHATSOEVER FOR ANY LOSS OR DAMAGE DURING SHIPPING AND THE CUSTOMER IS SOLELY RESPONSIBLE FOR ANY SUCH LOSS OR DAMAGE. NOTE: PLEASE DO NOT RETURN THE PRODUCT TO THE STORE WHERE YOU BOUGHT IT FOR SERVICE AS THEY ARE NOT AUTHORIZED TO SERVICE THE PRODUCT.

PLEASE SEE THE ENCLOSED ONE-TIME LIMITED WARRANTY CARD FOR MORE INFORMATION ON YOUR GAMBLER™
CIGARETTE MAKING MACHINE.



Cigarette Making Machine Owner's Manual

READ CAREFULLY BEFORE OPERATING YOUR GAMBLER™ CIGARETTE MAKING MACHINE

THANK YOU and congratulations on your purchase of the Gambler™ Cigarette Making Machine.

The Gambler™ Cigarette Making Machine is durable, light weight and easy to handle with a slip-resistant mat and steady grip design. All these features make it the superior choice over other competitive models.

We strongly recommend that you take time to fill out and mail your warranty card. Product must be registered for warranty and service agreement to be valid.

GETTING TO KNOW YOUR GAMBLER™ CIGARETTE MAKING MACHINE



U.S. Design Patent No. 544,643 • Australian Registered Design No. 313998 • Austrian Registered Design No. 60221 • Canadian Registered Design No. 119503 • Chinese Registered Design No. ZL200630316082.7 • French Registered Design No. 071691 • German Registered Design No. 407 01 493.4 • Polish Registered Design No. Rp 12042 • U.K. Registered Design No. 4 001 873

PLEASE KEEP YOUR CIGARETTE MAKING MACHINE OUT OF THE REACH OF CHILDREN.

Operating Instructions

Carefully read the instructions before operating your Gambler™ Cigarette Making Machine.

 Make sure the crank arm is pulled fully to the left and click to lock into position before you start. (Figure A)



2. Slide open end of the king size cigarette tube on nozzle. (Figure B)



 Fill the corners first, deposit tobacco evenly in the chamber.
 Do not pack too tight. (Figure C)



4. Hold the machine firmly with the grip handle with one hand, then pull the crank arm slowly and evenly to the right with your other hand until it stops and then return the handle to its starting position. (Figure D)



Maintenance, Care & Handling

- · Clean tobacco chamber and nozzle after every use.
- Clean your Gambler™Cigarette Making Machine regularly by blowing tobacco residue from moving parts. Use a cotton swab and warm water to clean the injector, tamper and tobacco chamber.
- DO NOT OVERFILL THE MACHINES! Overfilling the machine with tobacco will cause the machine to jam. It will also bend the arm that injects the tobacco into the tube. DO NOT FORCE THE HANDLE! If it feels like you have to force the handle, you are using too much tobacco. STOP and REMOVE some of the tobacco before continuing. Overfilling the machine will void all warranties through the manufacturer.
- To avoid jamming of the device, do not use the following types of tobacco:
 - OVERLY MOIST TOBACCO (SUCH AS PIPE TOBACCO)
 - OVERLY DRY TOBACCO
 - VERY FINE CUT TOBACCO
- KEEP FINGERS CLEAR OF THE TOBACCO CHAMBER WHILE OPERATING CRANK ARM TO AVOID CUTS OR LACERATIONS! (see Fig. G)
- NEVER ROTATE CRANK HANDLE WITHOUT CIGARETTE TUBE ON NOZZLE. EXTENDED INJECTOR IS VERY SHARP! (see Fig. H & I)
- DO NOT OVERLOAD THE TOBACCO CHAMBER! DOING SO WILL CAUSE RESISTANCE IN THE CRANK ARM AND FORCING THE CRANK ARM WILL VOID THE WARRANTY!





