

READ BEFORE OPERATING YOUR POWERROLL™ 2 CIGARETTE MACHINE

Thank You and Congratulations on Your Purchase of the Premium PowerRoll™ 2 Electric Cigarette Machine

Top-O-Matic® presents its newest addition to its line, the new PowerRoll™ 2 Electric King Size & 100MM Cigarette Machine. Its one-touch operation makes it extremely easy to use. The chamber guard is an added safety feature and tools are included for cleaning to keep your PowerRoll 2 running smoothly.

Please carefully read the instructions first before operating your machine! Following the simple

maintenance requirements will keep your machine in optimum working order for years to come.

We strongly recommend that you take the time to fill out and mail in your Warranty Card. Your PowerRoll 2 must be registered for warranty and service agreement to be valid within 30 days of purchase.

GETTING TO KNOW YOUR NEW POWERROLL 2 CIGARETTE MACHINE



OPERATING INSTRUCTIONS

- 1 Plug in the machine and turn the power switch on.



- 2 Slide the open end of a cigarette tube onto nozzle.

- 3 Open Chamber Guard



- 4 PowerRoll 2 is set to make King size cigarettes by default. To make 100MM, slide the cigarette size lever at the rear of machine all the way out.

OPERATING INSTRUCTIONS (CONT.)


- 5 Filling the corners first, deposit tobacco evenly in the Tobacco Chamber. DO NOT OVERFILL!



- 6 Use the Tamper to pack tobacco down evenly.

- 7 Close the chamber guard then **press AND release** start button to activate injector. Turn off unit when not in use.



 In the event of a jam, the machine will reset itself to the starting position & the jam indicator light will flash (red).



to clear a jam follow these steps >

OPERATING INSTRUCTIONS [CONT.]

Clearing a Jam

- 1 After removing tube from nozzle, open Chamber Guard, then turn the Power Switch off.



- 2 Use the supplied Clearing Rod and Nozzle Brush to remove all tobacco from Tobacco Chamber



- 3 Turn the Power Switch on and close the Chamber Guard.



- 4 Keeping FINGERS and HANDS AWAY FROM NOZZLE OPENING, press and release the Chamber Guard to activate injector and ensure successful removal of jam.

The machine is now ready for use.

READ BEFORE OPERATING YOUR POWERROLL™ 2 CIGARETTE MACHINE

MAINTENANCE, CARE & HANDLING

- Keep cigarette machine out of the reach of children.
 - Clean tobacco chamber and nozzle after every use.
 - Clean your machine regularly by removing tobacco residue from tobacco chamber with the supplied Clearing Rod and Nozzle Brush.
 - Do not immerse machine in water.
 - To prevent jamming of the device, avoid the following types of tobacco:
 - Overly moist tobacco (such as pipe tobacco)
 - Overly dry tobacco
 - Very fine cut tobacco
- ! The use of other adaptors will void the warranty.**
- ! Do not overfill the tobacco chamber! Doing so will cause the machine to jam. Forcing the machine to inject jammed tobacco will void the warranty.**
- ! Always keep hands/fingers away from nozzle opening & tobacco chamber when pressing the 'start' button to avoid cuts & lacerations. Extended injector is very sharp!**



ADDITIONAL WARRANTY INFORMATION

ADDITIONAL WARRANTY LIMITATIONS

The included one year, one time limited warranty is your exclusive warranty and it replaces all other warranties or conditions, expressed or implied, including, but not limited to, the implied warranties or conditions of merchantability and fitness for a particular purpose. These warranties give you specific legal rights and you may also have other rights which vary from jurisdiction to jurisdiction. Some jurisdictions do not allow the exclusion or limitation of expressed or implied warranties, so the above exclusion or limitation may not apply to you. In that event, such warranties are limited in duration to the warranty period. No warranties apply after that period.

REMEDY LIMITATIONS

In no event shall the company be liable for special, incidental, or consequential damages to the purchaser or to any third party, including, without limitation, damages arising from loss of property, economic loss, lost profits, loss of business opportunity or statutory or exemplary damages, whether from negligence, warranty, strict liability or under any legal theory in contract, tort, or otherwise. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

RETURN PROCEDURE

Any product returned under this one year, one time limited warranty should be sent by the customer via prepaid mail or courier to the service center located at 2301 Ravine Way, Glenview, IL 60025, U.S.A. Please include with the returned product twelve dollars and fifty cents (US \$12.50) for return shipping and handling. The company assumes no responsibility whatsoever for any loss or damage during shipping and the customer is solely responsible for any such loss or damage. Note: Please do not return the product to the store where you bought it for service as they are not authorized to service the product.

PLEASE SEE THE ENCLOSED ONE YEAR, ONE TIME LIMITED WARRANTY CARD FOR MORE INFORMATION ON YOUR POWERROLL CIGARETTE MACHINE WARRANTY

POWERROLL™ 2
BY TOP-O-MATIC®

OWNER'S MANUAL



Electric
**KING SIZE & 100MM
CIGARETTE MACHINE**

Australia Reg. Des. No. 358808, Austria Reg. Des. No. 66760, Benelux Reg. Des. No. 40106-00, Canada 159387 REPUBLIC TOBACCO L.P., France Reg. Des. No. 2014-4955, Germany Reg. Des. No. 402014101092.7, Hungary Reg. Des. No. 92227, Poland Reg. Des. Rp21599, Spain Reg. Des. No. 0520280, U.K. Registered Design No 4 038 019, other designs pending. © Republic Tobacco L.P.

See back panel for additional maintenance, care and handling tips.