



Jax V2

3 Wheel Stroller "Charcoal"

Model # 013524X-041



**IMPORTANT:
RETAIN FOR FUTURE REFERENCE,
READ CAREFULLY**

Read all instructions before assembly and use of the stroller. Keep instructions for future use.

WARNING

TO AVOID INJURY OR DEATH:

ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

DO NOT LEAVE CHILD UNATTENDED.

SECURE THE CHILD IN THE HARNESS AT ALL TIMES.

DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.

MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.

TO AVOID INJURY ENSURE THAT YOUR CHILD IS KEPT AWAY WHEN FOLDING AND UNFOLDING THE STROLLER.

ENSURE THAT ALL LOCKING DEVICES ARE ENGAGED BEFORE USE.



Be aware that moving parts may cause injury if care is not taken.



Fingers or parts of the body could be injured when the stroller is being folded or unfolded. Please use caution when folding or unfolding the stroller.

Always check that safety locks are engaged before placing a child in the stroller.

Ensure your child is secured with a correctly adjusted safety harness.

Do not allow children to stand on the seat.

Do not hang bags or goods from the handle as this could cause the stroller to tip over.

Do not place more than **5kgs** in the basket.

Do not place more than **1kg** on the removable top parent tray.

The weight of the child using the product should not exceed **17kgs**.

The height of the child using the product should not exceed **96cm**.

It is unsafe to use parts other than those approved by the manufacturer.

Never ride with more than one child in the stroller.

Regularly inspect all parts and locking devices, promptly replace worn out or broken parts.

Remove the child from the stroller before going up or down stairs and escalators.

To prevent the risk of the stroller catching fire, do not park it near an open fire, heater or barbecue.

Do not make any changes, repairs or alterations to this product, unless through an approved service agent.

To avoid the risk of suffocation, keep all plastic packaging materials out of reach of children.

Never leave safety harness connected when not fitted to a child in the stroller as this may create loops that could cause a strangulation hazard.

The vehicle is designed for use on flat or gently sloping surfaces and may be unstable on higher sloping and uneven surfaces; and users should be made aware of the possibility of the vehicle tipping over.

Ensure the storage latch is fully engaged when lifting or carrying the stroller.

Care must be taken when lifting or carrying the stroller.

Congratulations on your purchase of the **Childcare Jax V2 3 Wheel Stroller “Charcoal”** .

This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference.

Contents

Assembly contents list

Assembly / Operating instructions

How to care for your **Childcare Jax V2 3 Wheel Stroller**











Due to variations in the style and design of our products, the photographs and illustrations shown in this instruction manual are generic, therefore product fabrics, colour and design may vary from images shown. CNP Brands reserves the right to alter product specifications without notice as a result of our ongoing policy of product improvement.

Check what you have received...

You have received **1 box**. Please check the contents of the box against the list below. If anything is missing, please contact Customer Service.

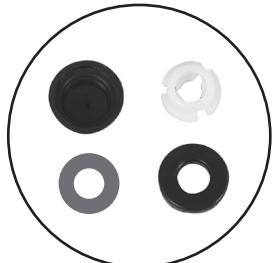In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.

Supplied loose in box:

Dual Front Swivel Wheel		x 1	Stroller frame, with the following components pre-assembled on frame: <ul style="list-style-type: none"> • Canopy • Five point safety harness • Basket • Seat lining 		x 1
Collet, Washers and Collet Cover		x 2	Wheel Hub Cap (for rear wheels)		x 2
Rear Axle		x 1	Bumper Bar		x 1
Rear Wheel		x 2	Rear Tray		x 1

There are no accessories recommended for use with this Childcare Stroller.

Unfolding the Stroller...

- 1**
- 1a. Position the **Stroller Frame** on a stable floor.
 - 1b. Lift the stroller uplock by unhooking it from the latch. (highlighted in the image)




- 2**
- 2a. Lift the stroller handle to unfold the stroller.
 - 2b. The stroller should then lock into position.
 - 2c. This can be determined by a clicking sound once unfolded.



To assemble Dual Front Swivel Wheel...

- 1**
- 1a. Push the **Front Wheel** onto the stroller front leg until it "**clicks**" into position.
 - 1b. Ensure the wheel is securely attached to the stroller front leg by pulling it downwards before use.

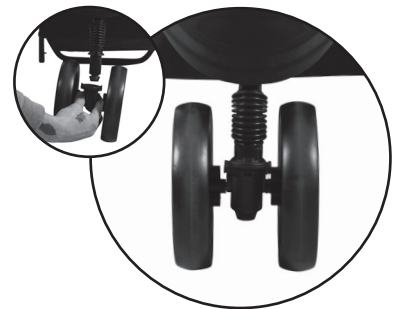

To operate Swivel Function...

- 1**
- 1a. To lock swivel wheel, pull lever up.



To operate Swivel Function continued...

- 2 2a. To unlock swivel wheel, push lever down.




To assemble Rear Axle and Wheels...

- 1 1a. Turn stroller over.




- 2 2a. To assemble the rear axle onto the stroller frame, gently push the rear axle onto the back legs until it "clicks" into position..

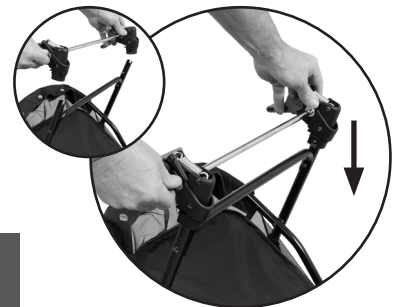

NOTE: If you are having trouble pushing the axle into the locked position, consider depressing the locking pin before sliding the axle into position.

- 3 3a. Fit one **Metal Washer**.
 3b. Insert the **Rear Wheel**.
 3c. Fit **Plastic Washer**.
 3d. Fit a **Collet**.
 3e. Ensure that the key in the slot of the **Collet** is correctly located in the axle's groove.
 3f. Fit the **Collet Cover** to the collet by firmly pressing the **Collet Cover** into place.
 3g. Push the **Wheel Hub Cap** onto the wheel hub.

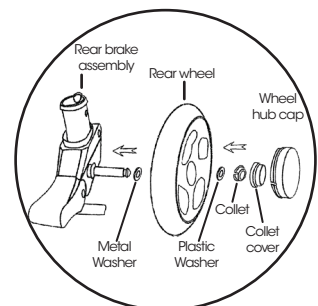


To assemble Rear Axle and Wheels continued...

- 4** 4a. Repeat for other wheel.



To operate Rear Brakes...

- 1** 1a. To lock the brakes, push down on the link brake bar.
1b. To release brakes, lift up the link brake bar.

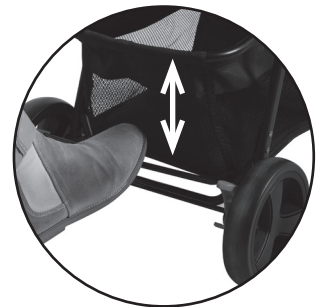

CAUTION: Always apply the brakes when parking stroller.

To attach the Bumper Bar...

- 1** 1a. Align the **Bumper Bar** with the housing on the front of the stroller.
1b. Insert **Bumper Bar** into the housing until it "clicks" into position.



- 2** 2a. To remove **Bumper Bar**, press the release buttons and pull **Bumper Bar** away from stroller.



To attach the Rear Tray...


1

1a. Fit the rear tray in the space between the handle and the hood.



2

2a. Place the tray over the side handle bars and ensure mounting lugs are secure in the tray holes.

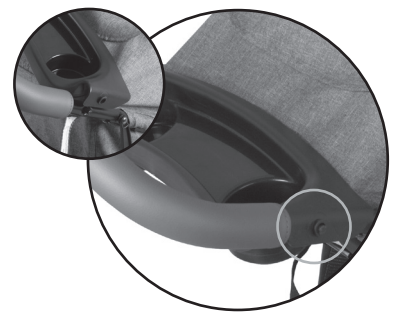

Adjusting the Backrest...


This stroller has a multiple position adjustable backrest. The upright position on the backrest is not suitable for use with children less than six months old.

For use with a newborn (0 - 6mths), the seat should be fully reclined. The backrest should only be adjusted to a more upright position as the child grows older and is able to support their head without assistance.

1

To Lower

1a. Press both sides of backrest adjuster and pull seat down to desired position.

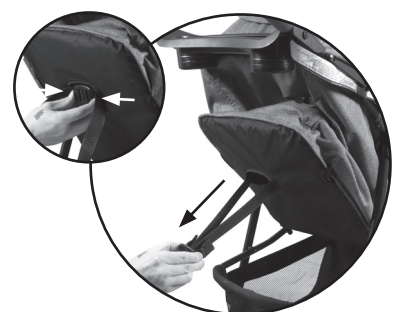

CAUTION: Do not adjust the backrest while child is in the stroller.

2

To Raise

2a. Pull left and right adjuster straps outwards until seat is at desired height.



The stroller is now ready for use.

Using the Tether Strap...

1

- 1a. Ensure tether strap is used at all times.
- 1b. Make sure your hand is fed through the loop as shown in the diagram.



⚠ WARNING ⚠

USE THIS STRAP TO STOP THE STROLLER ROLLING AWAY

Restraints - Harness...

1 To secure the child in the harness, place left hand buckle prong (b) on top of (a).

2 Hold both left hand buckle prongs (a) and (b) together and insert it into buckle housing (e) until it snaps into position.

3 Repeat previous steps for right hand buckle prongs (c) and (d).

4 Once all attached, carefully adjust the harness straps by pulling each slider (f) until the desired fit is achieved in the lap, shoulder and crotch straps.

5 To release the buckles, squeeze the top and bottom prongs (a) and (b), (c) and (d) together until harness disengages.




(a), (b): Left hand buckle prongs
 (c), (d): Right hand buckle prongs
 (e): Buckle housing
 (f): Strap adjustment sliders

CAUTION: Always adjust the harness when changing the seating position of the child.

To adjust Harness Straps...

1

- 1a. To adjust straps, hold the strap with one hand and slide the adjuster up or down the strap.
- 1b. Sliding the adjuster down will loosen the strap, while sliding the adjuster up will tighten the strap.

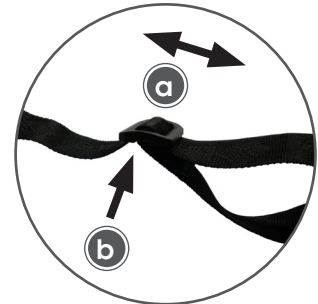


(a): Slide up or down
(b): Adjuster

To fold Stroller...

1

- 1a. Before folding the stroller, close the hood and ensure the seat is in the full recline position.
- 1b. Slide the handle lever to the left, whilst holding in the handle button.

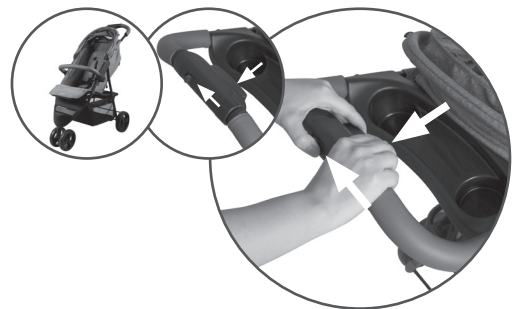

2

- 2a. Push down on handle to commence folding the unit.



3

- 3a. Once the stroller is in the folded position, re-hook the stroller uplock to ensure the stroller stays folded.



NOTE: Care must be taken when lifting or carrying the stroller. Ensure the storage latch is fully engaged when lifting or carrying the stroller.

Cleaning

To ensure the long-lasting use of your stroller, dry it with a soft absorbent cloth after use in rainy weather. Use a damp cloth to clean the frame. Do not use abrasive cleaners. After using your stroller on the beach, clean the frame and wheels thoroughly with water to remove the sand and salt. Allow it to dry thoroughly. Removable and non-removable fabric covers and trims may be cleaned using a damp cloth with soap or mild detergent. Allow it to dry completely before folding or storing it away. Do not dry clean, or use bleach on fabrics or trims. Do not machine wash, tumble or spin dry, unless the care labelling on the product permits these methods.

Maintenance

Check stroller regularly to ensure that locking devices and components are secure and working properly. Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your stroller, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by CNP Brands. If the wheels squeak, use silicone based spray or light oil ensuring it penetrates the wheel and axle assembly. To prevent mould or mildew, do not fold or store the product if it is damp or wet. Allow it to dry thoroughly. Always store the product in a well ventilated area and away from direct sunlight.

If you have any difficulties in assembling the stroller, please contact our Service Department. In Australia, contact **CNP Brands** on **1300 667 137**, in **New Zealand** contact **Wainhouse Distribution** on **0800 567 5000**.




CNP BRANDS[®]

CHILDCARE NURSERY PRODUCTS

About CNP Brands

Currently, **CNP Brands** boasts one of the most diverse brand portfolios with a combination of company owned brands and distribution agreements. These include distribution lines for **Evenflo, Good Baby, Lascal, Maclaren, Project Nursery, Summer Infant and Yookidoo.**

Our own brands, including **Childcare**, have gone from strength to strength in recent years. **Childcare**, and our premium brand **bebe care**, demonstrate our commitment to quality and continuing investment in product development.

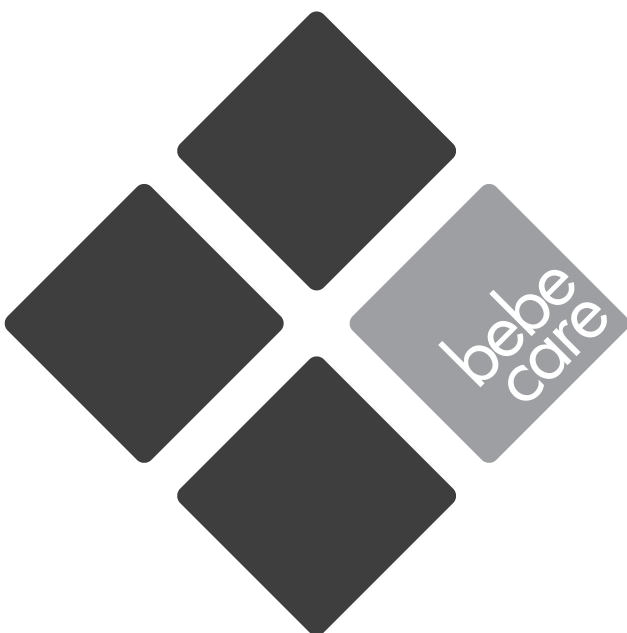



A series of horizontal dotted lines for writing notes.

NOTES



A series of horizontal dotted lines for writing notes.



CNP BRANDS®

CHILDCARE NURSERY PRODUCTS



Distributed in Australia by CNP Brands
82 Maribyrnong Street, Footscray, VIC, 3011
Customer Service 1300 667 137

W: www.cnpbrands.com.au
E: info@cnpbrands.com.au
F: www.facebook.com/CNPBrands
I: [@cnp_baby](https://www.instagram.com/cnp_baby)

Distributed in New Zealand by Wainhouse
Distribution
2-6 Argyle St, Morningside,
PO Box 41-014,
St Lukes, Auckland, New Zealand
Customer Service: 0800 567 5000

E: helpline@wainhousedist.co.nz

