



Moov

Jogger Stroller "Black"
Model # 013530-002



**IMPORTANT:
RETAIN FOR FUTURE REFERENCE,
READ CAREFULLY**

Read all instructions before assembly and use of the stroller. Keep instructions for future use.

WARNING

TO AVOID INJURY OR DEATH:

ALWAYS APPLY THE BRAKES WHENEVER THE STROLLER IS STATIONARY.

DO NOT LEAVE CHILD UNATTENDED.

SECURE THE CHILD IN THE HARNESS AT ALL TIMES.

DO NOT CARRY EXTRA CHILDREN OR BAGS ON THIS STROLLER.

MAKE SURE CHILDREN ARE CLEAR OF ANY MOVING PARTS IF YOU ADJUST THE STROLLER.

TO AVOID INJURY ENSURE THAT YOUR CHILD IS KEPT AWAY WHEN FOLDING AND UNFOLDING THE STROLLER.

ENSURE THAT ALL LOCKING DEVICES ARE ENGAGED BEFORE USE.



Be aware that moving parts may cause injury if care is not taken.



Fingers or parts of the body could be injured when the stroller is being folded or unfolded. Please use caution when folding or unfolding the stroller.

Always check that safety locks are engaged before placing a child in the stroller.

Ensure your child is secured with a correctly adjusted safety harness.

Do not allow children to stand on the seat.

Do not hang bags or goods from the handle as this could cause the stroller to tip over.

Do not place more than **5kgs** in the basket.

Do not place more than **1kg** on the removable top parent tray.

The weight of the child using the product should not exceed **20kgs**.

The height of the child using the product should not exceed **96cm**.

It is unsafe to use parts other than those approved by the manufacturer.

Never ride with more than one child in the stroller.

Regularly inspect all parts and locking devices, promptly replace worn out or broken parts.

Remove the child from the stroller before going up or down stairs and escalators.

To prevent the risk of the stroller catching fire, do not park it near an open fire, heater or barbecue.

Do not make any changes, repairs or alterations to this product, unless through an approved service agent.

To avoid the risk of suffocation, keep all plastic packaging materials out of reach of children.

Never leave safety harness connected when not fitted to a child in the stroller as this may create loops that could cause a strangulation hazard.

The vehicle is designed for use on flat or gently sloping surfaces and may be unstable on higher sloping and uneven surfaces; and users should be made aware of the possibility of the vehicle tipping over.

Ensure the storage latch is fully engaged when lifting or carrying the stroller.

Care must be taken when lifting or carrying the stroller.

Tyres should be inflated to 20-25 psi.

Congratulations on your purchase of the **Childcare Moov Jogger Stroller**.

This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference.

Contents

Assembly contents list

Assembly / Operating instructions

How to care for your **Moov Jogger Stroller**



Due to variations in the style and design of our products, the photographs and illustrations shown in this instruction manual are generic, therefore product fabrics, colour and design may vary from images shown. CNP Brands reserves the right to alter product specifications without notice as a result of our ongoing policy of product improvement.

Check what you have received...

You have received **1 box**. Please check the contents of the box against the list below. If anything is missing, please contact Customer Service.

In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.

Supplied loose in box:

Stroller frame, with the following components pre-assembled on frame:

- Canopy
- Five point safety harness
- Basket
- Seat lining
- Front Wheel



x 1

Rear Wheel



x 2

Front Tray



x 1

Tyre Pump



x 1

There are no accessories recommended for use with this Childcare Stroller.

Unfolding the stroller...

1

- 1a. Position the stroller frame on a stable floor.
- 1b. Lift the stroller up-lock by unhooking it from the latch. (highlighted in the image)



2

- 2a. Lift the stroller handle to unfold the stroller.
- 2b. The stroller should then lock into position.
- 2c. This can be determined by a clicking sound once unfolded.



To operate Swivel Function...

1

- 1a. To lock swivel wheel, push lever up.
- 1b. To unlock swivel wheels, push lever down.



To assemble Rear Wheels...

1

- 1a. Lay Stroller on it's side.
- 1b. Insert Rear Wheel Axle into Stroller Axle Housing until it `clicks` into position and is secure.
- 1c. Turn Stroller over and repeat for remaining Rear Wheel.



2

- 2a. Before each use of the stroller, ensure all tyres are adequately inflated to 20-25 psi.
- 2b. After use, return Tyre Pump to storage bag inside basket.



To operate Rear Brakes...

1

- 1a. To lock the brakes, push down on the link brake bar.
- 1b. To release brakes, lift up the link brake bar.



CAUTION: Always apply the brakes when parking stroller.

To attach the Child Tray...

1

- 1a. Insert the left side of the Child Tray into the left Tray slot on the front of the Stroller until it 'clicks' into place.
- 1b. Rotate Tray down so that the right side slots down onto the right side Tray slot and is secure.




2

- 2a. To remove Child Tray, hold release button on right side of Tray and lift up and rotate away from the Tray slot.



3

- 3a. To completely remove Child Tray from the Stroller, repeat step 2a.
- 3b. Undo and remove the 4 x screws on the left side of the tray attachment arm using a Phillips Head Screwdriver (not supplied).
- 3c. Remove the plastic cover from the tray attachment arm.
- 3d. Activate push-pin whilst pulling tray away from the stroller.
- 3e. Re-attach the plastic cover to the inside of the tray attachment arms using the 4 x screws.

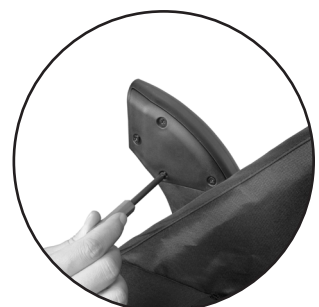

Adjusting the Backrest...

This stroller has a multiple position adjustable backrest. The upright position on the backrest is not suitable for use with children less than six months old.

For use with a newborn (0 - 6mths), the seat should be fully reclined. The backrest should only be adjusted to a more upright position as the child grows older and is able to support their head without assistance.

1

To Lower

- 1a. Squeeze both sides of backrest adjuster and pull seat down to desired position.



CAUTION: Do not adjust the backrest while child is in the stroller.

2

To Raise


- 2a. Hold bottom of both straps whilst squeezing both sides of backrest adjuster and moving up to desired position.



To adjust the Handle...

1

- 1a. The handle has 10 adjustable positions. To adjust handle, push in and hold the handle adjustment buttons whilst lifting or lowering handle to desired position.
- 1b. Release buttons to lock into place.

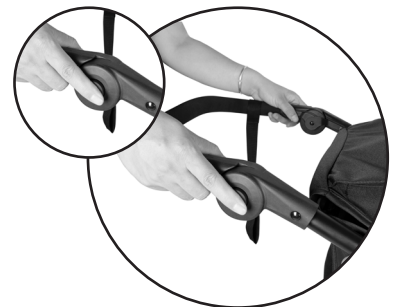

To use Canopy...

1

- 1a. To open Canopy, pull forward toward front wheel.
- 1b. To close Canopy, push backwards towards handle.



Using the Tether Strap...

1

- 1a. Ensure tether strap is used at all times.
- 1b. Make sure your hand is fed through the loop as shown in the diagram.



⚠ WARNING ⚠


USE THIS STRAP TO STOP THE STROLLER ROLLING AWAY

The stroller is now ready for use.

Restraints - Harness...

1 To secure the harness, insert each clip into the corresponding slot in the harness buckle.

2 Once all attached, carefully adjust the harness straps by pulling each slider until the desired fit is achieved in the lap, shoulder and crotch straps.

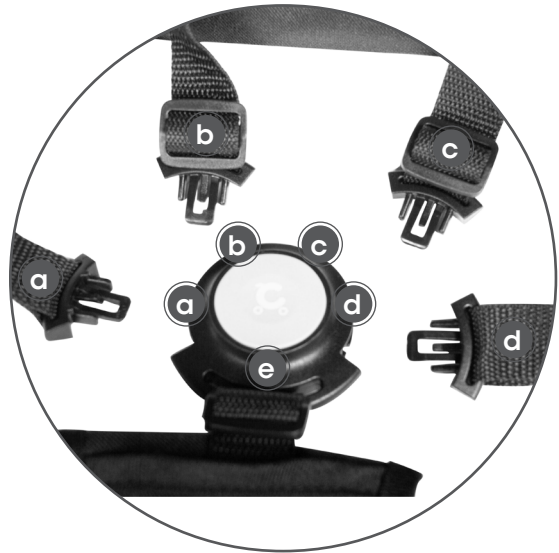

3 To release the buckle, press the centre button.


CAUTION: Always adjust the harness when changing the seating position of the child.

To adjust Harness and Shoulder Straps...

1

1a. To adjust straps, hold the strap with one hand and slide the adjuster up or down the strap.

1b. Sliding the adjuster down will loosen the strap, while sliding the adjuster up will tighten the strap.

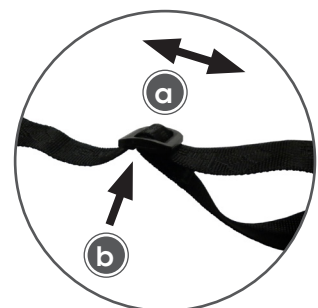

(a): Slide up or down
(b): Adjuster

To fold Stroller...

1

- 1a. Before folding the stroller, close the canopy and ensure the seat is in the full recline position.
- 1b. Simultaneously pull each folding trigger located on the sides of the stroller handle above the canopy.
- 1c. Lower handle downward until stroller is completely folded.
- 1d. Ensure folding up-lock is engaged to ensure the stroller stays folded.

NOTE: Care must be taken when lifting or carrying the stroller. Ensure the storage latch is fully engaged when lifting or carrying the stroller.





Cleaning

To ensure the long-lasting use of your stroller, dry it with a soft absorbent cloth after use in rainy weather. Use a damp cloth to clean the frame. Do not use abrasive cleaners. After using your stroller on the beach, clean the frame and wheels thoroughly with water to remove the sand and salt. Allow it to dry thoroughly. Removable and non-removable fabric covers and trims may be cleaned using a damp cloth with soap or mild detergent. Allow it to dry completely before folding or storing it away. Do not dry clean, or use bleach on fabrics or trims. Do not machine wash, tumble or spin dry, unless the care labelling on the product permits these methods.

Maintenance

Check stroller regularly to ensure that locking devices and components are secure and working properly. Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your stroller, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by CNP Brands. If the wheels squeak, use silicone based spray or light oil ensuring it penetrates the wheel and axle assembly. To prevent mould or mildew, do not fold or store the product if it is damp or wet. Allow it to dry thoroughly. Always store the product in a well ventilated area and away from direct sunlight.

If you have any difficulties in assembling the stroller, please contact our Service Department. In Australia, contact **CNP Brands** on **1300 667 137**, in **New Zealand** contact **Wainhouse Distribution** on **0800 567 5000**.

Warranty

For all warranty terms and conditions, please visit cnpbrands.com.au



CNP BRANDS[®]

CHILDCARE NURSERY PRODUCTS

About CNP Brands

Currently, **CNP Brands** boasts one of the most diverse brand portfolios with a combination of company owned brands and distribution agreements. These include distribution lines for **Evenflo, Good Baby, Lascal, Maclaren, Project Nursery, Summer Infant and Yookidoo.**

Our own brands, including **Childcare**, have gone from strength to strength in recent years. **Childcare**, and our premium brand **bebe care**, demonstrate our commitment to quality and continuing investment in product development.





CNP BRANDS®

CHILDCARE NURSERY PRODUCTS



Distributed in Australia by CNP Brands
82 Maribyrnong Street, Footscray, VIC, 3011
Customer Service 1300 667 137

W: www.cnpbrands.com.au
E: info@cnpbrands.com.au
F: www.facebook.com/CNPBrands
I: @cnp_baby

Distributed in New Zealand by Wainhouse
Distribution
2-6 Argyle St, Morningside,
PO Box 41-014,
St Lukes, Auckland, New Zealand
Customer Service: 0800 567 5000

E: helpline@wainhousedist.co.nz

