




Jump 'N' Play Activity Centre Model # 025031

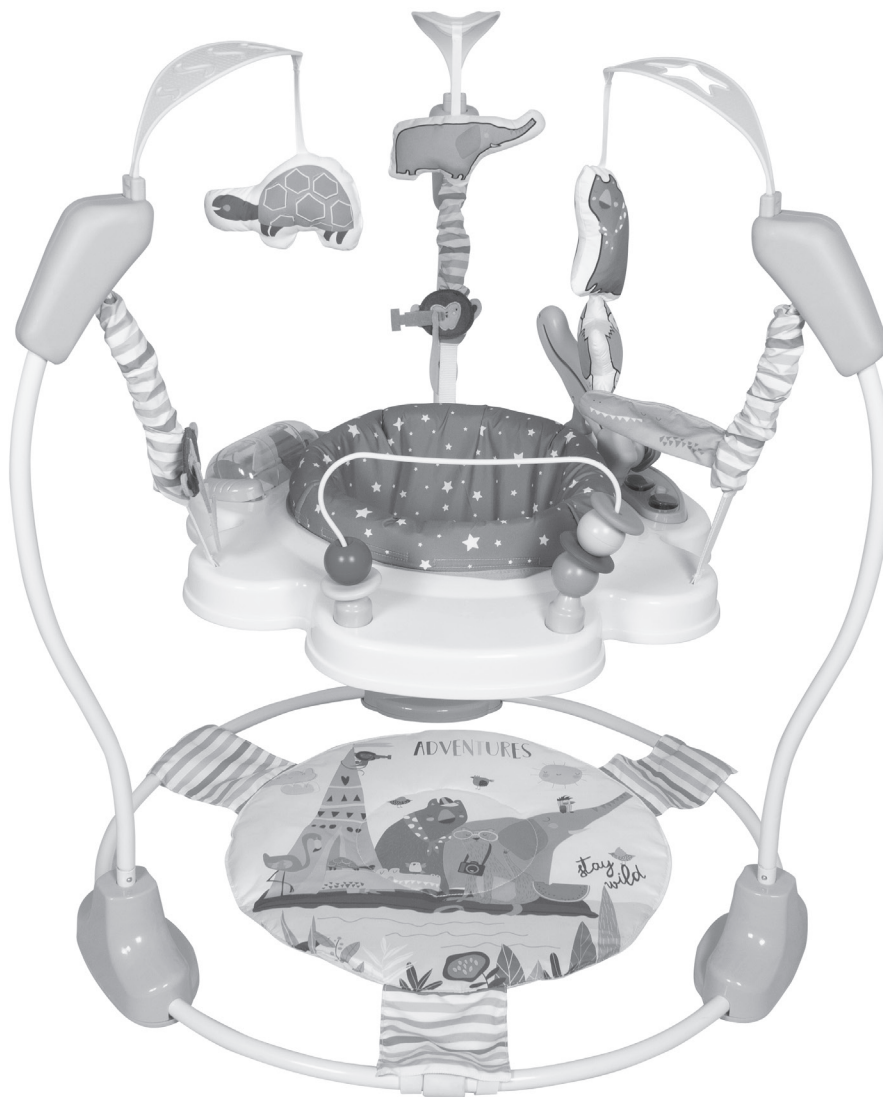

**IMPORTANT:
RETAIN FOR FUTURE REFERENCE,
READ CAREFULLY**

Read all instructions before assembly and use of the activity centre.
Keep instructions for future use since it contains important information.

⚠ WARNING ⚠

BEFORE ASSEMBLING THIS ACTIVITY CENTRE, READ AND UNDERSTAND THE INSTRUCTIONS.

Fall hazard; child's activity may move activity jumper. Use only on floor. To avoid tip over, place product on a flat, level surface. Never use this product on an elevated surface, eg. A table.

Strangulation hazard; strings can cause strangulation! Do not place items with a string around child's neck, such as hood strings or pacifier cords.

Do not suspend strings over product or attach strings to toys.

Possible entanglement or strangulation injury when toys are attached to activity centre.

Do not tie together with other toys.

Remove all packaging and fasteners before use.

Begin using the product when the child can hold their head up unassisted up to a maximum weight of 12 kg and discontinue using the product as a stationary activity centre when the child begins to walk unassisted.

Never leave the child unattended.

Always keep child in view while in product.

Ensure the child is correctly and safely positioned in the seat of the baby bouncer.

Never use near stairs.

Do not let children play with this product.

Do not move or lift this product with the baby inside it.

Do not use if any components are broken or missing.

Do not use the activity centre as a swing.

Do not allow other children to play near the activity centre.

KEEP INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE.

KEEP PLASTIC COVERING AWAY FROM CHILDREN TO AVOID SUFFOCATION.

Age range suitability: 6 months / 12 kg.

Make sure all the locking equipment is installed well before using the activity centre.

DO NOT use the activity centre on a rough surface to avoid any injury to the infant.

DISCONTINUE USE of activity centre when the child begins to walk unassisted. Maximum weight 12 kg.

This activity centre does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable cot or bed.

A time limit of 20 minutes per use is recommended for the child to be in the activity centre.

DO NOT use accessories or replacement parts other than those approved by the manufacturer.

The toy should be assembled by an adult.

Battery Safety Information

In exceptional circumstances, batteries leak fluids that can cause a chemical burn injury or ruin your product. To avoid leakage:

- **DO NOT** mix old and new batteries or batteries of different types: alkaline, standard (carbon zinc) or rechargeable (nickle-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use.
- **ALWAYS** remove exhausted batteries from the product.
- Dispose of batteries safely.
- **DO NOT** dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same equivalent type, as recommended.
- **DO NOT** charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.
- Batteries are to be inserted with the correct polarity.

WARNING

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickle-cadmium) batteries.

Adult supervision is required when charging rechargeable batteries.

Always remove flat or exhausted batteries from the toy.

Do not short circuit the supply terminals.

Non-rechargeable batteries are not to be recharged

Congratulations on your purchase of the **Jump 'N'** **Play Activity Centre**

This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference.

Contents

Assembly contents list

Assembly / Operating instructions

How to care for your **Jump 'N' Play Activity Centre**








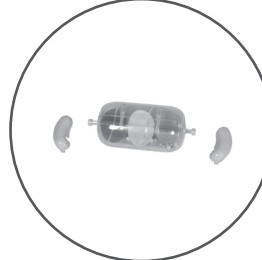
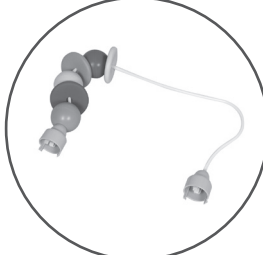

Due to variations in the style and design of our products, the photographs and illustrations shown in this instruction manual are generic, therefore product fabrics, colour and design may vary from images shown. CNP Brands reserves the right to alter product specifications without notice as a result of our ongoing policy of product improvement.

Check what you have received...

You have received **1 box**. Please check the contents of the box against the list below. If anything is missing, please contact Customer Service.

In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.

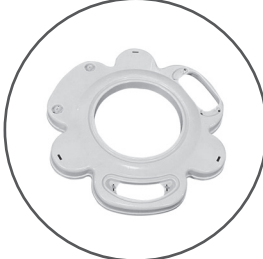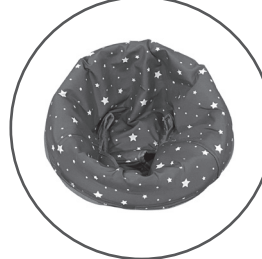Supplied loose in box:

Top Tray		x 1	Seat (with Seat Pad pre-assembled)		x 1
Base Frame		x 3	Legs		x 3
Music and lights module		x 1	Spinning Ball Toy & Clips		x 1
Rod and Ball Toy		x 1	Floor Mat		x 1

Check what you have received...

You have received **1 box**. Please check the contents of the box against the list below. If anything is missing, please contact Customer Service.

In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.

Supplied loose in box:

Leg Toys



x 1


You will require:

Phillips
Screwdriver
(Not Included)



x 1

AAA Batteries
(Not Included)

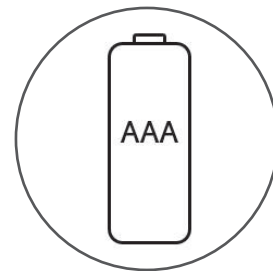


x 3

There are no accessories recommended for use with this Childcare Activity Centre.

To assemble Activity Centre frame...


1

- 1a. Connect the 3 x Base Frames, making sure the push pins are located in the holes and secure correctly.
- 1b. Manually rotate the small White feet to ensure they are sitting flat on the floor.

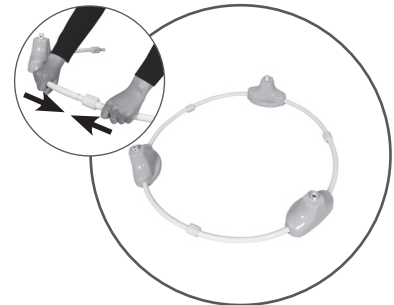


2

- 2a. Insert 3 x Legs into the leg housings on the Base Frame until secure.

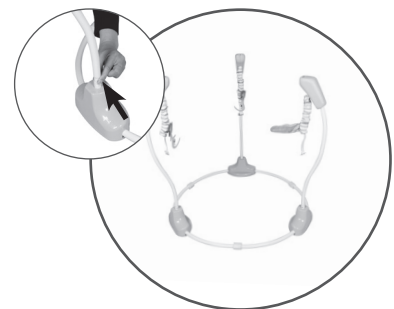


3

- 3a. Lay the Floor Pad inside the Base Frame.
- 3b. Secure the Floor Pad to the Base frame via the 6 x Velcro Straps.

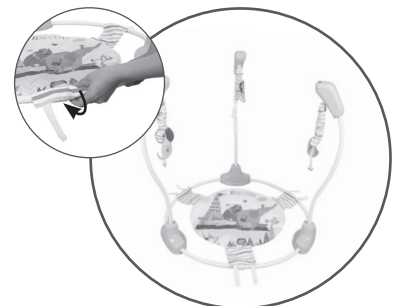

4

- 4a. Whilst holding the Top Tray, feed a Leg strap end through the slot in the Top Tray and secure into the first height setting on the underside of the Top Tray.
Push the webbing inside the slot between the height adjustment settings to ensure the webbing is held well.

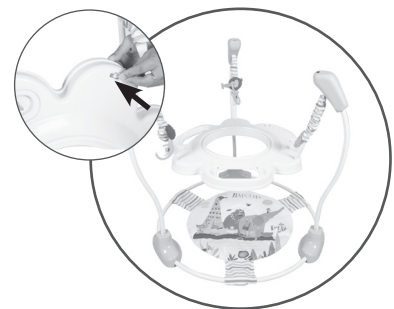

- 4b. Repeat for the remaining 2 x Legs straps until Top Tray is secure at all three points.
NOTE: All 3 x Leg Straps must be on the same height setting.

5


- 5a. Insert Seat into the Seat hole in the Top Tray.
- 5b. Push down until Seat is connected and secure.
NOTE: Seat should now be able to rotate 360°.



To assemble Music & Lights Module...

1

- 1a. Turn Music and Light Module over and unscrew the battery cover.
- 1b. Insert 3 x AAA batteries (sold separately).
- 1c. Replace battery cover by screwing back into place.

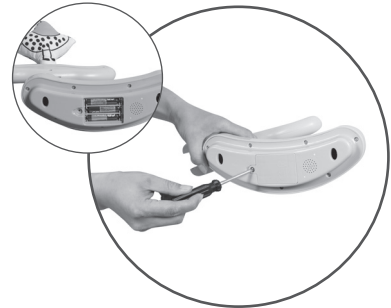

IMPORTANT! Please note that a screwdriver (not included) is required to access the Battery Pack to insert 3 x AAA Batteries (sold separately).

⚠ WARNING ⚠

Do not mix old and new batteries.

Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickle-cadmium) batteries.

Adult supervision is required when charging rechargeable batteries.

Always remove flat or exhausted batteries from the toy.

Do not short circuit the supply terminals.

Non-rechargeable batteries are not to be recharged

2

- 2a. Position the Music and Light Module into the opening on the Top Tray.
- 2b. Push and twist the locking levers on the underside of the Top Tray Frame to secure.



To use Music & Lights Module...

1


- 1a. Turn on Music and Light Module with the ON/OFF button.
- 1b. Press a button to start the music and lights.
- 1c. Pressing any button will change music selection.
- 1d. Turn off Music and Light Module with the ON/OFF button.

To assemble Assorted Toys...


- 1
1a. Insert the Spindle Ball Toy into the housing on the Top Tray.
1b. Secure Spindle Toy in place by assembling the 2 x Spindle Ball Clips over the ends of the Spindle Toy.



- 2
2a. Insert the Rod & Ball Toy into the designated slots in the Top Tray.

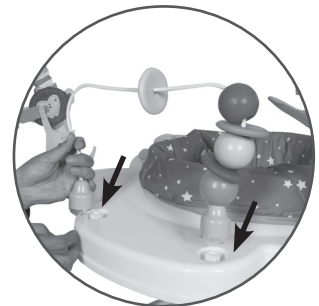

- 2b. Insert 3 x Leg Toys into the slots in the top of the Legs.

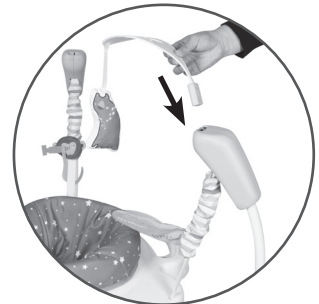


To operate Seat Height Adjustment...

- 1
1a. There are two height adjustments that are changed by altering the position of the connectors on the underside of the Seat Tray.



To operate Seat Height Adjustment continued...


- 2**
- 2a. To adjust, remove the strap end from the current height setting and re-secure in the higher height setting.
Push the webbing inside the slot between the height adjustment settings to ensure the webbing is held well.
- 2b. Repeat this step for the remaining 2 x seat strap ends.

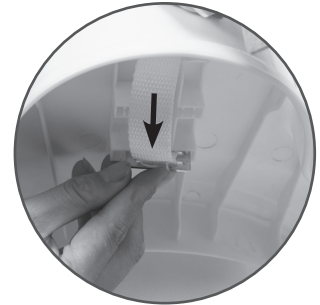

NOTE: The child's toes should touch the floor.
If your child's feet don't touch the floor, the seat height setting is too high. If your child's feet are sitting flat on the floor, the seat height setting is too low.

To remove Seat Pad from Seat...

- 1**
- 1a. Remove the Seat from the Top Tray by pushing the Seat out from the underside of the Tray.
- 1b. Un-hook the Seat Pad from the hooks on the Seat ring.
- 1c. After washing, re-hook the Seat pad onto the hooks of the Seat ring.
- 1d. Re-insert Seat into the Seat hole in the Top Tray.
- 1e. Push down until Seat is connected and secure.
- 1f. Carefully check that Seat pad is correctly secured to the Seat ring before placing child into the Activity Centre.

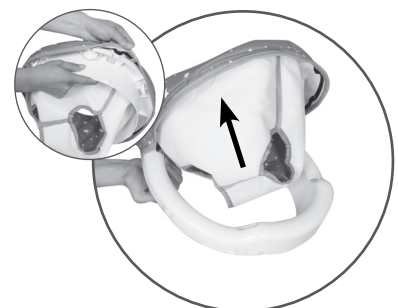

Cleaning

To ensure the long-lasting use of your activity centre, dry it with a soft absorbent cloth after use. Use a damp cloth to clean the frame. Do not use abrasive cleaners. Allow it to dry completely before storing it away. Do not dry clean, or use bleach on fabrics or trims. Do not machine wash, tumble or spin dry, unless the care labelling on the product permits these methods.

Maintenance

Check activity centre regularly to ensure that locking devices and components are secure and working properly. Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your activity centre, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by **CNP Brands**.

If you have any difficulties in assembling the activity centre, please contact our Service Department.

In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.

Warranty

For all warranty terms and conditions, please visit cnpbrands.com.au




CNP BRANDS[®]

CHILDCARE NURSERY PRODUCTS

About CNP Brands

Currently, **CNP Brands** boasts one of the most diverse brand portfolios with a combination of company owned brands and distribution agreements.

Our own brands, including **Childcare**, have gone from strength to strength in recent years. **Childcare**, and our premium brand **bebe care**, demonstrate our commitment to quality and continuing investment in product development.

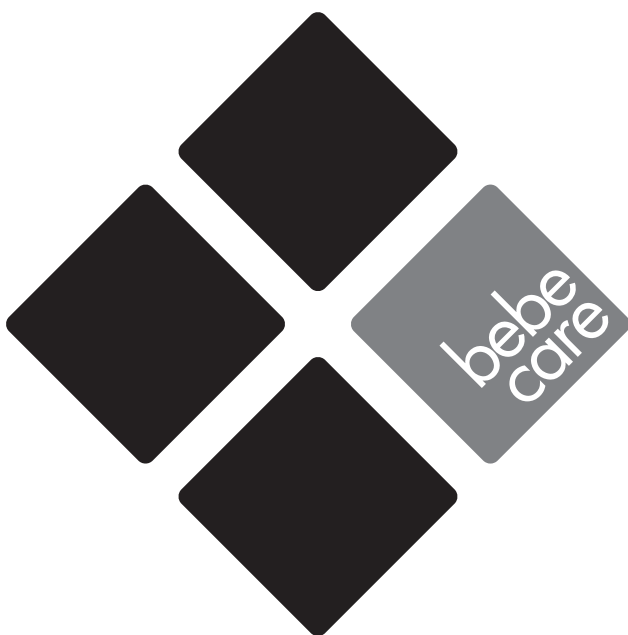



CNP BRANDS®

CHILDCARE NURSERY PRODUCTS



Distributed in Australia by CNP Brands
82 Maribyrnong Street, Footscray, VIC, 3011
Customer Service 1300 667 137

W: www.cnpbrands.com.au
E: info@cnpbrands.com.au
F: www.facebook.com/CNPBrands
I: [@cnp_baby](https://www.instagram.com/cnp_baby)

Distributed in New Zealand by Wainhouse
Distribution
2-6 Argyle St, Morningside,
PO Box 41-014,
St Lukes, Auckland, New Zealand
Customer Service: 0800 567 5000

E: helpline@wainhousedist.co.nz

