



Vibe 'N' Swing

Model # 037725



**IMPORTANT:
RETAIN FOR FUTURE REFERENCE,
READ CAREFULLY**

Read all instructions before assembly and use of the swing. Keep instructions for future use.

! WARNING !

BEFORE ASSEMBLING THIS SWING, READ AND UNDERSTAND THE INSTRUCTIONS.

Never leave the child unattended.

Never use this product on an elevated surface, eg. A table.

This swing is not intended for prolonged periods of sleeping.

Always use the restraint system.

Do not use the swing once your child can sit unaided.

Do not let children play with this product.

Do not move or lift this product with the baby inside it.

Do not use if any components are broken or missing.

KEEP INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE.

The toy shall be assembled by an adult.

Make sure all the locking equipment is installed well before using the swing.

DO NOT use the swing on any rough surface to avoid any injury to the infant.

DISCONTINUE USE of swing when infant attempts to climb out.

DISCONTINUE USE of swing when infant can roll over.

NEVER use the toy-bar to carry the swing.

Age range suitability: Birth to 9kgs.

This swing **DOES NOT** replace a cot or a bed. Should your child need to sleep, then they should be placed in a suitable cot or bed.

DO NOT use accessories or replacement parts other than those approved by the manufacturer.

To avoid injury ensure that children are kept away when unfolding and folding this product.

Battery Safety Information

In exceptional circumstances, batteries leak fluids that can cause a chemical burn injury or ruin your product. To avoid leakage:

- **DO NOT** mix old and new batteries or batteries of different types: alkaline, standard (carbon zinc) or rechargeable (nickle-cadmium).
- Insert batteries as indicated inside the battery compartment. Batteries are to be inserted with the correct polarity.
- Remove batteries during long periods of non-use.
- **ALWAYS** remove exhausted batteries from the product.
- Dispose of batteries safely.
- **DO NOT** dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same equivalent type and polarity, as recommended.
- **DO NOT** charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.
- Batteries are to be inserted with the correct polarity.

Congratulations on your purchase of the **Childcare Vibe 'N' Swing**

This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference.

Contents

Assembly contents list

Assembly / Operating instructions

How to care for your **Vibe 'N' Swing**



Due to variations in the style and design of our products, the photographs and illustrations shown in this instruction manual are generic, therefore product fabrics, colour and design may vary from images shown. CNP Brands reserves the right to alter product specifications without notice as a result of our ongoing policy of product improvement.

Check what you have received...

You have received **1 box**. Please check the contents of the box against the list below. If anything is missing, please contact Customer Service.

In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.

Supplied loose in box:

Seat Pad
(with Harness
pre-assembled)



x 1

Right Frame
(with control
module
preassembled)




x 1

Left Frame



x 1

Foot Tube

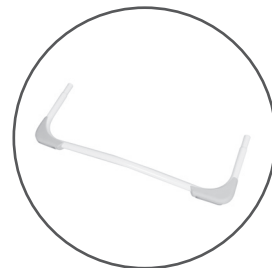


x 2

Seat Backrest
Tube (Longer)



x 1

Seat Footrest
Tube (Shorter)

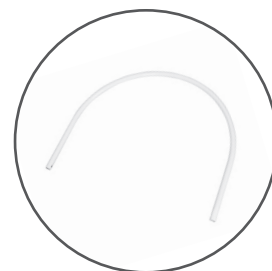

x 1

Toy Bar
(with 2 X Toys
pre-assembled)



x 1

Screws



x 4

There are no accessories recommended for use with this Swing.

Check what you have received...

You have received **1 box**. Please check the contents of the box against the list below. If anything is missing, please contact Customer Service.

In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.


You will require:

Phillips Head
Screwdriver
(Not supplied)



x 1

AA Batteries
(Not supplied)

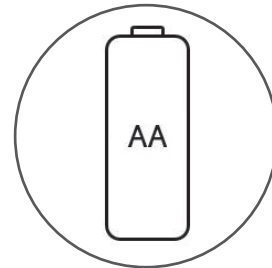


x 4

There are no accessories recommended for use with this Swing.


To assemble Swing frame...

1

1a. Open the legs of the Right and Left Frames out completely until they click into place.

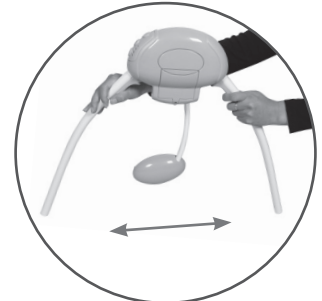

1b. Insert one Foot Tube into the bottom of the front leg of both the Right and Left Frames until it clicks into place.

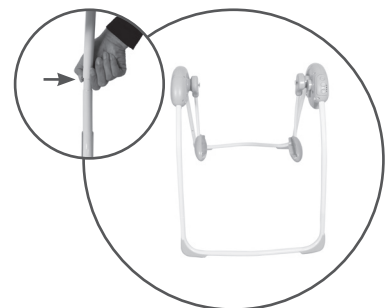

1c. Insert the remaining Foot Tube into the bottom of the rear leg of both the Right and Left Frames until it clicks into place.

2

2a. Slide the Seat Backrest Tube (longer of the two seat tubes) through the loops of the harness at the top of the Seat Pad underside.




2b. Ensure the tube is sitting inside the rear fabric flap of the Seat Pad.

2c. Ensuring the Seat Pad is facing upward, insert the Seat Pad with Seat Backrest Tube into the Swing, ensuring the assembly holes of the seat tube align with the screw holes on the inside of the swing arm housing.



3

3a. Secure Seat Backrest Tube to the swing arm housing using 2 x screws and a Phillips Head Screwdriver (not supplied).

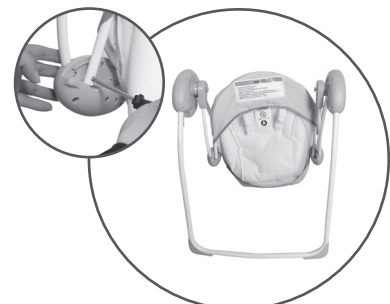

To assemble Swing frame continued...

4 4a. Align the assembly holes of the Seat Footrest Tube with the screw holes on the inside of the swing arm housing.


4b. Assemble Seat Footrest Tube to the swing arm housing in an upright position using 2 x screws and a Phillips Head Screwdriver (not supplied). Do not tighten completely.



5 5a. Gently pull the bottom of the Seat Pad over the Seat Footrest Tube.

5b. Lower Seat Footrest Tube to the correct position.

5c. Tighten screws completely.

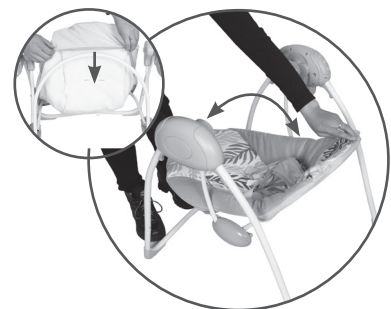

6 6a. Align the Toy Bar with the mounting pegs at the top of the swing arms.

6b. Push Toy Bar down onto pegs to secure.



To power Swing...

1 1a. Using a Phillips Head Screwdriver (not supplied) unscrew the battery compartment cover.

1b. Insert 4 x AA batteries.

1c. Replace battery compartment cover, ensuring screw is tight and cover is secure.





Note: Repeat steps 1a-1c to remove or replace exhausted batteries.


⚠ WARNING ⚠


Do not mix old and new batteries.
 Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickle-cadmium) batteries.
 Adult supervision is required when charging rechargeable batteries.
 Always remove flat or exhausted batteries from the toy.
 Do not short circuit the supply terminals.
 Non-rechargeable batteries are not to be recharged.
 Batteries are to be inserted with the correct polarity.


To operate Swing...

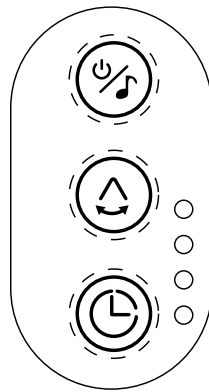

- 

Power/Music Button: Hold button for 3 seconds to turn swing on/off.
 When the swing is turned on, the swing function will begin automatically on the 3rd swing speed, the music/melodies will also begin to play.
- 

Power/Music Button: Press button to cycle through music/melodies.
 Cycle through music/melodies completely to turn sound off.
(Note: There are 6 music/melodies)
- 

Swing Button: Press button to change swing speed.
 When pressed, light will flash Red, Green, Red (changing swing speed mode), followed by green flashes indicating the swing speed.
 Eg. 4 green flashes in a row indicates the 4th swing speed has been selected.
(Note: There are 5 swing speeds)
- 

Timer Button: One press will set timer for 10 minutes.
 Two presses will set timer for 15 minutes.
 Three presses will set timer for 30 minutes.
(Note: For power saving, the Swing will turn off automatically after 45 minutes).

To use the Harness...

1

- 1a. Release the harness buckle.
- 1b. Place child into the swing.



2

- 2a. Place crotch pad up and between child's legs.



3

- 3a. Feed child's arms through the shoulder strap/waist strap loop.
- 3b. Insert combined shoulder and waist strap clips into harness buckle.
- 3c. Secure crotch pad flap down and over harness buckle.



4

- 4a. Tighten the adjusters on the waist straps to ensure the harness is secure.



5

- 5a. To release the harness buckle, push the buckle release button.





CAUTION: Always adjust the harness when changing the seating position of the child.

To adjust shoulder harness height...

1

- 1a. Release harness buckle and separate shoulder straps from waist straps.
- 1b. Feed the shoulder straps back through the Seat Liner.
- 1c. Re-insert the shoulder straps through one of the higher harness adjustment heights in the Seat Liner.

Note: There are 3 shoulder harness height settings.

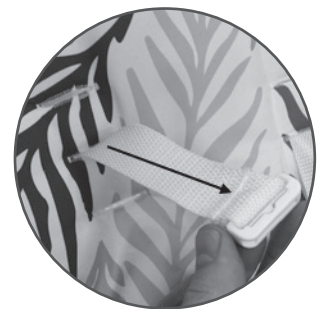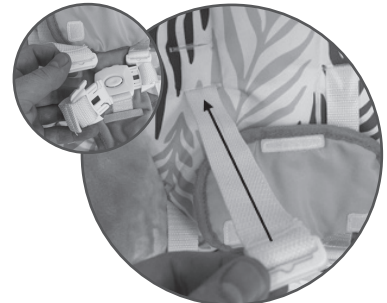


To fold for storage...

1

- 1a. Slightly loosen the 2 x Seat Backrest Tube and 2 x Seat Footrest Tube Screws.
- 1b. Fold Seat in half.



- 1c. Slightly lift front legs backward whilst pulling the leg release levers on either side of the frame.
- 1d. Whilst still holding the leg release levers, push leg inward.
- 1e. Repeat steps 1c-1d for the rear legs.

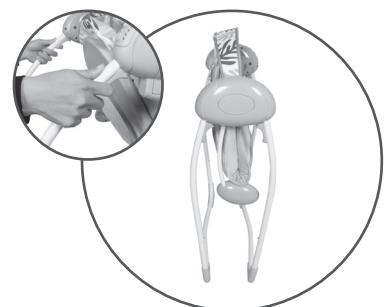



Cleaning

To ensure the long-lasting use of your swing, use a damp cloth to clean the frame. Do not use abrasive cleaners. Allow it to dry completely before storing it away. Do not dry clean, or use bleach on fabrics or trims. Do not machine wash, tumble or spin dry. Hand wash Seat Liner separately if required.

Maintenance

Check swing regularly to ensure that locking devices and components are secure and working properly. Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your swing, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by **CNP Brands**.

If you have any difficulties in assembling the swing, please contact our Service Department.

In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.

Warranty

For all warranty terms and conditions, please visit cnpbrands.com.au




CNP BRANDS[®]

CHILDCARE NURSERY PRODUCTS

About CNP Brands

Currently, **CNP Brands** boasts one of the most diverse brand portfolios with a combination of company owned brands and distribution agreements.

Our own brands, including **Childcare**, have gone from strength to strength in recent years. **Childcare**, and our premium brand **bebe care**, demonstrate our commitment to quality and continuing investment in product development.

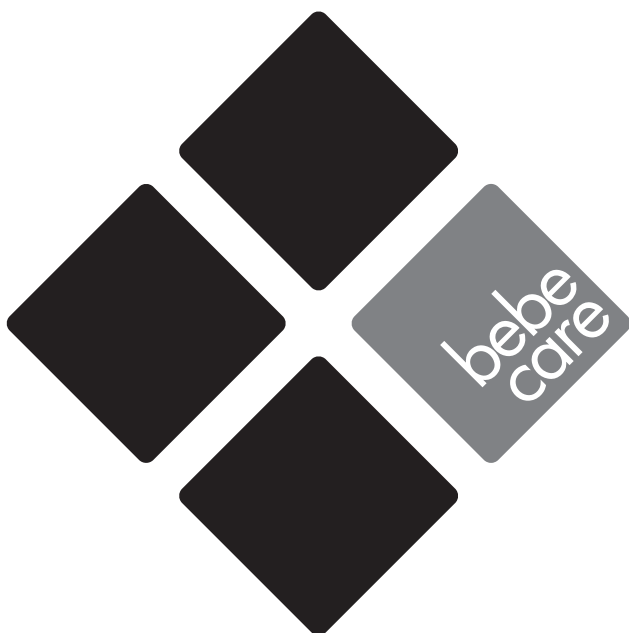



CNP BRANDS®
CHILDCARE NURSERY PRODUCTS



Distributed in Australia by CNP Brands,
82 Maribyrnong Street, Footscray, VIC, 3011
Customer Service 1300 667 137

W: www.cnpbrands.com.au
E: info@cnpbrands.com.au
F: www.facebook.com/CNPBrands
I: @cnp_baby

Distributed in New Zealand by Wainhouse
Distribution
2-6 Argyle St, Morningside,
PO Box 41-014,
St Lukes, Auckland, New Zealand
Customer Service: 0800 567 5000

E: helpline@wainhousedist.co.nz

