



**Ezi Feed**  
2-in-1 Booster  
Model # 043052

**IMPORTANT: RETAIN FOR FUTURE REFERENCE, READ CAREFULLY**

## SAFETY PRECAUTIONS

Read all instructions before assembly and use of the seat. Keep instructions for future use.

### ⚠ WARNING ⚠

- **NEVER** leave the child unattended.
- **ALWAYS** use the restraint system and ensure it is correctly fitted.
- **ALWAYS** use the chair attachment system and ensure it is correctly fitted before use.
- **ALWAYS** check the security and the stability of the product on the adult chair before use.
- **DO NOT** use this product on stools or benches.
- This product is intended for children able to sit unaided (minimum 6 months) and up to 36 months or a maximum weight of 15 kg.
- Suitable for adult chair size: seat width not less than 375mm, seat depth not less than 332mm, seat backrest height not less than 310mm, seat backrest width not less than 385mm.
- **ENSURE** that the adult chair with the chair mounted seat is placed in a position where the child is not able to use its feet to push against the table or any other structure as this can cause the tip over of the adult chair supporting the chair mounted seat.
- **DO NOT** use the chair mounted seat if any part is broken, torn or missing.
- **DO NOT** use accessories or replacement parts other than those approved by the manufacturer.
- **NEVER** lift or carry child in booster seat.
- **DO NOT** use in motor vehicles.


### Check what you have received...

You have received **1 box**. Please check the contents of the box against the list below. If anything is missing, please contact Customer Service. In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.

### Supplied loose in box:



Feeding Tray  
x1

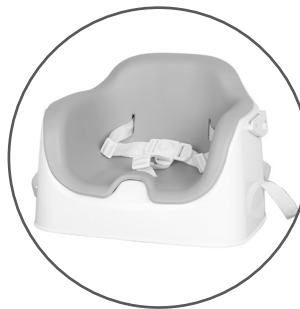

Seat (with seat insert pre-assembled)  
x1

Due to variations in the style and design of our products, the photographs and illustrations shown in this instruction manual are generic, therefore product fabrics, colour and design may vary from images shown. CNP Brands reserves the right to alter product specifications without notice as a result of our ongoing policy of product improvement.

Distributed in Australia by CNP Brands  
20 Calarco Drive,  
Derrimut, VIC, 3026  
Customer Service 1300 667 137

W: [www.cnpbrands.com.au](http://www.cnpbrands.com.au)  
E: [info@cnpbrands.com.au](mailto:info@cnpbrands.com.au)  
F: [www.facebook.com/CNPBrands](http://www.facebook.com/CNPBrands)  
I: @cnp\_baby

Distributed in New Zealand by Wainhouse Distribution  
2-6 Argyle St, Morningside,  
PO Box 41-014,  
St Lukes, Auckland, New Zealand  
Customer Service: 0800 567 5000

E: [helpline@wainhousedist.co.nz](mailto:helpline@wainhousedist.co.nz)



# Ezi Feed

2-in-1 Booster  
Model # 043052

**IMPORTANT: RETAIN FOR FUTURE REFERENCE, READ CAREFULLY**

## ASSEMBLY OPERATING INSTRUCTIONS

### To assemble feeding tray...



- 1a. Align the feeding tray with the feeding tray slots located on both sides of the seat.
- 1b. Slide the feeding tray along the tray slots on the seat, until the locking buttons 'click' into place.

**NOTE: Always check that the tray is properly secure before use. Feeding tray must always be used when in booster seat mode.**

### To remove feeding tray...



- 1a. Press and hold the locking buttons on both sides of the tray.
- 1b. Whilst still holding the locking buttons, slide the feeding tray away from the seat.

### Booster seat mode...



- 1a. Place the Booster Seat on the seat of the parent chair. Ensure the back of the Booster Seat is pressed up against the backrest of the parent chair.
- 1b. Secure the first seat fixing belt around the seat of the parent chair.
- 1c. Tighten the seat fixing belt adjuster to ensure the belt is secure.
- 1d. Secure the second seat fixing belt around the backrest of the parent chair.
- 1e. Tighten the seat fixing belt adjuster to ensure the belt is secure.

**NOTE: Only suitable for parent chair with: Seat width not less than 375mm. Seat depth not less than 332mm. Seat back height not less than 310mm. Seat back width not less than 385mm.**

### Floor seat mode...



- 1a. Remove feeding tray from seat.
- 1b. Place seat directly onto the floor.

**NOTE: NEVER use floor seat mode on an elevated surface.**


### Removing seat pad...



- 1a. Unfasten the safety harness.
- 1b. Feed the 3 points of the safety harness backward through the holes of the seat pad.
- 1c. Lift seat pad up and out of the seat for cleaning.

**NOTE: To re-install the seat pad, complete these steps in reverse.**

### Safety harness...

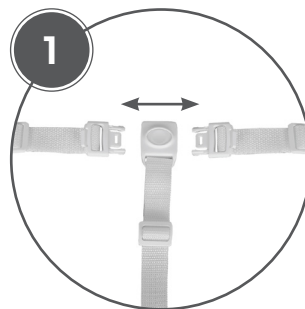

- 1a. To fasten safety harness, insert the left and right hand side buckles into the buckle housing.
- 1b. To release safety harness, press the button on the buckle housing.

**NOTE: Always adjust the waist straps to fit the child correctly.**

## HOW TO CARE FOR YOUR CHILDCARE SEAT

### Cleaning

This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference. To ensure the long-lasting use of your Seat, wipe down with a damp cloth and use a mild soap solution if necessary. Do not use abrasive cleaners. Always store product in a clean, dry place to air dry.

### Maintenance

Always check parts regularly for tightness of screws, nuts and other fasteners - tighten or replace if required. To maintain the safety of your toddler seat, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by CNP Brands.

