



Childcare

Convertible High Chair – Natural
Model # 044300-018



**IMPORTANT:
RETAIN FOR FUTURE REFERENCE,
READ CAREFULLY**

Read all instructions before assembly and use of the high chair. Keep instructions for future use.

⚠ WARNING ⚠

BEFORE ASSEMBLING THIS HIGH CHAIR, READ AND UNDERSTAND THE INSTRUCTIONS.

Follow the manufacturer's instructions

Do not leave children unattended.

The harness must always be used and correctly fitted - most injuries from high chairs are caused by falls.

Position the high chair away from solid structures and benches to avoid injuries caused by falls and by access to dangerous items.

Be aware of the risk of an open fire and other sources of strong heat in the vicinity of the high chair.

Do not use the high chair until the child can sit up unaided.

Do not use high chair unless all components are correctly fitted and adjusted.

Stop using this high chair if any part of the high chair is broken, torn or missing.

DO NOT remove harness. If harness is removed, it cannot be re-attached. If cleaning of the harness is required, wipe with a mild soap solution.

KEEP INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE.

Check that all parts are engaged before placing a child in the high chair.

Always keep child in view while in high chair.

Not recommended for a child under 6mths old.

The tray is not designed to hold the child in the high chair.

ALWAYS secure your child in the restraint. Ensure that your child wears a correctly fitted and adjusted harness at all times.

Only use the high chair on a secure level surface. Use the high chair on a flat, even and horizontal floor.

DO NOT elevate the high chair on any structure or table.

DO NOT allow children to stand on the seat or footrest or climb into or out of the high chair.

When adjusting the tray, make sure that parts of your child's body are clear of any moving parts.

DO NOT carry the high chair with a child in it.

To reduce the risk of injury, position the high chair away from furniture, walls, hot surfaces and liquids, window covering cords, and electrical cords.

Position the high chair away from furniture when the high chair is not being used at a table with the tray removed.

Periodically check that all parts of the high chair are in good working order.

DO NOT use the high chair if it is damaged or broken.

The product is intended for children able to sit up unaided and up to **3 years** or a maximum weight of **15 kgs**.

Promptly replace worn out or broken parts.

Please seek repair and **DO NOT** use high chair if it is not working correctly.

FALLING HAZARD: Prevent your child from climbing on the product.

Be aware of the risk of tilting when your child can push its feet against a table or any other structure.

**Read all instructions before assembly and use of the low chair mode.
Keep instructions for future use.**

Follow the manufacturer's instructions.

Age Group: under 36 months

Not recommended for a child under 12 months of age.

DO NOT leave children unattended.

The harness must always be used and correctly fitted - most injuries from toddler chairs are caused by falls.

Position the chair away from solid structures to avoid injuries caused by falls and by access to dangerous items.

DO NOT overload the chair.

DO NOT use on an inclined surface. Use the low chair mode on a flat, even and horizontal floor.

DO NOT elevate the chair on any structure or table.

NEVER allow children to stand on the table or chair.

ALWAYS use the Low Chair Mode Stabiliser Bar when using this product in Low Chair Mode.

Be aware of the risk of open fire and other sources of strong heat, such as electric bar heaters, gas fires etc. In the vicinity of the toddler chair.

Periodically check that all parts of the chair are in good working order.

DO NOT use the low chair mode if it is damaged or broken.

DO NOT use the low chair mode unless all components are correctly fitted and adjusted.

Congratulations on your purchase of the **Childcare Convertible High Chair – Natural**

This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference.

Contents

Assembly contents list

Assembly / Operating instructions

How to care for your Convertible High Chair









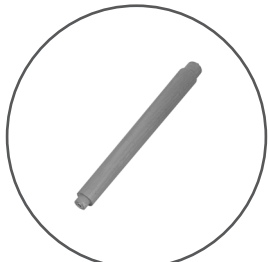
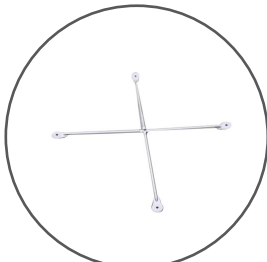
Due to variations in the style and design of our products, the photographs and illustrations shown in this instruction manual are generic, therefore product fabrics, colour and design may vary from images shown. CNP Brands reserves the right to alter product specifications without notice as a result of our ongoing policy of product improvement.

Check what you have received...

You have received **1 box**. Please check the contents of the box against the list below. If anything is missing, please contact Customer Service.

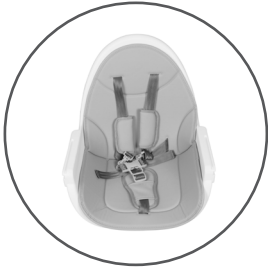In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.

Supplied loose in box:

<p>Seat frame with liner, harness, shoulder pads and crotchpad preassembled</p>		<p>x 1</p>	<p>Tray with sub-tray attached</p>		<p>x 1</p>
<p>Front upper leg</p>		<p>x 2</p>	<p>Table Panels</p>		<p>x 2</p>
<p>Rear upper leg</p>		<p>x 2</p>	<p>Table Assembly Bolts</p>		<p>x 4</p>
<p>Bottom leg</p>		<p>x 4</p>	<p>Leg Cross Brace</p>		<p>x 1</p>

ASSEMBLY CONTENTS

Check what you have received...

You have received **1 box**. Please check the contents of the box against the list below. If anything is missing, please contact Customer Service.

In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.


Supplied loose in box:

Bottom Feet with
Assembly Bolts




x 4

Low Chair Mode
Stabiliser Bar

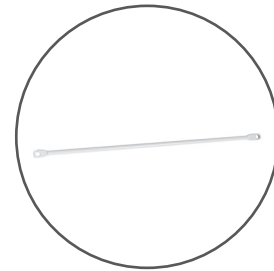

x 1

15mm Low
Chair Mode
Stabiliser Bar
Assembly
Bolts

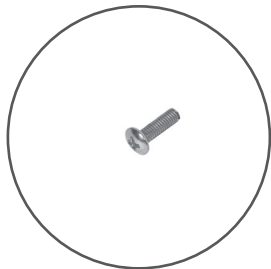

x 2

There are no accessories recommended for use with this Childcare Convertible High Chair.

To fit Legs and Footrest...

1

- 1a. Locate the two rear upper legs. These are the two longer legs.
- 1b. Insert these legs directly into the rear leg housings on the back of the seat frame.
- 1c. Ensure the pushpins on the legs "click" into the leg housing and are secure.




2

- 2a. Locate the two front upper legs. These are the two shorter legs.
- 2b. Insert these legs directly into the front leg housings on the front of the seat frame.
- 2c. Ensure the pushpins on the legs "click" into the leg housing and are secure.




3

- 3a. Lay both Table Panels face down on the floor.

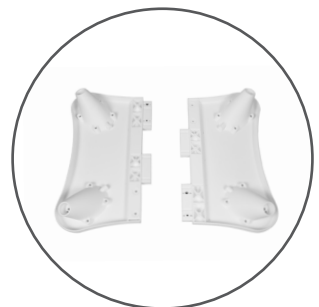


- 3b. Join the two pieces together to form the Table.
- 3c. Secure with the 4 x Table Assembly Bolts.

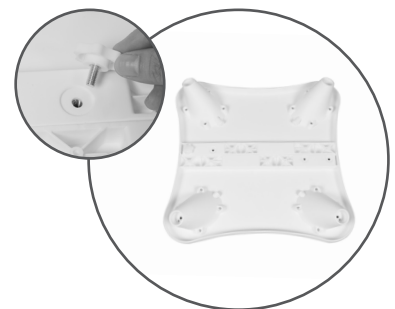

4


- 4a. Attach 4 x Bottom Legs into the leg mountings on the Table Assembly by screwing clockwise until firm.

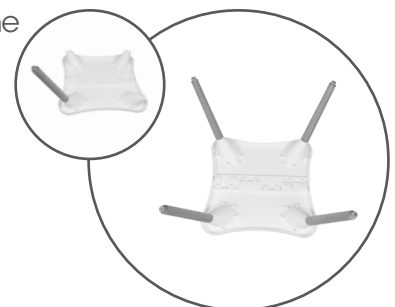

To fit Legs and Footrest continued...

4

4a. Locate Leg Cross Brace. Extend all arms outward to form an 'X' shape.

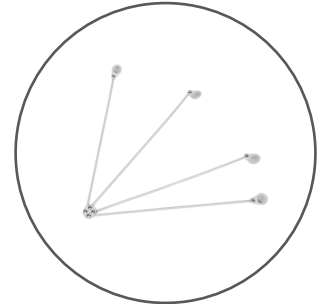


5

5a. Assemble Leg Cross Brace onto the end of the Bottom Legs.



6

6a. Locate 1 x Bottom Foot.
6b. Assemble to Bottom Leg and secure bolt with a Phillips Head screwdriver (not supplied).

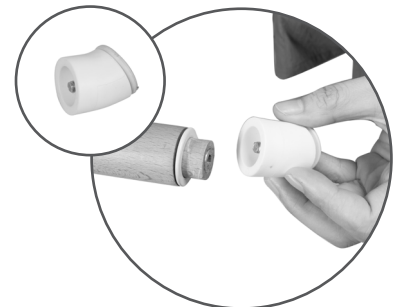

6c. Repeat for remaining 3 x Bottom Feet.



6d. Stand Table upright.
6e. Manually adjust the table feet so they sit level on the floor.



To fit Legs and Footrest continued...

7

- 7a. Assemble the High Chair Assembly into the housing holes on the top of the Table Assembly.
- 7b. Ensure all four legs "click" into place and are secure.



To attach Tray...

1

- 1a. To attach tray; align the tray with the arm rests, pull the tray release levers on both sides of the tray whilst sliding tray along armrests to desired position.
- 1b. Release tray levers to secure.
- 1c. High chair is now ready for use.



To adjust Tray...

1

- 1a. To adjust tray; pull and hold tray adjustment levers on both sides of the tray and slide forward or backward to desired position.



2

- 2a. The tray features a sub-tray, which is easily removed by locating the lip and lifting up.



To adjust tray continued...

3

- 3a. To remove tray, pull and hold tray adjustment levers on both sides of the tray and slide away from chair.



To use in Table and Low Chair Mode...

1

- 1a. The high chair can also be converted into a low chair by pushing the leg release button on the underside of the table leg housing and pulling the chair leg away from the Table Top.
- 1b. Repeat this step for the remaining 3 x Chair Legs and remove the Chair from the Table Assembly.
- 1c. Align Toddler Chair Stabiliser Bar with pre-assembled nuts on the back side of the Front Upper Legs (located underneath the chair).
- 1d. Secure Toddler Chair Stabiliser Bar to the Front Upper Legs with 2 x 15mm bolts. Tighten until firm.




WARNING! Toddler Chair Stabiliser Bar **MUST** be used when using the chair in Low Chair Mode.

WARNING! Toddler Chair Stabiliser Bar **MUST NOT** be used when using the chair in High Chair Mode.

WARNING! Never allow children to stand on table or chair.

PLEASE NOTE! The Low Chair Mode can be used with or without the Tray.

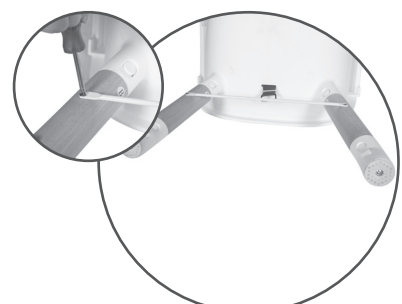


To use the Harness Restraints...

1

- 1a. To secure child in harness, push buckle (a) and (b) into the buckle housing (c) until the buckle prongs snap into position.
- 1b. Carefully adjust the harness by pulling the slider (d) until the desired fit is achieved in the lap, shoulder and crotch strap.
- 1c. To release the buckle, squeeze the top and bottom prongs until it disengages.

PLEASE NOTE! If cleaning of the harness is required, wipe with a mild soap solution.

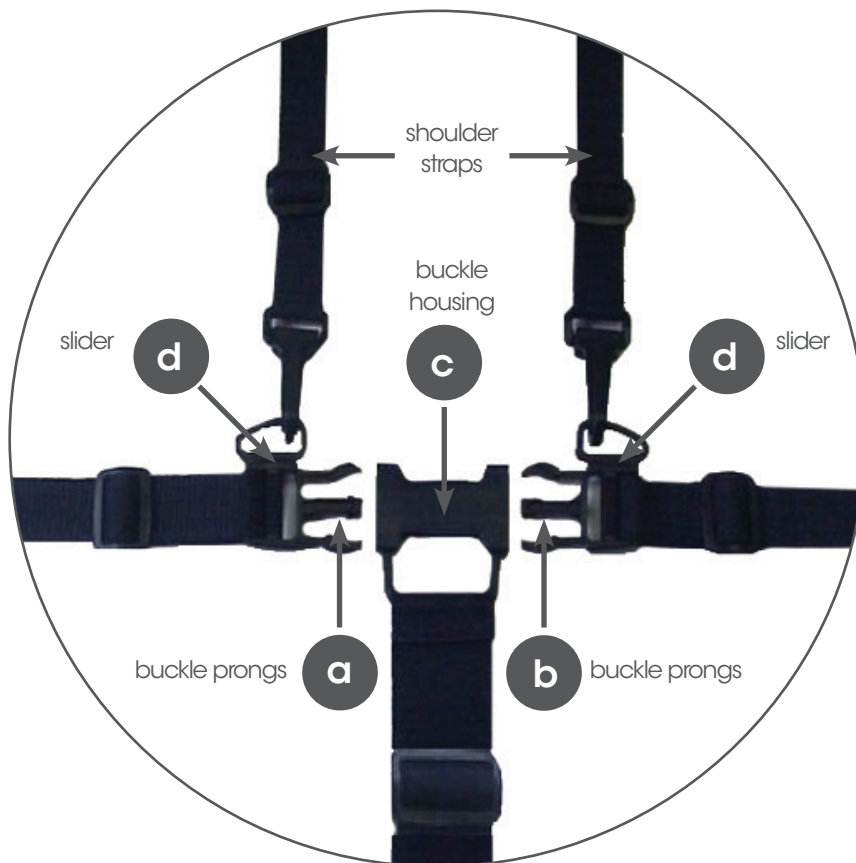



Cleaning

This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference.

To ensure the long-lasting use of your high chair, wipe down with a damp cloth and use a mild soap solution if necessary. Do not use abrasive cleaners. Always store product in a clean dry place.

Tray:

Wipe clean with a damp cloth and mild soap. Air dry. Do not immerse in water.

Maintenance

Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your high chair, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by **CNP Brands**.

If you have any difficulties in assembling the high chair, please contact our Service Department.

In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.

Warranty

For all warranty terms and conditions, please visit cnpbrands.com.au



CNP BRANDS[®]

CHILDCARE NURSERY PRODUCTS

About CNP Brands

Currently, **CNP Brands** boasts one of the most diverse brand portfolios with a combination of company owned brands and distribution agreements. These include distribution lines for **Evenflo, Good Baby, Lascal, Maclaren, Project Nursery, Summer Infant and Yookidoo.**

Our own brands, including **Childcare**, have gone from strength to strength in recent years. **Childcare**, and our premium brand **bebe care**, demonstrate our commitment to quality and continuing investment in product development.





CNP BRANDS®

CHILDCARE NURSERY PRODUCTS



Distributed in Australia by CNP Brands
82 Maribyrnong Street, Footscray, VIC, 3011
Customer Service 1300 667 137

W: www.cnpbrands.com.au
E: info@cnpbrands.com.au
F: www.facebook.com/CNPBrands
I: [@cnp_baby](https://www.instagram.com/cnp_baby)

Distributed in New Zealand by Wainhouse
Distribution
2-6 Argyle St, Morningside,
PO Box 41-014,
St Lukes, Auckland, New Zealand
Customer Service: 0800 567 5000

E: helpline@wainhousedist.co.nz

