



Oni

High Chair "Cool Grey"
Model # 044320-076



**IMPORTANT:
RETAIN FOR FUTURE REFERENCE,
READ CAREFULLY**

Read all instructions before assembly and use of the high chair. Keep instructions for future use.

⚠ WARNING ⚠

FOLLOW THE MANUFACTURER'S INSTRUCTIONS.

DO NOT LEAVE CHILDREN UNATTENDED.

THE HARNESS MUST ALWAYS BE USED AND CORRECTLY FITTED - MOST INJURIES FROM HIGHCHAIRS ARE CAUSED BY FALLS.

POSITION THE HIGH CHAIR AWAY FROM SOLID STRUCTURES AND BENCHES TO AVOID INJURIES CAUSED BY FALLS AND BY ACCESS TO DANGEROUS ITEMS.

DO NOT USE THE HIGH CHAIR UNTIL THE CHILD CAN SIT UP UNAIDED.

BE AWARE OF THE RISK OF OPEN FIRE AND OTHER SOURCES OF STRONG HEAT, SUCH AS ELECTRIC BAR HEATERS, GAS FIRES ETC. IN THE VICINITY OF THE HIGH CHAIR.

Check that all safety locks are engaged before placing a child in the high chair.

Always keep child in view while in high chair.

Not recommended for a child under 6 months old.

The tray is not designed to hold the child in the high chair.

Use safety locks and brakes at all times.

Always secure your child in the restraint. Ensure that your child wears a correctly fitted and adjusted harness at all times.

The high chair should only be used in an upright position once the child is capable of reliably and consistently sitting upright.

Only use the high chair on a secure level surface.

DO NOT allow children to stand on the seat or footrest or climb into or out of the high chair.

When adjusting the high chair, make sure that parts of your child's body are clear of any moving parts.

DO NOT carry the high chair with a child in it.

To reduce the risk of injury, position the high chair away from furniture, walls, hot surfaces and liquids, window covering cords, and electrical cords. Position the high chair away from furniture when the high chair is not being used at a table with the tray removed.

Periodically check that all parts of the high chair are in good working order.

DO NOT use the high chair if it is damaged or broken.

The weight of the child using this high chair should not exceed 15kgs.

The product is intended for children able to sit up unaided and up to 3 years or a maximum weight of 15kg.

Promptly replace worn out or broken parts.

Apply wheel lock/brakes when not moving the high chair.

Use the high chair on a flat, even and horizontal floor. Do not elevate the high chair on any structure or table.

DO NOT use the high chair unless all components are correctly fitted and adjusted.

FALLING HAZARD: Prevent your child from climbing on the product.

Be aware of the risk of tilting when your child can push its feet against a table or any other structure.

To avoid injury, keep child away from product when folding or unfolding.

Congratulations on your purchase of the **Oni High Chair**.

This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference.

Contents

Assembly contents list

Assembly / Operating instructions

How to care for your **Oni High Chair**



Due to variations in the style and design of our products, the photographs and illustrations shown in this instruction manual are generic, therefore product fabrics, colour and design may vary from images shown. CNP Brands reserves the right to alter product specifications without notice as a result of our ongoing policy of product improvement.


Check what you have received...

You have received **1 box**. Please check the contents of the box against the list below. If anything is missing, please contact Customer Service.

In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.


Supplied loose in box:

Seat
(pre-assembled with Seat Pad, Seat Height Adjusters, Harness and Footrest)

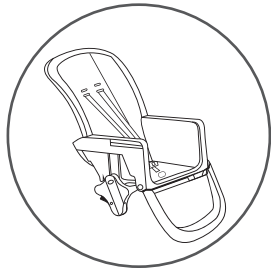


x 1

Right Leg Assembly
(pre-assembled with tubes)

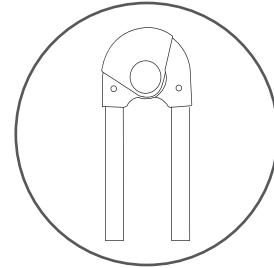


x 1

Front Foot

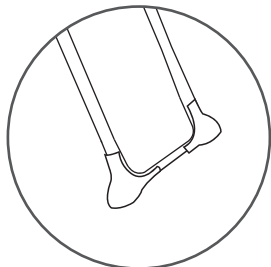


x 1

Left Leg Assembly
(pre-assembled with tubes)

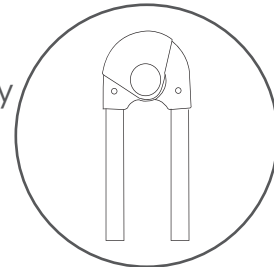


x 1

Rear Foot
(with roller wheels)

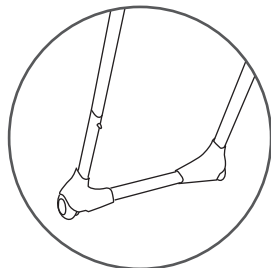

x 1

Tray

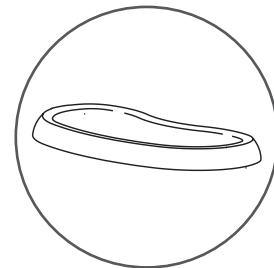


x 1

There are no accessories recommended for use with this Childcare Oni High Chair.


To assemble High Chair...

- 1
 - 1a. To open the leg assembly, press and hold button (a) while sliding the legs outwards.
 - 1b. Release button to lock.
 - 1c. With the numbers facing forward, insert the leg into the top of the seat adjusting brackets.
 - 1d. Repeat for other leg.
 - 1e. There are seven positions to adjust height.
 - 1f. To adjust the seat up or down, press and hold the buttons on the seat adjuster whilst raising or lowering seat.
 - 1g. Release buttons at the desired height.

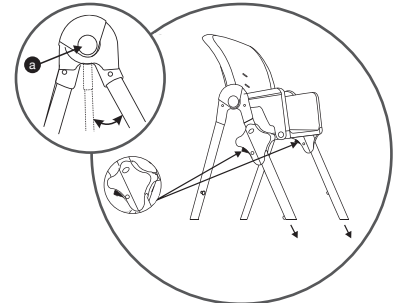


To fix the Feet...

- 1
 - 1a. Lay the high chair on its back.
 - 1b. Please note that each of the four legs has a spring loaded pin.
 - 1c. Line up the rear foot with roller wheels with the rear legs. Ensure that the small hole in the top of the foot lines up with the spring pin.
 - 1d. Push firmly on the foot at either end until each of the two spring pins click into place within the small hole in the foot.
 - 1e. Repeat for the front foot.

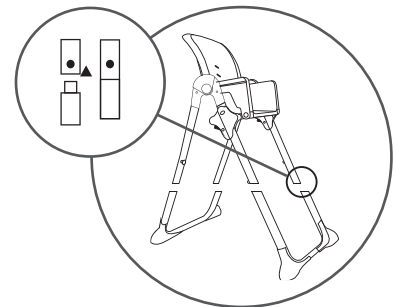

To adjust the Footrest...


- 1
 - 1a. The footrest has 3 adjustable positions.
 - 1b. To adjust, push in footrest adjustment buttons on both sides of the footrest.
 - 1c. Raise or lower to desired position.
 - 1d. Release adjustment buttons to secure.

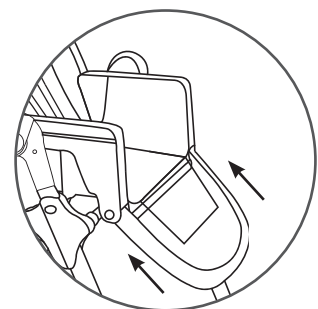

To fit Tray...

1

- 1a. Position the tray at the front of the arms, pull both levers found on the underside of the tray, whilst sliding the tray along with the slot (c) to the position required.
- 1b. The tray has three positions as indicated on the arm rests, release the levers to lock in position.
- 1c. In the case the tray is not automatically locked onto the armrests, move the tray slightly until a double click is heard signalling the tray is securely locked.

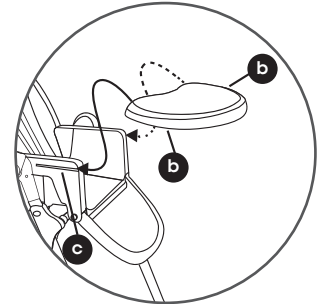


⚠ WARNING ⚠

Never leave the tray fitted in a position in which the warning signs are visible.

2


- 2a. The tray can be stored on the back legs of the high chair.
- 2b. Align the holes in the rear of the tray with the small pegs on the back legs.

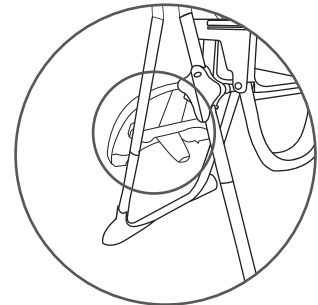

To use the Harness...

1

- 1a. A five point harness is provided to restrain your child.
- 1b. To unfasten the harness pinch (a) and (b) waist strap prongs and pull the clips clear.
- 1c. Sliding adjusters are fitted on the shoulder straps and waist straps (c).

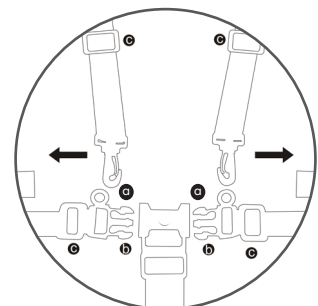


2

- 2a. **To fasten the harness** push the waist strap clips into the buckle until they lock in place.
- 2b. **Sliding adjusters** are fitted on the shoulder and waist straps (c). The harness should be carefully adjusted so that it fits your child comfortably.

To use Harness continued...

3

- 3a. **To remove harness** remove metal rings from harness end, flatten the butterfly ends and pass through the slots in the seat (e).
- 3b. **To refit the straps** flatten the butterfly ends, pass the ends through the slots in the seat (e), then open the butterfly ends (d) and refit metal rings.

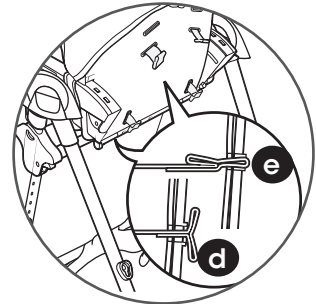


CAUTION! The harness must be used at all times and be correctly adjusted. Most injuries from high chairs are caused by falls.

To remove Seat Cushion...


1

- 1a. Slide metal rings from harness end.
- 1b. Feed the harness straps through the slots in seat and seat cushion on the back and under the seat (a) and remove the harness.

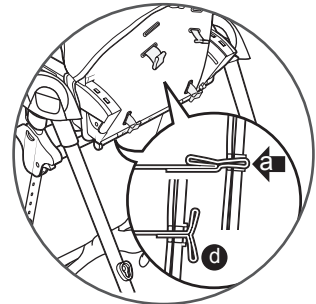


2

- 2a. Release the seat cushion on either side of the arm rests by releasing the hooks on the side of the inner armrests (b).
- 2b. Lift the cover off the seat (c).
- 2c. Refitting the seat cushion is a reversal of this procedure.
- 2d. When refitting the harness ensure the butterflies on the ends of the harness straps are opened out correctly (d) and refit metal rings.

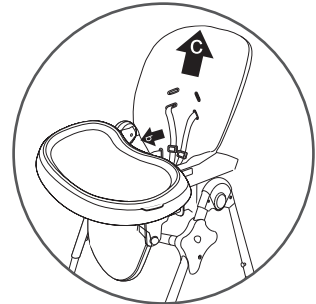


To adjust Seat Height and Recline...

- 1** 1a. To adjust the height of the seat, pull both of the height adjusting locks (a) and simultaneously raise or lower the seat, releasing both of the locks at the required height.

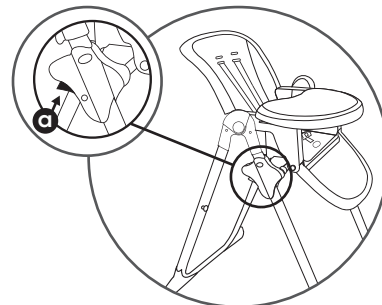

NOTE! Do not adjust the height of the seat whilst the child is seated in the chair.


- 2** 2a. To adjust the angle of the seat backrest, lift the plastic lever (b) (found on the back of the seat assembly) and position as required, releasing the mechanism to secure into place.

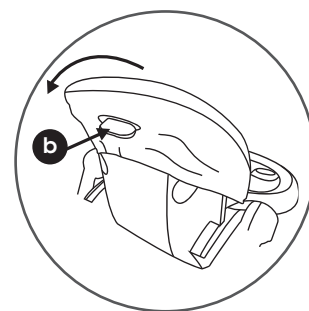

IMPORTANT! If the height adjustment becomes difficult after a period of use and as part of the regular maintenance routine, DO NOT use spray lubricants, simply wipe clean after use.

To fold High Chair...

- 1** 1a. For a more compact fold, fit the tray to the back of the high chair.
 1b. To fold push in both of the height adjuster locks (a) and simultaneously lower the seat of the high chair to the lowest position.
 1c. Press in both of the release catches (b) on the side legs and slide the rear legs forward.
 1d. Check the high chair is correctly folded in its locked position before leaving to stand free.

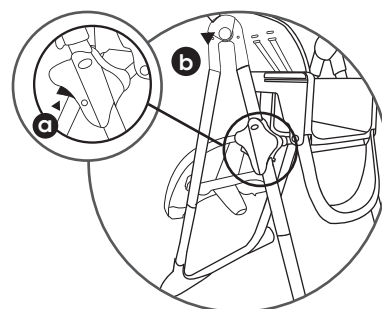

Cleaning

This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference.

To ensure the long-lasting use of your high chair, wipe down with a damp cloth and use a mild soap solution if necessary. Do not use abrasive cleaners. Always store product in a clean dry place.

Maintenance

Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your high chair, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by **CNP Brands**.

If you have any difficulties in assembling the high chair, please contact our Service Department.

In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.

Warranty

For all warranty terms and conditions, please visit cnpbrands.com.au



CNP BRANDS®

CHILDCARE NURSERY PRODUCTS



Distributed in Australia by CNP Brands
82 Maribyrnong Street, Footscray, VIC, 3011
Customer Service 1300 667 137

W: www.cnpbrands.com.au
E: info@cnpbrands.com.au
F: www.facebook.com/CNPBrands
I: @cnp_baby

Distributed in New Zealand by Wainhouse
Distribution
2-6 Argyle St, Morningside,
PO Box 41-014,
St Lukes, Auckland, New Zealand
Customer Service: 0800 567 5000

E: helpline@wainhousedist.co.nz

