




# Childcare

Activity Den

Model # 089888

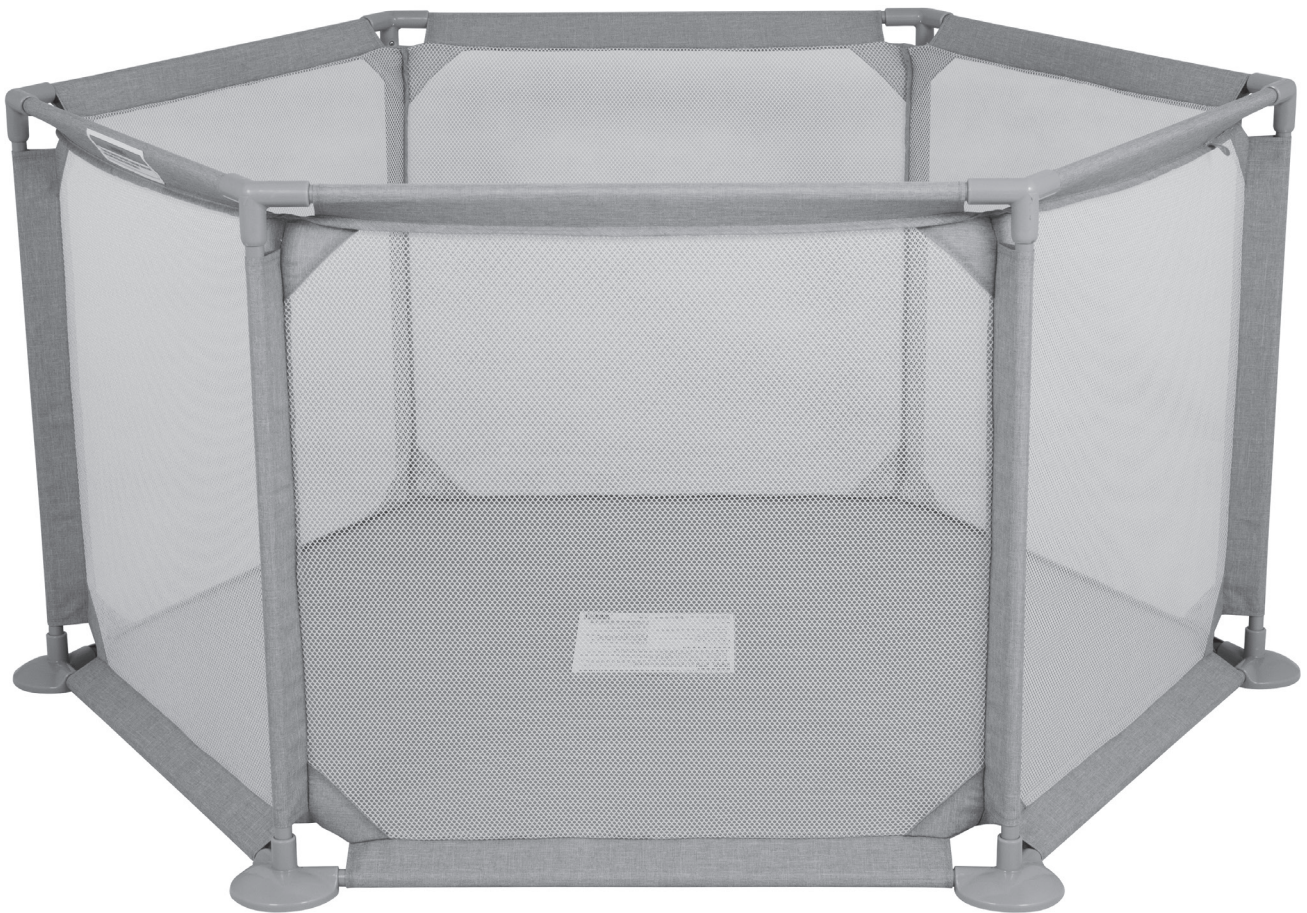

**IMPORTANT:  
RETAIN FOR FUTURE REFERENCE,  
READ CAREFULLY.**

Read all instructions before assembly and use of the activity den.  
Keep instructions for future use.

### **⚠ WARNING ⚠**

**DO NOT PLACE THE PLAYPEN CLOSE TO AN OPEN FIRE OR OTHER HEAT SOURCE.  
DO NOT USE PLAYPEN WITHOUT THE BASE.**

**NEVER** leave child unattended.

**WARNING** - Ensure that the playpen is fully erected and all the locking mechanisms engaged before placing your child in this playpen.

Adult assembly required, always keep fingers clear of moving parts.

Keep small parts away from children.

This product has been designed and manufactured to comply with safety standard EN 12227:2010.

This product has been designed for use for children up to **15 kgs**.

This product has been designed for use for children from **6-24 months** of age.

**DO NOT** leave anything in the activity den which could provide a foothold or create a danger of suffocation or strangulation.

All assembly fittings should always be tightened properly.

**DO NOT** use the activity den if any part is broken, torn or missing and use only spare parts approved by the manufacturer.

Accessories which are not approved by the manufacturer shall not be used.

## **Congratulations** on your purchase of the **Childcare Activity Den.**


This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference.

### **Contents**

Assembly contents list

Assembly / Operating instructions

How to care for your **Childcare Activity Den**

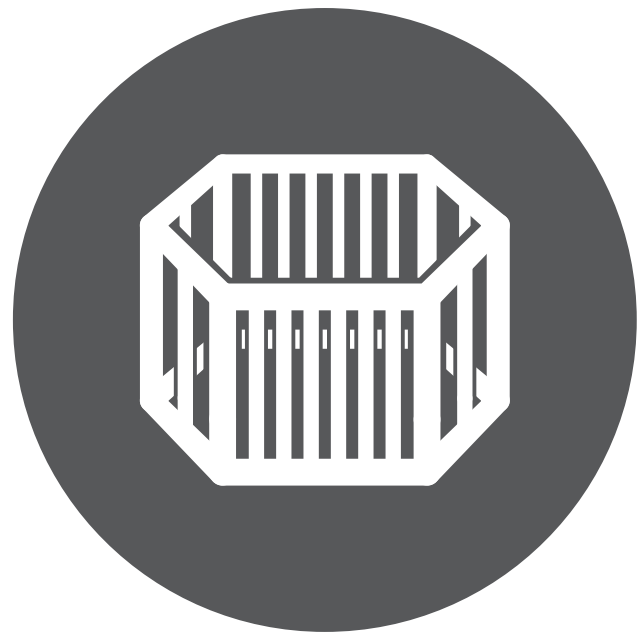





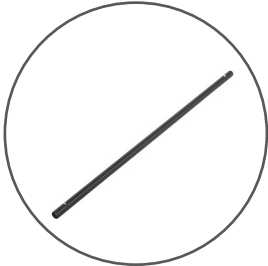



Due to variations in the style and design of our products, the photographs and illustrations shown in this instruction manual are generic, therefore product fabrics, colour and design may vary from images shown. CNP Brands reserves the right to alter product specifications without notice as a result of our ongoing policy of product improvement.

## Check what you have received...

You have received **1 box**. Please check the contents of the box against the list below. If anything is missing, please contact Customer Service.

In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.
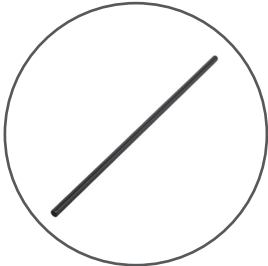
## Supplied loose in box:

Activity Den Fabric		x 1	Upper Joint		x 4
Tube		x 16	Upper Joint (with Pop-Pin holes)		x 2
Tube with Pop-Pin		x 2	Lower Joint		x 4
Carry Bag		x 1	Lower joint (with Pop-pin holes)		x 2

There are no accessories recommended for use with this Childcare Activity Den.

## To assemble Activity Den...

**NOTE:** It is advised that two adults assemble this product.


1

1a. Lay the Activity Den Fabric out flat on the floor.




2

2a. Assemble the base by inserting 6 x Tubes through the sleeves on the bottom of the Activity Den Fabric.

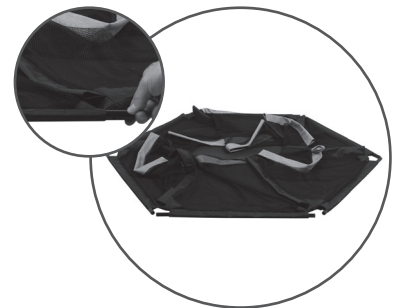

3

3a. Connect the bottom tubes by inserting the ends of the Tubes into 6 x Lower Joints.

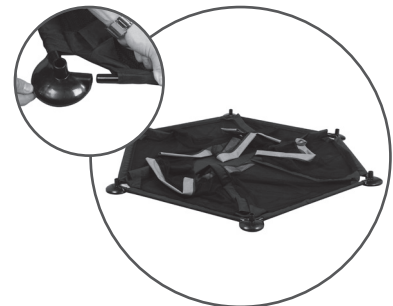

**NOTE:** The 2 x Lower Joints (with Pop-Pin holes) MUST be used at opposite corners.

4

4a. Assemble the top rail by first inserting 2 x Tubes through two top rail sleeves.



## To assemble Activity Den continued...


5

5a. Insert the ends of these Tubes into Upper Joints.



6


6a. Repeat this process until you have completed assembling the top rail.

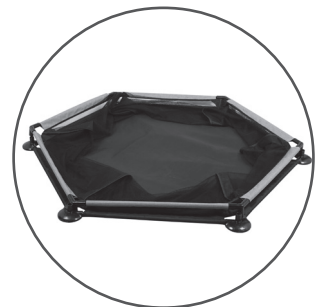

**NOTE:** The 2 x Upper Joints (with Pop-Pin holes) MUST be used on the same corner the Lower Joints with Pop-Pin holes were used.


7

7a. To assemble the vertical tubes, start with 1 x Tube with Pop-Pins.

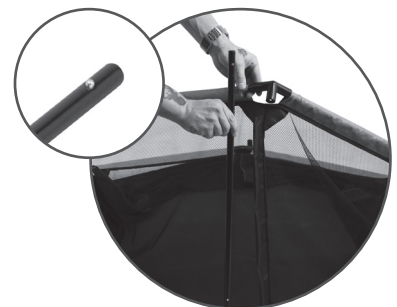

8

8a. Find one corner where the Upper and Lower Joints with Pop-Pin holes were used.

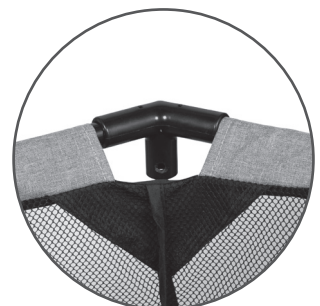

9


9a. Insert the Tube into the vertical sleeve.



## To assemble Activity Den continued...

10

10a. Insert the top end of the Tube into the Upper Joint. Ensure the Pop-pin correctly engages.

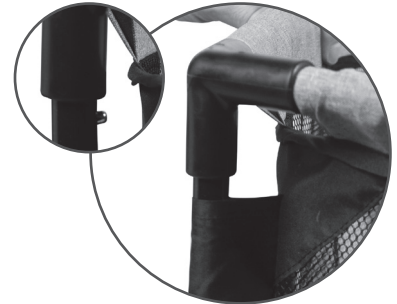

11

11a. Insert the bottom of the Tube into the Lower Joint. Ensure the Pop-pin correctly engages.



12

12a. Repeat steps 7-11 for the remaining corner where the Upper and Lower Joints with Pop-Pin holes were used.



13

13a. Assemble the remaining vertical tubes by inserting the tubes into the remaining vertical sleeves. Insert the top of the tube into the Upper Joints, then insert the bottom of the tube into the Lower Joints.

**NOTE:** It is a little harder to assemble the last vertical tube. If you are having trouble, stand on the lower joint with your foot, lift the vertical tube with both hands and insert the bottom of the tube into the lower joint.



13

13a. Ensure all tubes are assembled correctly and secure before use.



The Activity Den is now ready for use.

## To disassemble Activity Den...

### ⚠ WARNING ⚠

**CARE MUST BE TAKEN WHEN BEGINNING THE DISASSEMBLY PROCESS. ANY VARIATION FROM THE BELOW STEPS MAY CAUSE DAMAGE TO YOUR PRODUCT AND VOID YOUR PRODUCT WARRANTY.**

1

- 1a. Start with one of the vertical tubes with the pop-pins.
- 1b. Disengage the Lower Joint pop-pin at the bottom of the vertical tube.



**NOTE:** The use of a tool such as an Allen Key may be helpful in completing this step.

2

- 2a. Stand on the lower joint with your foot. Gently slide the bottom of the vertical tube out of the Lower Joint.




3

- 3a. Disengage the Upper Joint pop-pin at the top of the vertical tube.



4

- 4a. Disconnect the tube from the Upper Joint and remove the tube from the vertical sleeve.

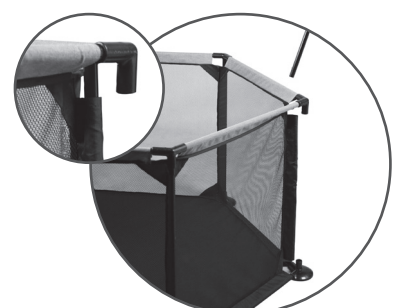




## To disassemble Activity Den continued...

**5**

- 5a. Repeat steps 1-4 for the remaining vertical tube with pop-pins.

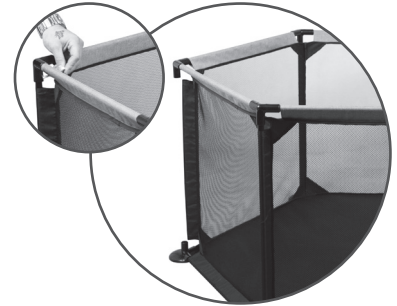

**6**

- 6a. Disconnect the remaining 4 x tubes from their Upper and Lower Joints.  
6b. Remove the tubes from the vertical sleeve.



**7**

- 7a. Disconnect the top rail tubes from the Upper Joints.  
7b. Remove the top rail tubes from the top rail sleeves.



**8**

- 8a. Disconnect the bottom rail tubes from the Lower Joints.  
Remove the bottom rail tubes from the base sleeves.



**9**

- 9a. Fold Activity Den Fabric and store in carry bag along with all tubes, upper and lower joints.





### Cleaning

This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference.

To ensure the long-lasting use of your activity den, wipe down with a damp cloth and use a mild soap solution if necessary. Do not use abrasive cleaners. Always store product in a clean dry place.

### Maintenance

Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your glider rocking chair, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by **CNP Brands**.

If you have any difficulties in assembling the glider rocking chair & ottoman, please contact our Service Department.

In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.



# CNP BRANDS<sup>®</sup>

CHILDCARE NURSERY PRODUCTS

## About CNP Brands

Currently, **CNP Brands** boasts one of the most diverse brand portfolios with a combination of company owned brands and distribution agreements. These include distribution lines for **Evenflo, Good Baby, Lascal, Maclaren, Project Nursery, Summer Infant and Yookidoo.**

Our own brands, including **Childcare**, have gone from strength to strength in recent years. **Childcare**, and our premium brand **bebe care**, demonstrate our commitment to quality and continuing investment in product development.





# CNP BRANDS®

CHILDCARE NURSERY PRODUCTS



Distributed in Australia by CNP Brands  
82 Maribyrnong Street, Footscray, VIC, 3011  
Customer Service 1300 667 137

**W:** [www.cnpbrands.com.au](http://www.cnpbrands.com.au)  
**E:** [info@cnpbrands.com.au](mailto:info@cnpbrands.com.au)  
**F:** [www.facebook.com/CNPBrands](https://www.facebook.com/CNPBrands)  
**I:** [@cnp\\_baby](https://www.instagram.com/cnp_baby)

Distributed in New Zealand by Wainhouse  
Distribution  
2-6 Argyle St, Morningside,  
PO Box 41-014,  
St Lukes, Auckland, New Zealand  
Customer Service: 0800 567 5000

**E:** [helpline@wainhousedist.co.nz](mailto:helpline@wainhousedist.co.nz)

