



ZURI

HIGH CHAIR
MODEL#094600



**IMPORTANT:
RETAIN FOR FUTURE REFERENCE,
READ CAREFULLY**



Read all instructions before assembly and use of the high chair. Keep instructions for future use.

⚠ WARNING ⚠

BEFORE ASSEMBLING THIS HIGH CHAIR, READ AND UNDERSTAND THE INSTRUCTIONS.

Follow the manufacturer's instructions

Do not leave children unattended.

The harness must always be used and correctly fitted - most injuries from high chairs are caused by falls.

Position the high chair away from solid structures and benches to avoid injuries caused by falls and by access to dangerous items.

Be aware of the risk of an open fire and other sources of strong heat in the vicinity of the high chair.

Do not use the high chair until the child can sit up unaided.

Do not use high chair unless all components are correctly fitted and adjusted.

Stop using this high chair if any part of the high chair is broken, torn or missing.

DO NOT remove harness. If harness is removed, it cannot be re-attached. If cleaning of the harness is required, wipe with a mild soap solution.

KEEP INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE.

Check that all parts are engaged before placing a child in the high chair.

Always keep child in view while in high chair.

Not recommended for a child under 6mths old.

The tray is not designed to hold the child in the high chair.

ALWAYS secure your child in the restraint. Ensure that your child wears a correctly fitted and adjusted harness at all times.

Only use the high chair on a secure level surface. Use the high chair on a flat, even and horizontal floor.

DO NOT elevate the high chair on any structure or table.

DO NOT allow children to stand on the seat or footrest or climb into or out of the high chair.

When adjusting the tray, make sure that parts of your child's body are clear of any moving parts.

DO NOT carry the high chair with a child in it.

To reduce the risk of injury, position the high chair away from furniture, walls, hot surfaces and liquids, window covering cords, and electrical cords.

Position the high chair away from furniture when the high chair is not being used at a table with the tray removed.

Periodically check that all parts of the high chair are in good working order.

DO NOT use the high chair if it is damaged or broken.

The product is intended for children able to sit up unaided and up to **3 years** or a maximum weight of **15 kgs**.

Promptly replace worn out or broken parts.

Please seek repair and **DO NOT** use high chair if it is not working correctly.

SAFETY PRECAUTIONS



FALLING HAZARD: Prevent your child from climbing on the product.

Be aware of the risk of tilting when your child can push its feet against a table or any other structure.

**Read all instructions before assembly and use of the low chair mode.
Keep instructions for future use.**

Follow the manufacturer's instructions.

Age Group: under 36 months

Not recommended for a child under 12 months of age.

DO NOT leave children unattended.

The harness must always be used and correctly fitted - most injuries from toddler chairs are caused by falls.

Position the chair away from solid structures to avoid injuries caused by falls and by access to dangerous items.

DO NOT overload the chair.

DO NOT use on an inclined surface. Use the low chair mode on a flat, even and horizontal floor.

DO NOT elevate the chair on any structure or table.

Be aware of the risk of open fire and other sources of strong heat, such as electric bar heaters, gas fires etc. In the vicinity of the toddler chair.

Periodically check that all parts of the chair are in good working order.

DO NOT use the low chair mode if it is damaged or broken.

DO NOT use the low chair mode unless all components are correctly fitted and adjusted.



Congratulations on your purchase of the **Zuri High Chair**

This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference.

Contents

Assembly contents list

Assembly / Operating instructions

How to care for your **Zuri High Chair**



Due to variations in the style and design of our products, the photographs and illustrations shown in this instruction manual are generic, therefore product fabrics, colour and design may vary from images shown. CNP Brands reserves the right to alter product specifications without notice as a result of our ongoing policy of product improvement.



Check what you have received...

You have received **1 box**. Please check the contents of the box against the list below. If anything is missing, please contact Customer Service.

In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.

Supplied loose in box:

Seat frame with
liner and harness
pre-assembled



x 1

Tray with sub-tray
attached



x 1

Front upper leg
with pre-drilled
holes



x 2

Footrest with
footrest bolts



x 1


x 2

Rear upper leg




x 2

Leg Cross Brace
with Cross Brace
Cap

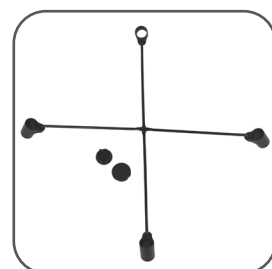

x 1

Bottom leg

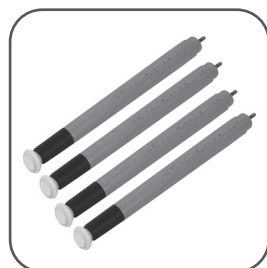

x 4

Armrest Covers



x 1



Check what you have received...

You have received **1 box**. Please check the contents of the box against the list below. If anything is missing, please contact Customer Service.

In Australia, contact **CNP Brands on 1300 667 137**, in New Zealand contact **Wainhouse Distribution on 0800 567 5000**.

Supplied loose in box:

Basket



x 1

There are no accessories recommended for use with this Bebecare High Chair.



To fit Legs and Footrest...


1

- 1a. Locate the two front upper legs.
- 1b. Ensure they are the legs that have the pre-drilled holes in the front of them.
- 1c. Line up the screw and the hole and turn clockwise until the leg is firm.



2

- 2a. Ensure that the pre-drilled holes are facing the front.
- 2b. Do not over-tighten.
- 2c. Repeat for opposite side.

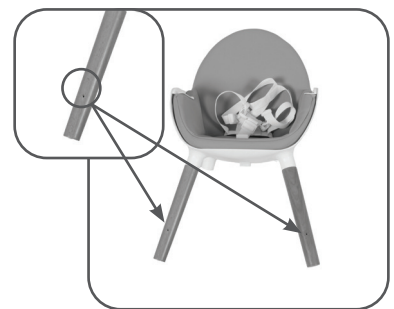


3

- 3a. Locating the pre-drilled holes in the front upper leg, line up the footrest with the holes.



4

- 4a. Insert supplied bolts and tighten with a Phillips Head screwdriver (not supplied).
- 4b. Do not over-tighten the bolts.
- 4c. Repeat for opposite side.

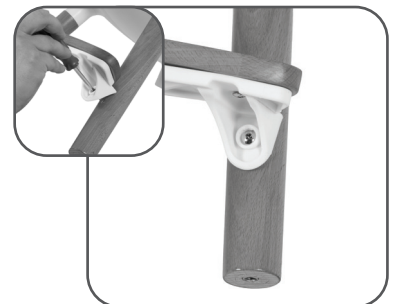



To fit Legs and footrest continued...

1

- 1a. Locate the two rear upper legs.
- 1b. Line up the screw and the hole and turn clockwise until the leg is firm.
- 1c. Do not over-tighten.
- 1d. Repeat for opposite side.



2

- 2a. The chair should resemble the image as shown.



3

- 3a. Lay chair face down.
- 3b. Assemble cross brace onto upper legs, as per image shown.

PLEASE NOTE! The silver nuts on the cross brace should be facing you.

- 3c. Assemble lower legs through cross brace and into upper legs until firm.
- 3d. Stand chair upright.
- 3e. Assemble cross brace cap over the centre of the cross brace as per image shown. Ensure assembly direction is correct as per the markings on the cap.



4

- 4a. Ensure feet sit flush to the floor surface before use of the highchair.





To attach Tray...

PLEASE NOTE! The plastic tray can be adjusted and has three positions.

- 1
 - 1a. To attach tray; align the tray with the arm rests, push button at the front of the tray while sliding tray along armrests to desired position.
 - 1b. Release button.
 - 1c. High chair is now ready for use.



To adjust Tray...

- 1
 - 1a. To adjust tray; Push button at the front of the tray and slide forward or backward to desired position.



- 2
 - 2a. The tray features a sub-tray, which is easily removed by locating the lip and lifting up.



- 3
 - 3a. To remove tray, push button at front of tray whilst holding the chair firmly with the other hand and slide forward.






To attach Basket...

1

- 1a. Ensure Basket flap opening is at the back of the chair.
- 1b. Attach the back of the Basket to the rear chair legs via the two straps with press studs.
- 1c. Open Basket flap and feed under, up and over the Leg Cross Brace.
- 1d. Attach the front of the Basket to the front chair legs via the two straps with press studs.

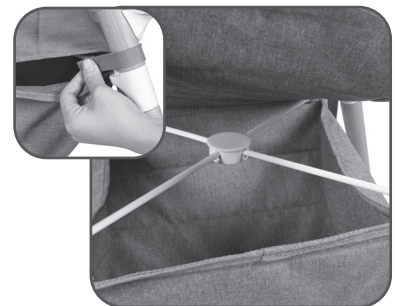

To fit armrest covers...

PLEASE NOTE! Armrest covers can only be used when using the chair in Low Chair Mode without the tray.

1

- 1a. Line up grooves in armrest cover with the chair arm rest.
- 1b. Slide armrest cover onto the chair armrest until it hits the end of the groove.
- 1c. Repeat for remaining armrest cover.



2

- 2a. To remove armrests, slide armrest cover away from seat until it leaves the armrest.





To convert to Low Chair Mode...

- 1
 - 1a. The high chair can also be converted into a low chair by inserting the four bottom legs directly into the seat by turning clockwise until the legs are firm.
 - 1b. Do not over-tighten.






PLEASE NOTE! The Low Chair Mode can be used with or without the Tray.

To use the Harness...

CAUTION: The harness must be used at all times and be correctly adjusted. Most injuries from high chairs are caused by falls.

- 1
 - 1a. Place baby in the seat.
 - 1b. Attach shoulder straps to waist belt.
 - 1c. Position the crotch strap between baby's legs and feed arms through shoulder straps.
 - 1d. Close buckles. You should hear a 'click' sound.
 - 1e. Adjust sliders for a snug fit (re-adjust as baby grows).
 - 1f. Check to be sure the harness is securely attached by pulling it away from baby, it should remain attached.

PLEASE NOTE! DO NOT remove harness. If harness is removed, it cannot be re-attached. If cleaning of the harness is required, wipe with a mild soap solution. Use the 5-point harness at all times to ensure that baby is safe and secure while seated.

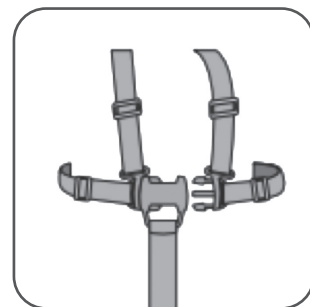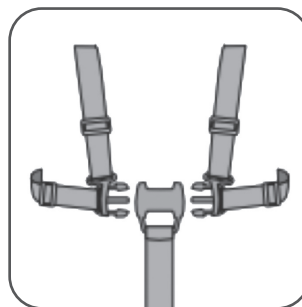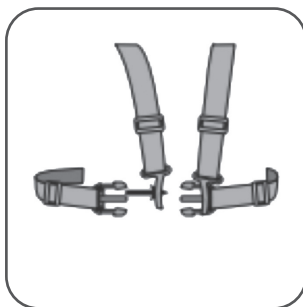



Cleaning

This product has been designed and developed with safety, comfort and functionality in mind. Please take the time to read this manual carefully before using this product and keep it in a safe place for future reference.

To ensure the long-lasting use of your high chair, wipe down with a damp cloth and use a mild soap solution if necessary. Do not use abrasive cleaners. Always store product in a clean dry place.

Tray:

Wipe clean with a damp cloth and mild soap. Air dry. Do not immerse in water.

Maintenance

Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your high chair, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by **CNP Brands**.

If you have any difficulties in assembling the high chair, please contact our Service Department.

In Australia, contact **CNP Brands** on **1300 667 137**, in New Zealand contact **Wainhouse Distribution** on **0800 567 5000**.

Warranty

For all warranty terms and conditions, please visit cnpbrands.com.au



CNP BRANDS[®]

CHILDCARE NURSERY PRODUCTS

About CNP Brands

Currently, **CNP Brands** boasts one of the most diverse brand portfolios with a combination of company owned brands and distribution agreements. These include distribution lines for **Evenflo, Good Baby, Lascal, Maclaren, Project Nursery, Summer Infant and Yookidoo.**


Our own brands, including **Childcare**, have gone from strength to strength in recent years. **Childcare**, and our premium brand **bebe care**, demonstrate our commitment to quality and continuing investment in product development.





CNP BRANDS®

CHILDCARE NURSERY PRODUCTS

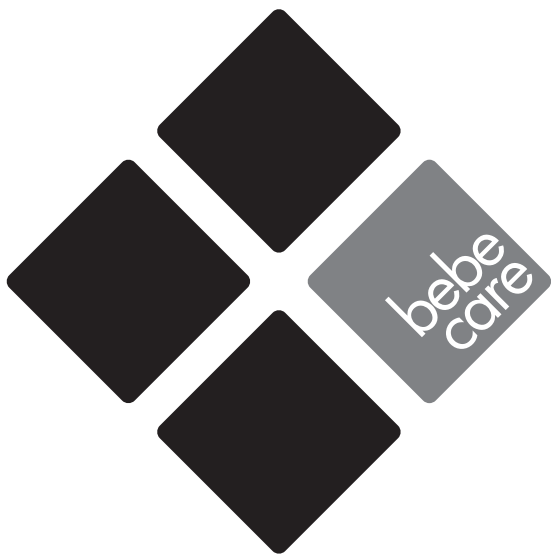

Distributed in Australia by CNP Brands
82 Maribyrnong Street, Footscray, VIC, 3011
Customer Service 1300 667 137

W: www.cnpbrands.com.au
E: info@cnpbrands.com.au
F: www.facebook.com/CNPBrands
I: [@cnp_baby](https://www.instagram.com/cnp_baby)

Distributed in New Zealand by Wainhouse
Distribution
2-6 Argyle St, Morningside,
PO Box 41-014,
St Lukes, Auckland, New Zealand
Customer Service: 0800 567 5000

E: helpline@wainhousedist.co.nz

