



MOSES BASKET STAND

MODEL #096553

IMPORTANT: RETAIN FOR FUTURE REFERENCE, READ CAREFULLY

WARNING

**USE ONLY ON A FIRM GROUND WHICH IS HORIZONTAL, LEVEL AND DRY.
DO NOT LET OTHER CHILDREN PLAY UNATTENDED NEAR THE CARRY
COT AND STAND.**

DO NOT USE IF ANY PART IS BROKEN, TORN OR MISSING.

**USE ONLY REPLACEMENT PARTS SUPPLIED OR APPROVED BY THE
MANUFACTURER.**

WHEN THE STAND IS NOT IN USE, IT MUST BE FOLDED OR PUT AWAY.

**FOLLOW INSTRUCTIONS CONCERNING CORRECT AND SAFE ASSEMBLY
AND USE OF THE PRODUCT.**

**ONLY USE A MOSES BASKET MANUFACTURED BY CNP BRANDS WITH
THIS STAND.**

Read all instructions before assembly and use of the moses basket stand.

Keep instructions for future use.

If you have any problems please contact our customers support:

Australia: CNP Brands, 20 Calarco Drive, Vic, 3030. Customer Service 1300 667 137 www.cnpbrands.com.au

New Zealand: Wainhouse Distribution, 2-6 Argyle St, Morningside, PO Box, 41-014, St Lukes, Auckland, New Zealand. Customer Service 0800 567 5000 helpline@wainhousedist.co.nz

Parts list



Moses Basket
Stand (Semi-
assembled)

x 1



Bolt
x 2



Nut
x 2



T bush
x 2



Allen key
x 1





MOSES BASKET STAND

MODEL #096553

Assembly Instructions



Stand installation

1. Separate the two leg panels as shown.
2. Carefully slide the inner leg (no badge) through the outer leg to form a cross frame as shown in the image.
3. Insert a T bush into the inner leg as shown.
4. Repeat for the other T bush.
5. Carefully align the two pivot holes.
6. Insert one of the Nuts into the pivot hole on the inner leg side.
7. Using the allen key screw the bolt into the nut in order to secure the legs together.
8. Repeat for the other leg.
9. Your Moses Basket stand is now ready for use.

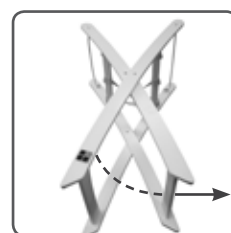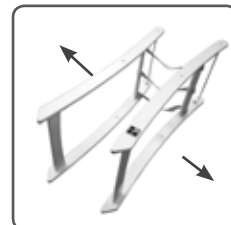

Using the Stand

1. Remove the basket
2. Push the legs together in order to fold the stand.
3. Spread the legs in order to unfold the stand.

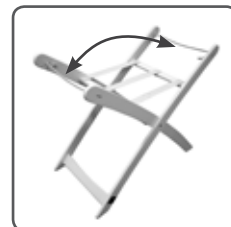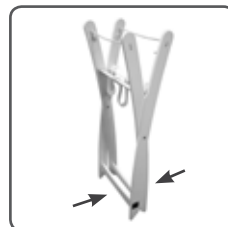

Cleaning

To ensure the long-lasting use of your Moses basket stand, wipe down with a damp cloth and use a mild soap solution if necessary. Do not use abrasive cleaners. Always store product in a clean dry place.

Maintenance

Check the stand regularly to ensure that locking devices and components are secure and working properly. Always check parts regularly for tightness of screws, nuts and other fasteners – tighten or replace if required. To maintain the safety of your rocker, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by CNP Brands.

If you have any difficulties in assembling the rocker, please contact our Service Department. In Australia, contact CNP Brands on 1300 667 137, in New Zealand contact Wainhouse Distribution on 0800 567 5000.