Bullbar Installation Guide

Part Number: BU19-3525, BU19-3677, BU19-3686

Fits:



FORD PX RANGER



This Bullbar will take approximately 3 hours to install

Tools required are

- Spanners and socket set.
- Pneumatic hacksaw.
- Screwdrivers
- Pliers and side cutters

It is recommended that the wiring for the lights and fog lights be performed by a qualified auto electrician due to the complexity of the wiring, as wiring accessories to the battery may cause alternator and ECU problems due to the alternator being controlled by the ECU.


Dobinsons BULLBARS should be installed by a qualified installer and it is the installer responsibility to ensure correct fitment.


Fully read and understand the instructions before beginning the installation




BU19-3525 & BU19-3677


Fitting Instructions 2 of 2

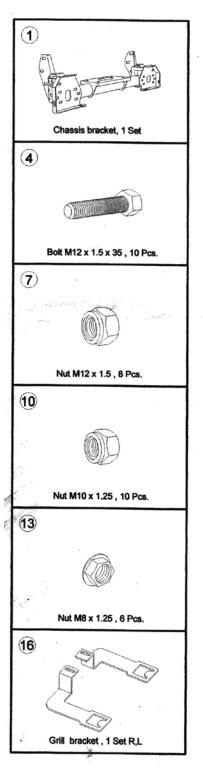

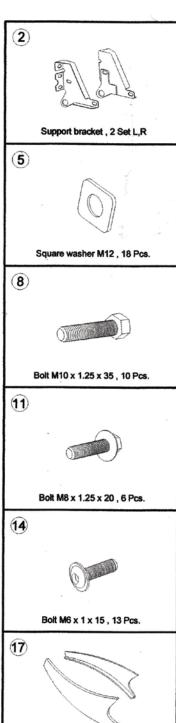

Seal Waterproof, 1 Set R,L

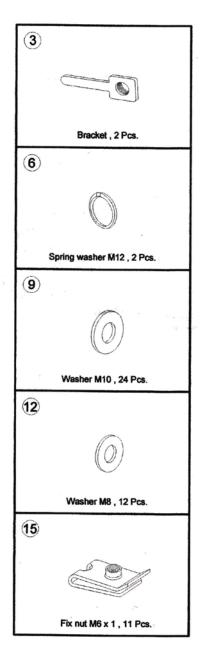

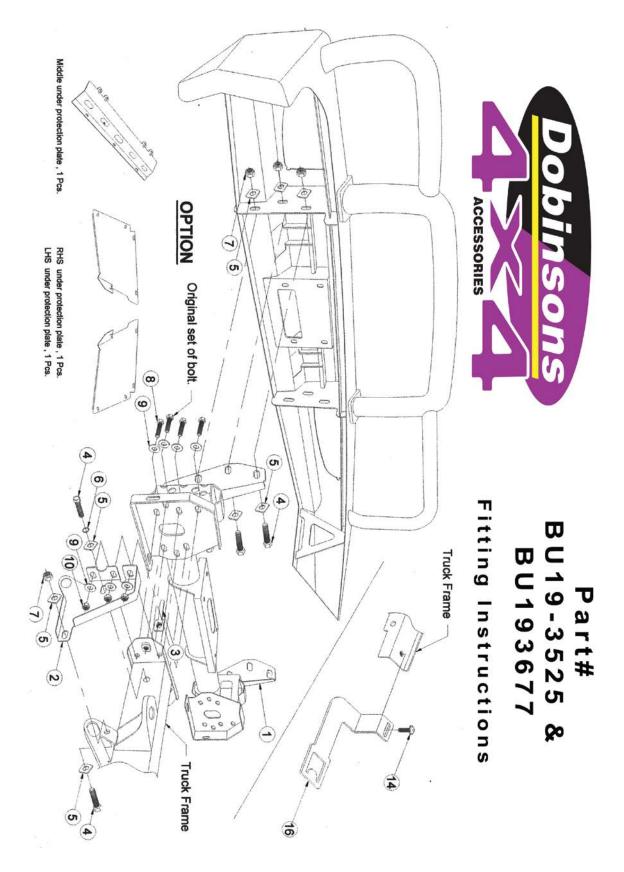


Fitting Guide

- 1. Remove the number plate.
- 2. Remove the grill top plastic plate by removing the 3 clips.



- 3. Pull the plate upwards slightly and undo the 2 clips underneath holding the top of the grill.
- 4. Reach in towards the front of the plate and unclip the tabs holding it to the top of the grill.

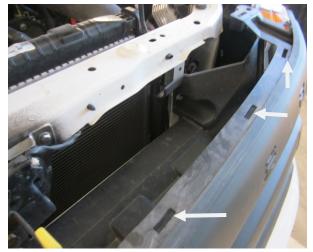

5. Remove the clip and bolt on each side of the grill holding the lower section of the grill and plastic shrouds.





7. Remove the 2 inner shroud bolts.



8. Reach in behind the grill and unclip the lower tabs and remove the grill.



9. Remove all wheel arch liner bolts attaching the wheel arch liner to the bumper, also remove the upper bumper bolt.



- 10. Remove all the lower bumper bolts.
- 11. Carefully unclip the bumper starting from the outside edges working towards the centre, and remove from vehicle.



12. Remove the plastic front panel and remove the steel bumper bar re-enforcement. Do not discard these bolts they are used to attach the bullbar bracket.



- 13. Remove the plastic shrouds, do not discard.
- 14. Remove the outer bumper lower brackets.



15. Remove the OE bash plate, and keep aside for re-fitment after the bullbar is fitted.






16. Remove the LH and RH plastic bumper support brackets by removing the 4 bolts and unclipping.




17. Install the New grill support brackets (item 16) onto the spare bolt hole on the inside near the bottom of the headlight, using the 2 x black dome head bolts supplied.



18. Install the LH and RH triangular bracket supports first on the outside of each chassis rails as per page 3 diagram. Insert the captive nut (item 3) through the front of the chassis and insert nuts and washers. The LH bracket can also be bolt at the back.

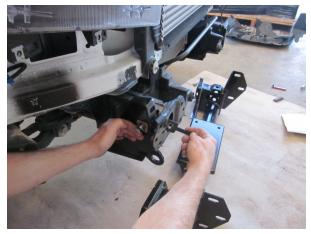

- 19. Install the bullbar mounting bracket. The 4 OE bolts removed in step 12 are re-used on the front of the bracket, and use the other nuts, bolts and washer supplied for the remaining holes.
- 20. Ensure the bracket is central to the vehicle and tighten all nuts and bolts.

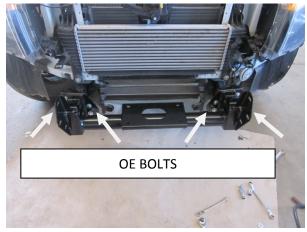

21. Trim the plastic shrouds removed in step 13 to clear the bullbar bracket. Also trim the section above the top of the bullbar bracket to clear the bar once fitted, and refit.



22. Reinstall the grill. The tabs on the grill go down from the top into the newly fitted brackets.



- 23. Zip tie the lower edges of the lower radiator shrouds behind the bullbar bracket to the sides to stop them moving.
- 24. Carefully un-wrap the bulbar taking care not to scratch it especially on the top loops.

 Reinstall the number plate to the bullbar as it is easier now. If installing driving lights to the bullbar it is easiest to install now.
- 25. If mounting a winch see steps 26 32.
- 26. See the Installation section of your Dobinsons 4x4 Winch manual for specific detailed fitting instructions. For a brief overview see the following steps.
- 27. Test fit your winch to the mounting bracket and do up loosely with the clutch handle on the left hand side of the vehicle.
- 28. This may require the clutch handle and gearbox housing to be rotated forward one or 2 bolt holes to allow easy access through the bulbar holes. See instructions in winch user manual.
- 29. Determine where the winch control box will be located and mount the control box. See instructions in winch user manual for control box mounting options. If mounting to the top of the bullbar using the supplied bracket, check clearance of control box to grill and also check where the wires will route as if the wires are passing through the holes in the top of the bullbar the control box may not be able to be wired until the bullbar has been fitted as below.
- 30. Wire the winch up as per the winch instruction manual and bolt the winch to the mounting bracket, ensure the mounting bolts are not too long and tighten correctly. Route the wires and connect to battery and also route the breather hose.
- 31. Unwind some cable from the winch, and pass the cable through the fairlead hole in the bullbar and through the roller fairlead. This may require removing a circlip from the

- fairlead and re installing once the cable is passed through.
- 32. Install the roller fairlead into the bulbar.
- 33. Check the poly bulbar over riders, fog light and top loop bolts are tight (Do not over tighten the stainless steel loop mounting bolts. Do not over tighten the poly bullbar over riders as they will pull the over riders out of shape).
- 34. Install the rubber under light panels to the top of the bullbar and tighten. These may need slight adjustment once the bullbar is fitted.
- 35. With help, fit the bulbar into position and install nuts and bolts supplied.



- 36. Align the bar with the vehicle into its correct position, this will leave about a 10-15mm gap on each side between the bulbar and bottom of the quarter panel, to allow for movement between cab and chassis.
- 37. Once you are happy with the alignment tighten the nuts and bolts on each side.
- 38. Once happy with the alignment of the bullbar drill 2 x 8mm pinning holes on each side of the bullbar drilling through both the mounting bracket mounting plate and bullbar mounting plate. Fix with 8mm bolts and nyloc nuts to keep the bullbar in its position. This is easier by drilling from the inside.






- 39. Wire up the lights. Using a multimeter or test light first locate the earth wire, parker positive and indicator positive wires from the wiring on the back of the original vehicle lights on each side.
- 40. Unclip the wiring from the indicator/parker lights. Check that the wiring will be long enough to reach the new bullbar indicator/parker lights and extend if required. Using the diagram at the end of this manual, join the corresponding wires to original vehicle wires located in the previous step. The wires can be joined by either using good quality snap lock crimp connectors or by soldering. Ensure the connection is secure and is sufficiently insulated.
- 41. If fitting a bullbar with fog lights, the fog lights can be connected using the original vehicle fog light wires if fitted. If required, cut the old fog light wiring plugs off and cut the new fog light wiring plugs and join. If the vehicle is not fitted with OEM fog lights the wiring loom supplied can be used. Follow the wiring diagram at the end of this manual. NOTE: It is extremely important that all earth wires are attached to the body end of the battery earth cable or to the vehicle chassis NOT the negative terminal of the battery as this can affect the vehicle charging system.
- 42. Fit the under bar protection kit now with the bolts supplied. Fit the front centre section first. The original bash plate can then be refitted. The front of these bolt holes align with

the rear of the new bullbar bash plate and bolt together using the supplied bolts. Install the 2 outer wing bash plates by reaching down the rear behind the wheel arch liner.



- 43. Trim the wheel arch mud guard liners level with the bottom under protection kit plates. The captive nuts and bolts supplied can be used to attach the wheel arch liners to the rear of the bullbar.
- 44. Refit the number plate and check over all items removed during installation.
- 45. IMPORTANT NOTES: It is important to inform the customer that headlight adjustment may also be required due to the change in ride height. It is also important to inform the customer that there will be a change in vehicle handling characteristics. It is also important to note that due to their nature fog lights are required to provide a yellow light to allow clear fog vision. For this reason Dobinsons bullbars utilise a Halogen bulb. Halogen bulbs generate a considerable amount of heat to achieve the yellow colour and this causes the air inside the fog light lens to expand and contract. For this reason the fog light assembly cannot be sealed and has a small breather on the back. In some cases this may cause condensation to form inside the fog light. The customer may choose to seal the lens of the fog light but must not seal the rear breather.



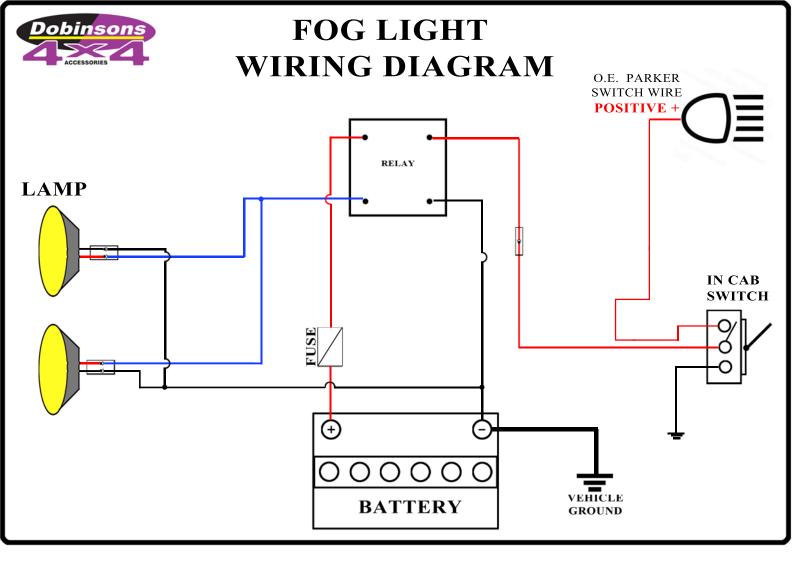

CHECK THE PARKER/INDICATOR WIRING LIGHT CONFIGURATION AND USE THE CORRECT WIRING DIAGRAM AS SEEN BELOW

FROM LIGHT AND CONNECTOR


INDICATOR PARK LIGHT

YELLOW
INDICATOR
CIRCUIT

VEHICLE
GROUND

TYPE 1 - YELLOW, BLACK WHITE

TYPE 2 - YELLOW, WHITE, BROWN FROM LIGHT BLACK, WHITE, RED FROM CONNECTOR

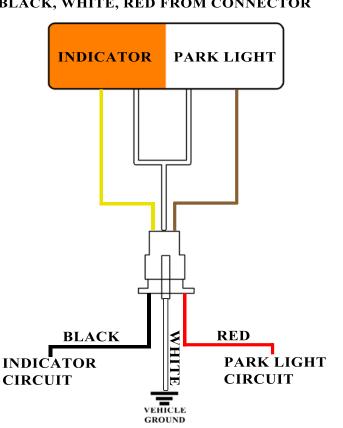

Customer Copy: Bullbar Care Instructions

To ensure the surface finish quality it is recommended that the bullbar be washed and cleaned regularly to prevent build up of dirt and contaminants which when exposed to the elements can



degrade the surface finish. It is also recommended that the mounting fasteners on the bullbar be checked after 1000km's. Winch servicing and care should also be carried out as per the winch instruction manual.

Stainless Loop Deluxe Bullbar Loop Care and Maintenance

(Customers with Stainless Loop Deluxe Models Only)

The top loops on your Dobinsons Stainless Loop Deluxe steel bullbar are manufactured from high quality 304 grade stainless steel. Once formed and welded it is highly polished to provide a high gloss finish. Whilst the material is a high quality stainless steel, like any other exterior polished surface, care and some maintenance is required to ensure the surface finish quality.

It is recommended that the stainless loops be kept as clean as possible and is thoroughly washed and dried regularly to prevent build up of dust and contaminants. This is especially important in coastal and high dust areas. The loops can simply be cleaned with most regular car cleaning items like a soft sponge, car wash and a chamois, avoid strong cleaning chemicals. Like many other highly polished exterior metals, over extended periods of time and heavy weathering can cause some staining of the surface may occur. If this occurs the surface can be simply polished using the following methods to remove the stains and restore the high gloss surface using simple tools and cheap readily available polishing items.

Tools Required:

- Electric buffer or Electric drill (an electric/cordless drill is generally more convenient).
- Polishing compound This can be supplied by Dobinsons Spring and Suspension. Please contact head office
 on the details below for polish, as a specific type is used.
- Soft finishing type buffing wheel The buffing wheel should be a soft, finishing type/Calico loose leaf style to allow the surface to be polished to a high gloss without further marking the surface. The 2 types of discs shown below are readily available from most hardware stores (Australian customers Bunnings etc). The brand below is Josco, and if purchasing a twin pack ensure that only the finishing buff is used and not the cutting buff. **DO NOT USE METAL OR HARSH BUFFING PADS.**



Method

- 1. The stainless loops may be removed from the bullbar if this makes it easier to work on, however if using a cordless drill this is not a necessity. If removing the loops, do not over tighten the loop retaining bolts when re fitting.
- 2. Ensure the loops are first completely clean and dry.
- 3. Fit the polishing buff wheel to the drill or buffing tool –take note of the maximum wheel speed and rotation direction.
- 4. It is recommended to follow specific instructions on the packaging of the buffing wheel for best results. However if no instructions are provided the following guidelines can be used:
 - A). Carefully dress the buff wheel with the compound across the rotating wheel for a few seconds, taking care not o apply too much compound, it is better to apply a little compound more frequently than to overdress the buff.



B). Gently buff the work area with the buffing wheel and with light pressure move back and forth across the job.



- C). After polishing use a soft, clean, dry rag to clean the surface and inspect in the light for an even finish.
- D). Once complete clean thoroughly again with a sponge and warm water.

Dobinsons Spring and Suspension www.dobinsonsprings.com