


Part Code: TPA-006-BK

Date: 010919

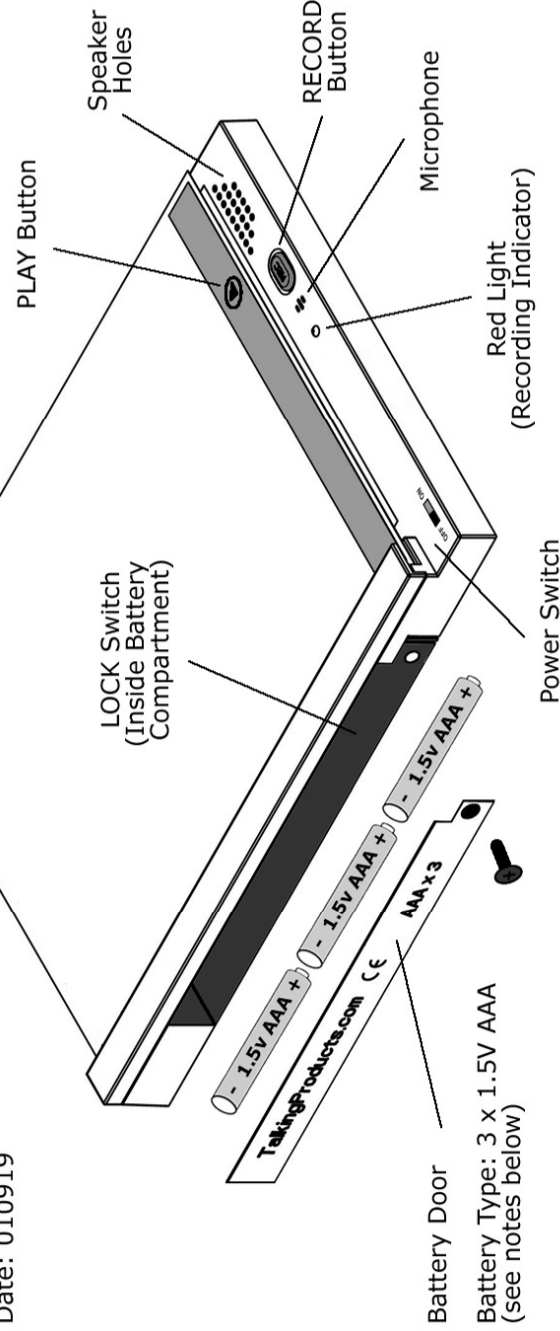

Battery Door

Battery Type: 3 x 1.5V AAA
(see notes below)

Installing Batteries

Requires 3 x 1.5V AAA Batteries, (not included). Alkaline batteries are recommended.

Slide the power switch to the OFF position. Use a screwdriver to remove the screw from the battery compartment. Insert the batteries according to the polarity. Refit the cover and the screw. Slide the power switch to the ON position.

NOTES:

Use only new batteries of the stated size and type. **DO NOT** mix old and new batteries or different types of batteries. Never let children play with batteries. To avoid risk of explosion, do not recharge, heat or dispose of batteries in a fire.

How to RECORD and PLAYBACK a message

The total recording time is 6 minutes, (360 seconds). You can record a single 18 second voice message on each of the 20 pages. Each page is restricted to 18 seconds recording.

1. Slide the power switch to the ON position.
2. Press and hold the RECORD button and then press and hold the PLAY button on one of the pages by squeezing it between your thumb and forefinger. The red light will illuminate to indicate recording. Please note that the red light will only illuminate when recording is in progress.
3. Ensure that both buttons remain pressed so that the red light remains on as you record. Speak clearly approximately 15 cm from the Microphone. When you have finished recording, release both buttons.
4. Each time the PLAY button is pressed, your message will begin to playback. You can pause the playback at any time by pressing the PLAY button and then press it again to continue.

NOTES:

Each message can be re-recorded as many times as you wish by repeating the steps above. New recorded messages on the same page will REPLACE the old ones. You cannot record new messages until you have played back the old messages. When you have recorded for 18 seconds on a single page, the recording will automatically stop and the red light will turn off.

Message Protection

If you wish to protect your recorded messages from accidental erasure, locate the small switch hidden inside the battery compartment. To disable recording, move the switch to the left position.

Due to small parts, this product is not suitable for children under 3 years.

For more details on the other products in our range, please visit our web site.

www.TalkingProducts.com

