18 Inch Doll Wooden Bakery Play Set

Assembly & User Instructions - Please keep for future reference

34147





Important

Age: 3 years +



Safety Information

Important - Please read these instructions fully before assembly or use

General safety



• Warning! Not suitable for children under 36 months due to small parts - choking hazard.




• Caution! Product should be used only for purpose for which it was designed. Children should not stand or climb on product.

- Toy to be assembled by a responsible adult.
- Remove all packaging before giving to your child.
- Young children in play are unaware of potential hazards and dangers, therefore responsible adult supervision is essential.

Parts

Please check you have all the parts and fittings listed below

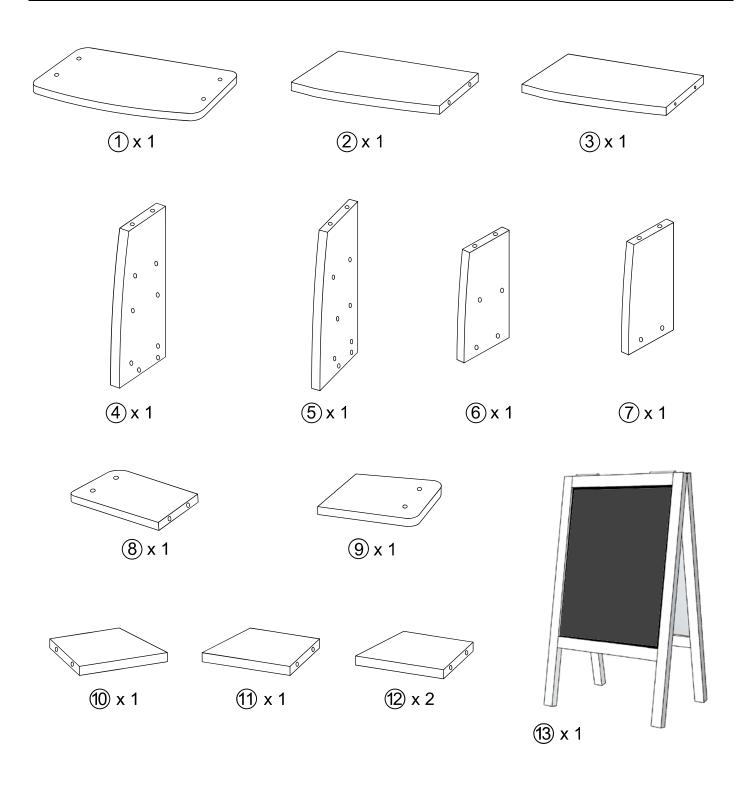


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


| A | <i>\{\text{mmmmm}}</i> | \Vi\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ | B | x 12 | |
|---|------------------------|--|---|------|--|
| | x 4 | Spare Plastic Plugs | | | |


Assembly Instructions

Step 1

 Step 2

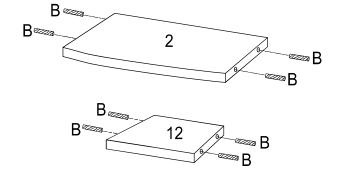





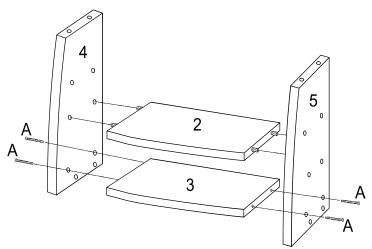


Step 3

Step 4

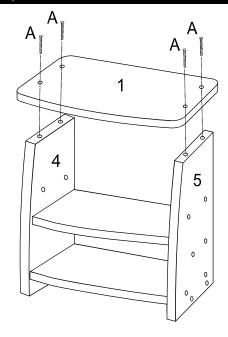

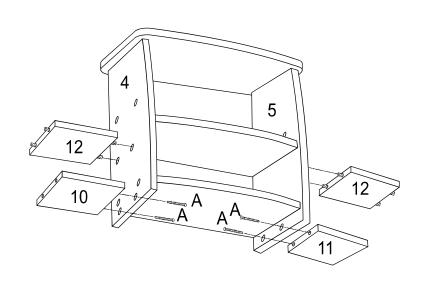


Step 5

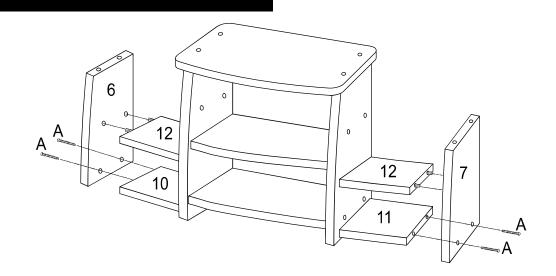


Assembly Instructions

Step 6

Step 7

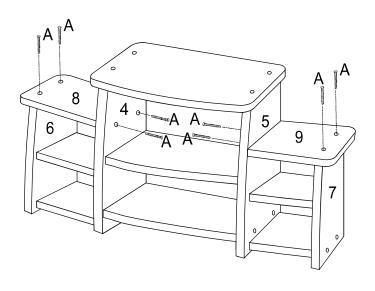

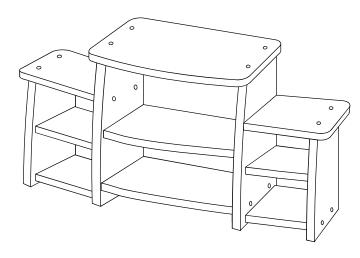

Accessories included



Care and Maintenance

General

- Wipe clean with a damp cloth only
- Important: Check the product and fixings regularly to ensure no parts are damaged, lose or broke.
- The product should be regularly inspected by an adult for broken or damaged parts.

Warning! Not suitable for children under 36 months. Choking hazard. Small parts.



Playtime by Eimmie 20801 Miles Road UNIT D North Randall, OH 44128

Made in China

CUSTOMER SERVICE

Missing or damaged parts?
Please contact us at 1-855-346-6436 or e-mail info@playtimebyeimmie.com